

  
**EVOFOX**  
**DECK**  
Smartphone  
Gamepad



# EVOFOX DECK Smartphone Gamepad User Guide

[Home](#) » [EVOFOX](#) » EVOFOX DECK Smartphone Gamepad User Guide 

## Contents

 
- 1 [EVOFOX DECK Smartphone Gamepad](#)
- 2 [PRODUCT OVERVIEW](#)
- 3 [IN THE BOX](#)
- 4 [ANDROID HID MODE](#)
- 5 [WINDOWS PC MODE](#)
- 6 [KEY MAP MODE \(Only for Android\)](#)
- 7 [TROUBLESHOOTING](#)
- 8 [SPECIFICATIONS](#)
- 9 [Documents / Resources](#)
  - 9.1 [References](#)



## EVOFOX DECK Smartphone Gamepad



## PRODUCT OVERVIEW

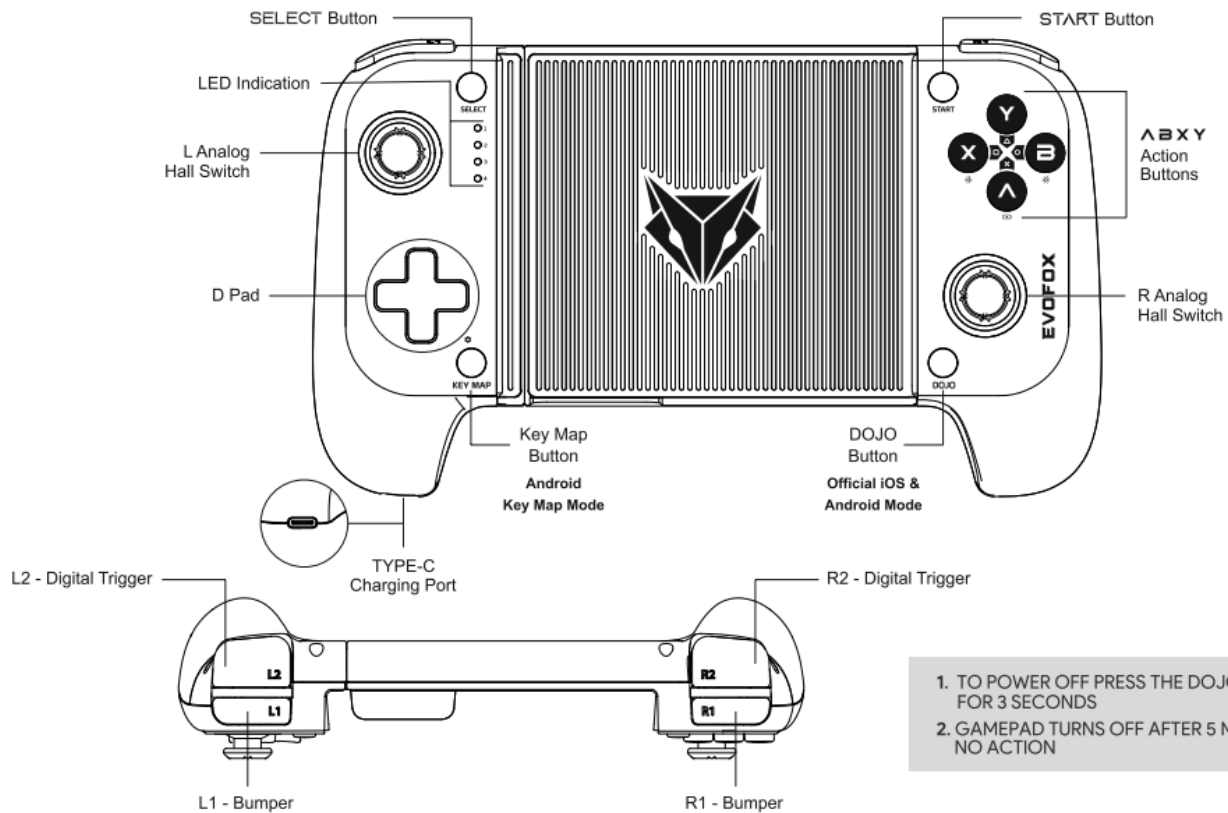

## IN THE BOX



Wireless Gamepad



Charging Cable



 
Docs



Travel Pouch


## CHARGING THE GAMEPAD

### ENSURE THE GAMEPAD IS FULLY CHARGED BEFORE FIRST USE

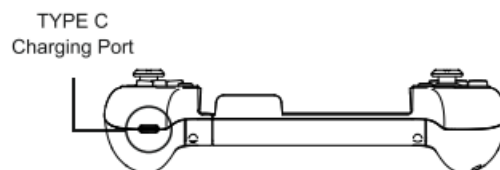


PRESS KEY MAP +   
FOR BATTERY LEVELS

 Plug-in one end of the provided USB charging cable into a Power Adapter (Not Included ) and other end to the Gamepad. Plug the adapter to Power Socket and Turn On the Power.

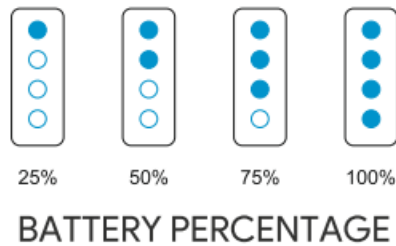

### OFFICIAL IPHONE, IPAD AND APPLE TV MODE

 1. Press the DOJO button for 2 sec.
2. Open Bluetooth Settings on your device.
3. Connect to "DUALSHOCK 4 Wireless Controller".

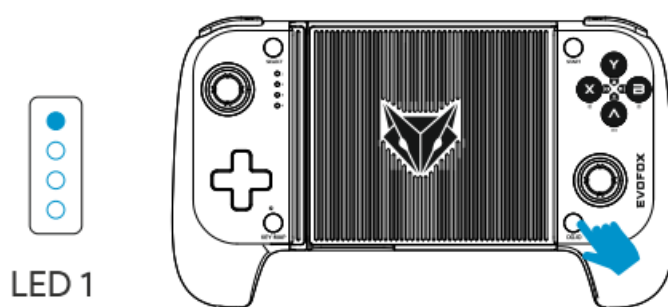

Download the official  
EvoFox DOJO App



iOS / iPadOS

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD TO THE LAST PAIRED MODE

### OFFICIAL ANDROID MODE

1. Press the DOJO button for 2 sec.
2. Open Bluetooth Settings on your device.
3. Connect to "Wireless Controller".



 
Download the official  
EvoFox DOJO App



Android

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD TO THE LAST PAIRED MODE

## ANDROID HID MODE

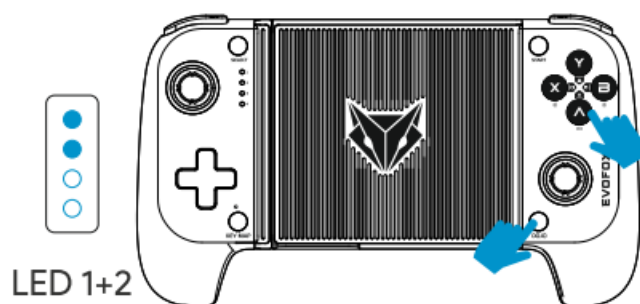


1. Press  $\text{A} + \text{DOJO}$  button for 2 sec.
2. Open Bluetooth Settings on your device.
3. Scan the devices and pair with "EvoFox Deck".

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

## WINDOWS PC MODE

 
1. Press  $\text{X} + \text{DOJO}$  button for 2 sec.
2. Open Bluetooth Settings on your device.
3. Scan the devices and pair with "Xbox Wireless Controller".

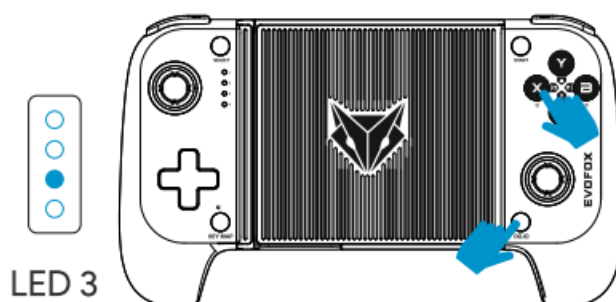

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

## KEY MAP MODE (Only for Android)

 Set up your gamepad to play games that do not have Native Controller Support.

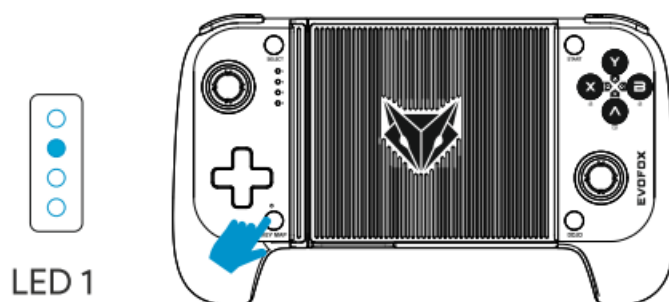

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD TO THE LAST PAIRED MODE

## HOW TO PROGRAM YOUR CONTROLLER FOR KEY MAP MODE (Android Only)

 
 
Ready to Conquer PUBG/BGMI, Free Fire, Genshin, or Mobile Legends?

Follow this Guide to program your EvoFox Deck. PUBG/BGMI Programming Steps:

1. Download ShootingPlusV3 App from Google Play Store (or Scan QR Code on the Side).
2. To Pair the EvoFox Deck over Bluetooth press KEY MAP button
  - Till the LED 2 starts Blinking Fast.
3. Go to Bluetooth Settings on your phone and connect to EvoFox Deck.
4. Open the ShootingPlus V3 app and give the permissions as required.
5. ShootingPlusV3 includes Pre-mapped Controller Presets in the App for various games. For eg: Free Fire, Minecraft, Genshin Impact, Mobile Legends, NBA 2K and more.
6. Open PUBG/BGMI App while ShootingPlusV3 is running in the background.
  - Navigate to Settings – Customize Buttons – Customize.
7. Click the ShootingPlusV3 “Icon ‘fa ” on the Screen to reveal all the Buttons available to map according to your in-game controls.



8. Now press “Select” Button (Top Area) – More Presets
  - PUBG Mobile – Download Preset.
  - This will add all the buttons which are available to map on your Screen.
9. Press the ShootingPlusV3 “Icon\,” again to see all the available buttons on your Screen, drag and move keys or press desired Buttons on gamepad to Map Controls according to your preference.
10. Press Select Button on Gamepad to view all the keys assigned to the touch points.
11. Press Start Button on Gamepad to adjust keys on the touch points.
12. Always remember to press the “Save” Button (Top Area) to save the changes you have made.

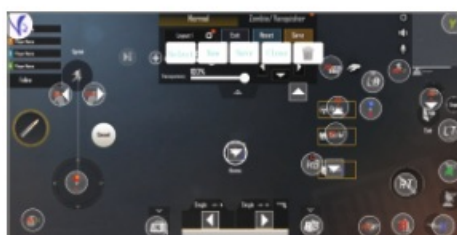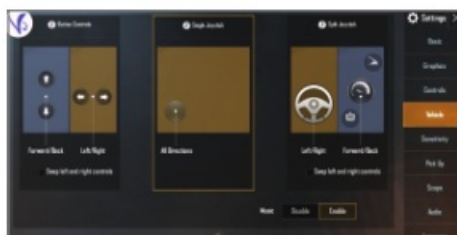


You can program any other games such as Free Fire and more by following steps similar to above.

- Select your desired Game in steps 5 and 6.
- Follow Steps 1 to 4 and 7 to 12 for programming any other Game.


## RESET THE GAMEPAD

 In the unlikely event the Gamepad is not responsive, use a pin to press the RESET button located at the back.

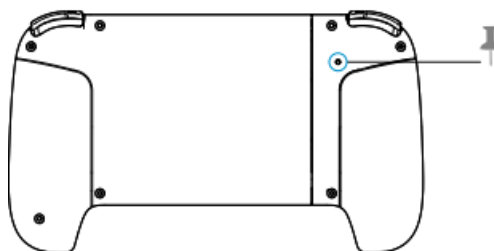



## BACKLIGHT CONTROLS

 You can control the backlight for the Analog Joysticks and the Action Buttons.

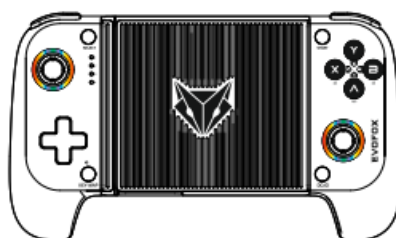

 Press **KEY MAP + X** to turn off or switch LED colours of both the Analog Joysticks.

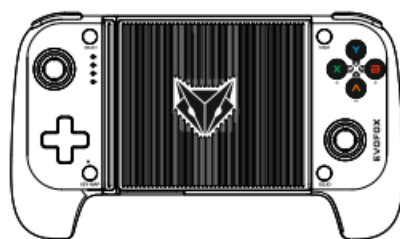

Press **KEY MAP +**  to toggle the LED for the Action Buttons.

## TROUBLESHOOTING

### Why is this Gamepad not being detected by my device?

- Make sure it is charged.
- Make sure it is in the correct pairing mode.
- Make sure it is not connected to any other device.
- You may need to unpair and repair it.

### Why is the Gamepad disconnecting?

The Gamepads needs to be charged.

### Why is the Gamepad not working in all my games on Android or iOS?

Ensure the game has support of Gamepads.

### Facing any trouble with the connection?

The gamepad may require you to unpair and reset it for further use.

## SPECIFICATIONS

<b>Working Platforms</b> : iPhone, iPad, Android, PS4 PC	<b>Connection Types</b> : Bluetooth v5.1
<b>Working Modes</b> : iOS, Android, Ps4, PC, Key Map (Android)	<b>Charging Time</b> : ~ 2-2.5 hrs
	<b>Working Distance</b> : 10 Feet
<b>Play Time</b> : ~ 8 hrs	<b>Net weight</b> : 220g

## WARRANTY STATEMENT

Amkette EvoFox Deck Smartphone Gamepad is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discrete under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

## CUSTOMER CARE SERVICE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020

- 1800-11-9090 (Toll Free) (9:30 AM – 6:00 PM)
- +91 9312691448 (9:30 AM – 6:00 PM)
- [techsupport@amkette.in](mailto:techsupport@amkette.in)

FOR HASSLE FREE SERVICE REGISTER YOUR PRODUCT AT [WWW.AMKETTE.COM/REGISTER](http://WWW.AMKETTE.COM/REGISTER)

## Documents / Resources



[EVOFOX DECK Smartphone Gamepad](#) [pdf] User Guide  
DECK Smartphone Gamepad, DECK, Smartphone Gamepad, Gamepad

## References

- [User Manual](#)

### Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.