



EVOFOX Elite X Wireless Controller User Guide

[Home](#) » [EVOFOX](#) » EVOFOX Elite X Wireless Controller User Guide 

Contents


- [1 EVOFOX Elite X Wireless Controller](#)
- [2 Product Overview](#)
- [3 IN THE BOX](#)
- [4 CHARGING THE GAMEPAD](#)
- [5 SETUP THE GAMEPAD](#)
- [6 Documents / Resources](#)



EVOFOX Elite X Wireless Controller



Product Overview

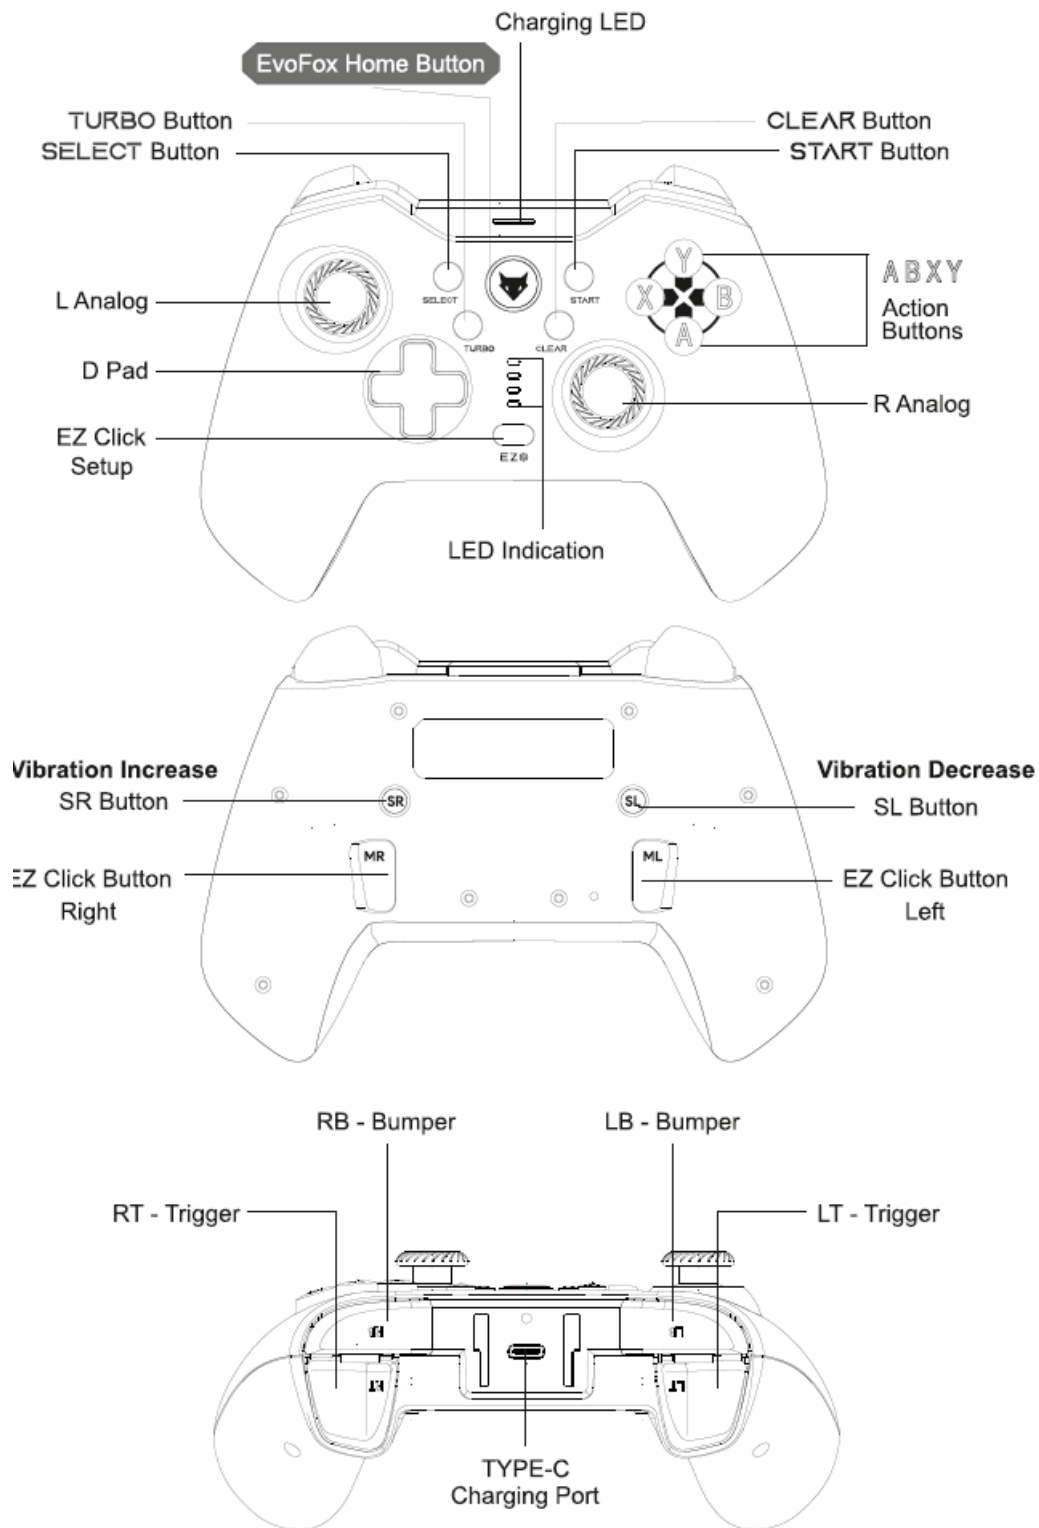

POWER ON

PRESS THE EVOFOX BUTTON



FIRST USE


THE FIRST USE MAY REQUIRE TO RESET THE GAMEPAD

POWER OFF


1. SLEEP AFTER 60 SEC OF DISCONNECTION.
2. TURNS OFF AFTER 5 MIN OF NO ACTION.



IN THE BOX

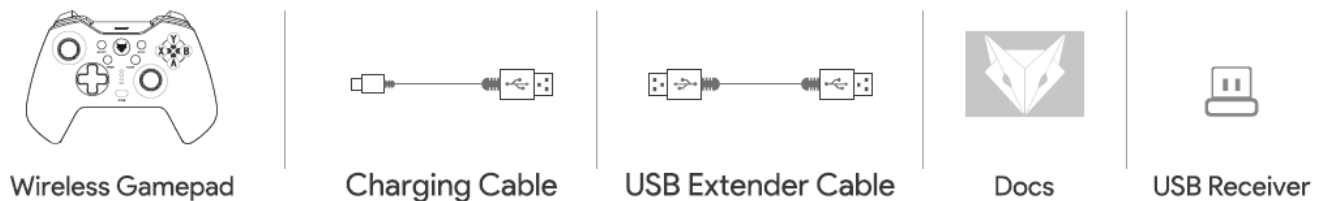

CHARGING THE GAMEPAD

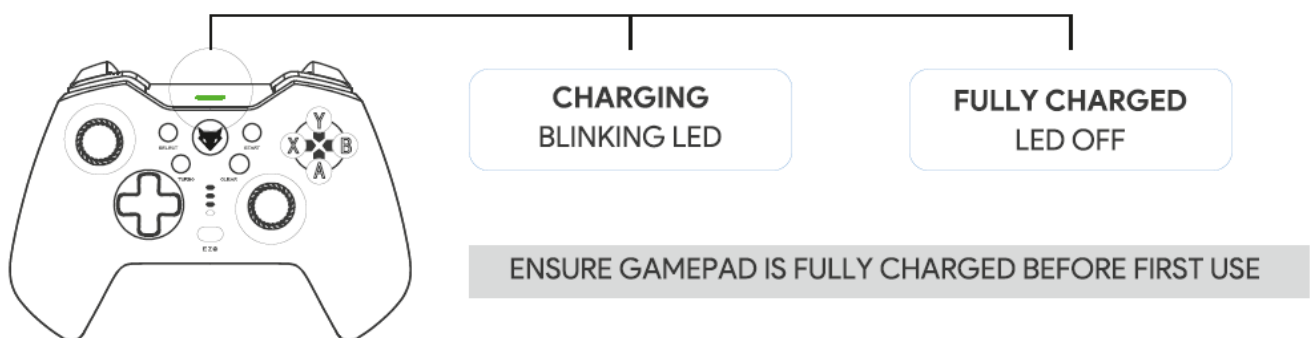


SETUP THE GAMEPAD

COMPATIBILITY – SUPPORTED WINDOWS VERSION -> Windows 7, 8, 10, 11

1. Connect the USB Receiver in a free USB port on your PC
2. Press the EvoFox button to turn the Gamepad ON

GAMEPAD ALWAYS STARTS IN X-INPUT MODE

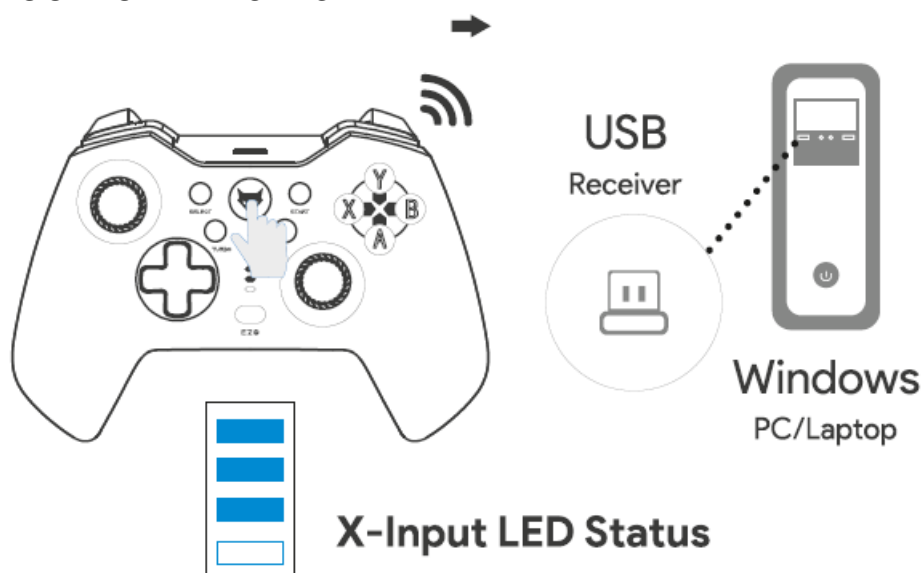




X-Input LED Status



D-Input LED Status



+

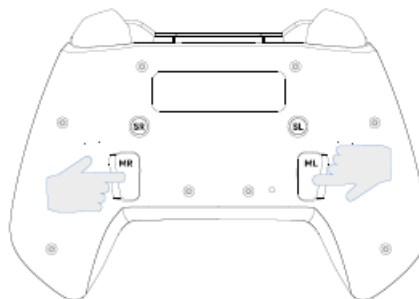


Blinking





Once Connected

Press SR Button
to Increase
Vibration

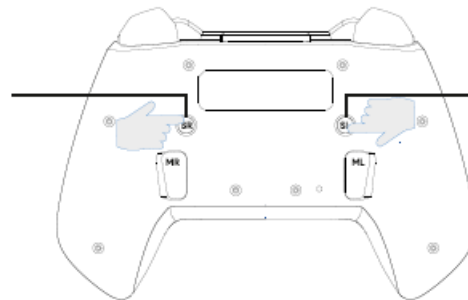

Press SL Button
to Decrease
Vibration

LED STATUS



**High
Vibration**



**Medium
Vibration**




**Low
Vibration**



**No
Vibration**

THERE ARE 4 LEVELS TO ADJUST THE VIBRATION



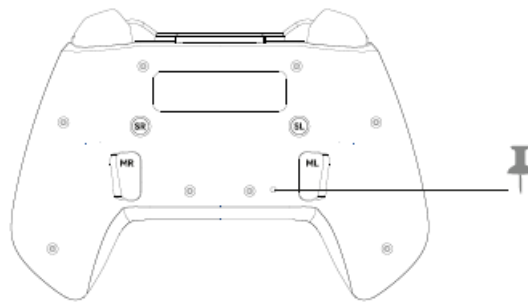

Documents / Resources



[EVOFOX Elite X Wireless Controller](#) [pdf] User Guide
Elite X Wireless Controller, Elite X, Wireless Controller, Controller