

Contents [[hide](#)]

- [1 EXCALIBUR 80 Series 4 Button NTZE Transmitter](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



EXCALIBUR 80 Series 4 Button NTZE Transmitter



Specifications

- Model: 4-BUTTON |1-WAY
- Functions: Lock, Unlock, Remote Start/Stop, Trunk Release, Panic, Lock w/o Arm, Silent Lock/Unlock, Sensor Bypass

- Additional Feature: Emergency Alarm Override
- Manufacturer Website: www.caralarm.com

Product Usage Instructions

Common Functions:

- **Lock:** Tap to arm the alarm (if equipped).
- **Unlock:** Tap to disarm the alarm (if equipped).
- **Remote Start/Stop:** Tap within 5 seconds to start or stop the engine. Hold for 2 seconds for Run Time Extend.
- **Trunk Release:** Hold for 2 seconds to release the trunk. The system will also disarm/unlock by default.
- **Panic:** Hold for 2 seconds to trigger the panic alarm or arm the alarm if equipped.
- **Lock w/o Arm:** Tap within 5 seconds to lock without arming the alarm. Useful when the alarm is not desired.
- **Silent Lock/Unlock:** Tap within 5 seconds to arm the alarm silently (if equipped).
- **Sensor Bypass:** Tap within 5 seconds to temporarily ignore sensors until the alarm is armed again.

Emergency Alarm Override:








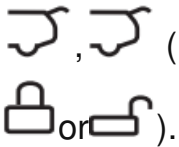

1. Access your programming/valet button located on the antenna or the dashboard.
2. Enter the vehicle – the alarm will sound.
3. Turn the ignition ON without starting the engine.
4. Enter your override code by tapping the programming/valet button within 10 seconds.
5. If correct, the alarm will pause and disarm after entering the correct code.

Replacing Remote Battery:

- Excalibur 1-way remote batteries last up to 2 years.
- Note remote part # and battery type on the back of the remote.
- Pop open the remote using the notch near the keyring to replace the battery.

QUICK USER GUIDE 4-BUTTON | 1-WAY

COMMON / GOOD-TO-KNOW FUNCTIONS

Function	Button(s)	Action	More Info
Lock		Tap	Will arm the alarm if equipped..
Unlock		Tap	Will disarm the alarm if equipped.
Remote Start / Stop		Tap within 5 seconds.	System may also be configured for: 1 Tap or Hold for 2 sec.
Run Time Extend		Tap	Restarts engine run time. Can only be done once per start cycle.
Trunk Release		Hold for 2 sec.	By default, the system will also disarm/ unlock.
Panic		Hold for 2 sec.	Will arm alarm if equipped
Lock w/o Arm		Tap within 5 seconds.	Anytime the alarm is undesired. Not all models.
Silent Lock or Unlock		Tap within 5 seconds.	Will arm alarm if equipped.
Sensor Bypass		Tap within 5 seconds.s	The alarm will ignore sensors until you arm the alarm again.





Tip:

- TIP: Tap commands are sent when the button is released. 'Hold' commands transmit automatically after holding for 2 seconds.

REGISTER YOUR SYSTEM AT www.CARALARM.com

ACTIVATE YOUR WARRANTY & LEARN MORE ABOUT YOUR SYSTEM

MODEL / SERIAL


-  caralarm.com
-  /c/omegard
-  /omegard
-  /omegaresearch



EMERGENCY ALARM OVERRIDE

IMPORTANT: You will need to access your programming/valet button. It is built into your antenna or mounted in the dash. If you are unsure, contact your installer or Omega customer support. There is no way to disarm the alarm without this or a functioning remote.

YOUR ANTENNA

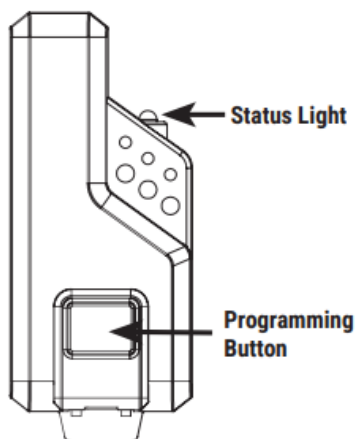

STEPS

1. Enter the vehicle, and the alarm will sound.

TIME RESTRICTION: Perform the following steps within 10 seconds

2. Turn the ignition ON with the key (do not start the engine).

3. Enter your override code by tapping the programming/valet button.

- The default code is 01. It can be set for 01-99 (see feature programming guide or use LINKR-MOBILE app – additional parts required).
- If your override code is 11-99, each digit is entered in 2 steps of 1-9 presses.
- Enter the 1st digit. If correct, the alarm will pause, and the siren/horn will chirp once.
- Enter the 2nd digit. If correct, the alarm will disarm.

REPLACING YOUR 1-WAY REMOTE BATTERY – SCAN THE QR CODE FOR DETAILS, RECOMMENDATIONS, & VIDEOS



WARRANTY GUIDES VIDEOS SUPPORT

- Excalibur 1-way remote batteries typically last up to 2 years without needing replacement. This can vary greatly based on usage & battery quality.
- Note the remote part # and battery type listed on the back of your remote.
- Most remotes simply pop apart. Look for the notch near the keyring.

APP CONTROL, PROGRAMMING, SHARING!

- USES BLUETOOTH – ALWAYS WORKS!
- NO SUBSCRIPTION!
- CONTROL ALWAYS WORKS
- CONNECTS INLINE W/ ANTENNA
- SOLD SEPARATELY



LEARN MORE AT LinkrMobile.com

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

1. This device may not cause harmful interference &
2. This device must accept any interference that may be received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorised modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter
2. For portable operation, this device has been tested and meets FCC RF exposure guidelines. When used with an accessory that contains metal may not ensure compliance with FCC RF exposure guidelines.

- © 2025 Omega Research & Development Technology LLC
- QOM-1420-03_20250601

FAQs


Q: How do I register my system and activate the warranty?

A: You can register your system at www.caralarm.com to activate your warranty and learn more about your product.

Q: What should I do if I forget my override code?

A: If you forget your override code, contact your installer or Omega customer support for assistance. It is crucial for disarming the alarm in emergencies.

Documents / Resources

	EXCALIBUR 80 Series 4 Button NTZE Transmitter [pdf] User Guide ELVNTZE, ELVNTZE ntze, 80 Series 4 Button NTZE Transmitter, 80 Series, 4 Button NTZE Transmitter, NTZE Transmitter, Transmitter
---	---

References

- [User Manual](#)

EXCALIBUR

4 Button NTZE Transmitter, 80 Series, 80 Series 4 Button NTZE Transmitter, ELVNTZE, ELVNTZE ntze, EXCALIBUR, NTZE Transmitter, Transmitter

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.