



Home » EXCELSOIR POWER » EXCELSOIR POWER PS Series Power Inverters User Manual 📆



#### **EXCELSOIR POWER PS Series Power Inverters User Manual**



PS1000

**PS2000** 

**PS3000** 

PSX2000

PSX3000

**PS5000** 



#### www.excelsiorpower.com.au

The Excelsior Power PS series of inverters have been carefully designed and manufactured to provide you years of reliable operation.

Please read this manual thoroughly before connecting and operating your inverter. Please keep the manual for future reference, as it contains information that you may require in the correct connection, operation and troubleshooting of this inverter.

### Contents [hide]

- 1 Excelsior Power Inverters
- 2 Getting Started
- 3 TROUBLESHOOTING
- 4 SPECIFICATIONS
- 5 Documents / Resources
  - 5.1 References

#### **Excelsior Power Inverters**

Excelsior Power have been involved in the design, manufacture and importation of power conversion technology for over 25 years. The PS series of power inverters are highly advanced, microprocessor controlled units that provide the highest surge capabilities, so they can start difficult loads, such as TV's, Micro- waves, Refrigeration units and even Air Conditioners.

Unlike many inverters, which can damage 240 Vac motors, such as those found in refrigerators, the PS series provide a Pure Sine Wave output, which is very clean and perfect for Mains operated equipment, so that motors and fridges don't overheat and fail prematurely. The PSX series also have a display on front to show battery voltage and load, which takes the guess work out of battery time and consumption.

They also achieve the highest efficiency (90%) plus) which means cooler running, higher reliability and longer running time!

Excelsior Power Inverters convert 12 or 24 volt Direct Current to 240 Volt, alternating current at 50 Hz.

#### Installation

When connecting the inverter to the battery, use the thickest wires available, keep the length as short as possible, 2 meters maximum length. To find the recommended minimal cable size for your inverter, please refer to the Specifications section at the back of this manual. To calculate the minimum battery battery size recommended for your

inverter in Amp/Hours, please see the Specifications section at the back of this manual.

Mount the inverter in a clean environment, that is free of dust, insects and moisture, Ensure that the inverter has enough space around it for ventilation, especially at the front and rear for the cooling fan.

# Connecting your inverter

- 1. Make sure the switch on the front of the unit is in the off position (0)
- 2. Connect the wires to the inverter input terminals at the rear of the unit. Make sure to match the negative (Black) terminal to the inverter with the wire that connects to the negative terminal on the battery.
- 3. Connect the positive (red) terminal on inverter connecting a wire to the positive terminal of the battery.
- 4. Make sure the connections are good and secure.

WARNING: Do not reverse connect polarity to battery, as this will damage inverter, and is not covered under warranty!

# **Getting Started**

When you turn on an appliance that operates using a motor, fluorescent lights, air conditioning, fridge and some electronic loads, it requires an initial surge of power to start. This surge of power can be many times the running, or continuous power rating of the appliance.

Fridges and Air conditioners can take many thousands of watts for the first second to start up.

A microwave can use up to double the rated cooking power, so an 800 Watt microwave can use up to 1600 Watts of electrical power.

To work out the current from your battery, divide the wattage of the appliance by the battery voltage; IE 100 watts / 12 volts = 8 Amps.

Although all Excelsior Inverters are electrically isolated and filtered to minimise signal

interference, some interference with your TV may be unavoidable, especially with weak signals. However, here are some suggestions that may improve reception.

- First, make sure the TV antenna produces a clear signal under normal operating conditions (normal grid power) Also make sure the antenna cables properly shielded and of good quality.
- 2. Try changing the position of the inverter, antenna cable and TV power cord.
- 3. Isolate the TV, it's power cord and antenna cable from the battery power by running an extension cord from the inverter to the TV.
- 4. Coil the TV power cord.
- 5. Coil the DC battery cables from the battery to the inverter.
- 6. Attach a 'Ferrite Data Line Filter' to the power cord.

#### Note:

Some inexpensive audio systems may produce a slight 'buzzing' sound when used from the inverter. This is caused by deficient filters in the audio system, The only solution to solve this problem is to use a sound system of a higher quality power supply.

#### Use of RCD's

RCD's may be used with the inverter, please ensure the earth connection of the front of the inverter is connected to the chassis of the vehicle or an earth stake.

## **TROUBLESHOOTING**

PROBLEM: Low or no Output Voltage..... REASON SOLUTION Poor contact with the \*Clean terminals thoroughly **Battery Terminals** Use of incorrect type of \*Use True RMS meter Voltmeter to test inverter PROBLEM: Overload LED stays on..... **REASON** SOLUTION **Battery voltage bellow** Recharge or replace battery 11 / 22 volts **Equipment being operated** \*Use a higher capacity Draws too much power inverter or do not use This equipment. Inverter is too hot \*Allow inverter to cool (Thermal shutdown mode) \*Check for adequate Ventilation \*Reduce the load on the Inverter to rated Continuous power PROBLEM: Works fine but wont start fridge..... **SOLUTION Battery low shutdown** \*Try restarting after

**REASON** 

When fridge starts

10 mins

\*Use thicker battery

Cable

\*Check battery

PROBLEM: TV Interference.....

SYMPTON

**Electrical Interference** 

From inverter

SOLUTION

\*Add a ferrite data line filter onto the TV power

Cord

\*Twist input cables together 3 times every meter \*Keep the inverter as far as

Possible from TV
\*Use better antenna

PROBLEM: Low Battery Alarm on All The Time.....

REASON SOLUTION

Battery voltage bellow \*Keep input voltage above

11 / 22 volts 11 / 22 volts

Poor or weak battery

condition

\*Recharge or replace battery

Inadequate power being Delivered to the inverter

\*Use thicker cable

\*Keep cable length as short

Or excessive voltage drop as possible

PROBLEM: Appliance does not start.....

SYMPTOM SOLUTION

Appliance does not turn on \*Try turning inverter on

Then off, then on again
\*Appliance has higher start
Up surge than inverter

## **SPECIFICATIONS**

| MODEL NO.  | MAXIMUM<br>CONTINUOUS<br>POWER | SURGE NO LOAD<br>POWER CURRENT | MINIMUM<br>BATTERY<br>AMP/HOUR | INPUT<br>VOLTS | DIMENSIONS<br>H / W / Dmm | MASS<br>Kg | S CABLE<br>SIZE |
|------------|--------------------------------|--------------------------------|--------------------------------|----------------|---------------------------|------------|-----------------|
| PS300/12   | 300 WATT                       | 600 WATT 0.3A                  | 30                             | 10-15          | 62*105*185                | 1.0        | 6MM SQ          |
| PS300/24   | 300 WATT                       | 600 WATT 0.3A                  | 30                             | 20-30          | 62*105*185                | 1.0        | 4MM SQ          |
| PS1000/12  | 1000 WATT                      | 2000 WATT 0.8A                 | 50                             | 10-15          | 78*180*296                | 2.8        | 16MM SQ         |
| PS1000/24  | 1000 WATT                      | 2000 WATT 0.5A                 | 30                             | 20-30          | 78*180*296                | 2.8        | 8MM SQ          |
| PS2000/12  | 2000 WATT                      | 4000 WATT 0.8A                 | 100                            | 10-15          | 78*180*396                | 4.0        | 25MM SQ         |
| PS2000/24  | 2000 WATT                      | 4000 WATT 0.5A                 | 50                             | 20-30          | 78*180*396                | 4.0        | 16MM SQ         |
| PSX2000/12 | 2000 WATT                      | 4000 WATT 0.8A                 | 100                            | 10-15          | 78*180*396                | 4.0        | 25MM SQ         |
| PSX2000/24 | 2000 WATT                      | 4000 WATT 0.5A                 | 50                             | 20-30          | 78*180*396                | 4.0        | 16MM SQ         |
| PS3000/12  | 3000 WATT                      | 6000 WATT 0.8A                 | 200                            | 10-15          | 78*180*396                | 4.0        | 40MM SQ         |
| PS3000/24  | 3000 WATT                      | 6000 WATT 1.3A                 | 100                            | 20-30          | 128*180*396               | 5.6        | 20MM SQ         |
| PSX3000/12 | 3000 WATT                      | 6000 WATT 0.8A                 | 200                            | 10-15          | 128*180*396               | 5.6        | 40MM SQ         |
| PSX3000/24 | 3000 WATT                      | 6000 WATT 1.3A                 | 200                            | 20-30          | 128*180*396               | 5.6        | 20MM SQ         |
| PS5000/12  | 5000 WATT                      | 10000 WATT 1.6A                | 400                            | 10-15          | 160*210*500               | 12         | 60MM SQ         |
| PS5000/24  | 5000 WATT                      | 10000 WATT 1.0A                | 200                            | 20-30          | 160*210*500               | 12         | 30MM SQ         |



Phone:03 9775 1590

Email: Enquiries@inverter.com.au

Website: www.excelsiorpower.com.au

Address:

Factory 1

16 Titan Drive

**Carrum Downs** 

Vic, 3201

# **Documents / Resources**



EXCELSOIR POWER PS Series Power Inverters [pdf] User Manual PS300, PS1000, PS2000, PS3000, PSX2000, PSX3000, PS5000, PS Se ries Power Inverters, PS Series, Power Inverters, Inverters

#### References

- User Manual
- **■** EXCELSOIR

**POWER** 

► EXCELSOIR POWER, Inverters, Power Inverters, PS Series Power Inverters, PS-Series, PS1000, PS2000, PS3000, PS3000, PSX2000, PSX2000, PSX2000

# Leave a comment

Your email address will not be published. Required fields are marked \*

| Comment *  |        |  |
|--|--------|--|
|  |        |  |
|  |        |  |
|  |        |  |
|  |        |  |
|  |        |  |
|  |        |  |
| Name   |        |  |
|  |        |  |
|  |        |  |
| Email  |        |  |
|  |        |  |
| Website  |        |  |
|  |        |  |
| Save my name, email, and website in this browser for the next time I com | ment.  |  |
| Post Comment   |        |  |
| Search:  |        |  |
| e.g. whirlpool wrf535swhz  | Search |  |

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.