


EXHAUSTO

EXact2 Web Server
Module software

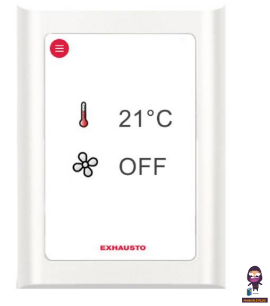

EXHAUSTO EXact2 Web Server Module software User Guide

[Home](#) » [EXHAUSTO](#) » EXHAUSTO EXact2 Web Server Module software User Guide 

Contents

- [1 EXHAUST EXact2 Web Server Module software](#)
- [2 Specifications](#)
- [3 Steps to update the ventilation system's Web Module](#)
- [4 Method 1](#)
- [5 Method 2](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

EXHAUSTO

EXHAUST EXact2 Web Server Module software



Specifications

- **Model:** EXact2 Web Server Module
- **Software Version:** 3.6-25
- **Update Guide Date:** 2024-09-18

Guide for updating EXact2 Web Server Module software

- New patch version: 3.6-25


Steps to update the ventilation system's Web Module

Method 1

1. Click on Menu.



- Any unsaved changes must be saved before proceeding to update the firmware.

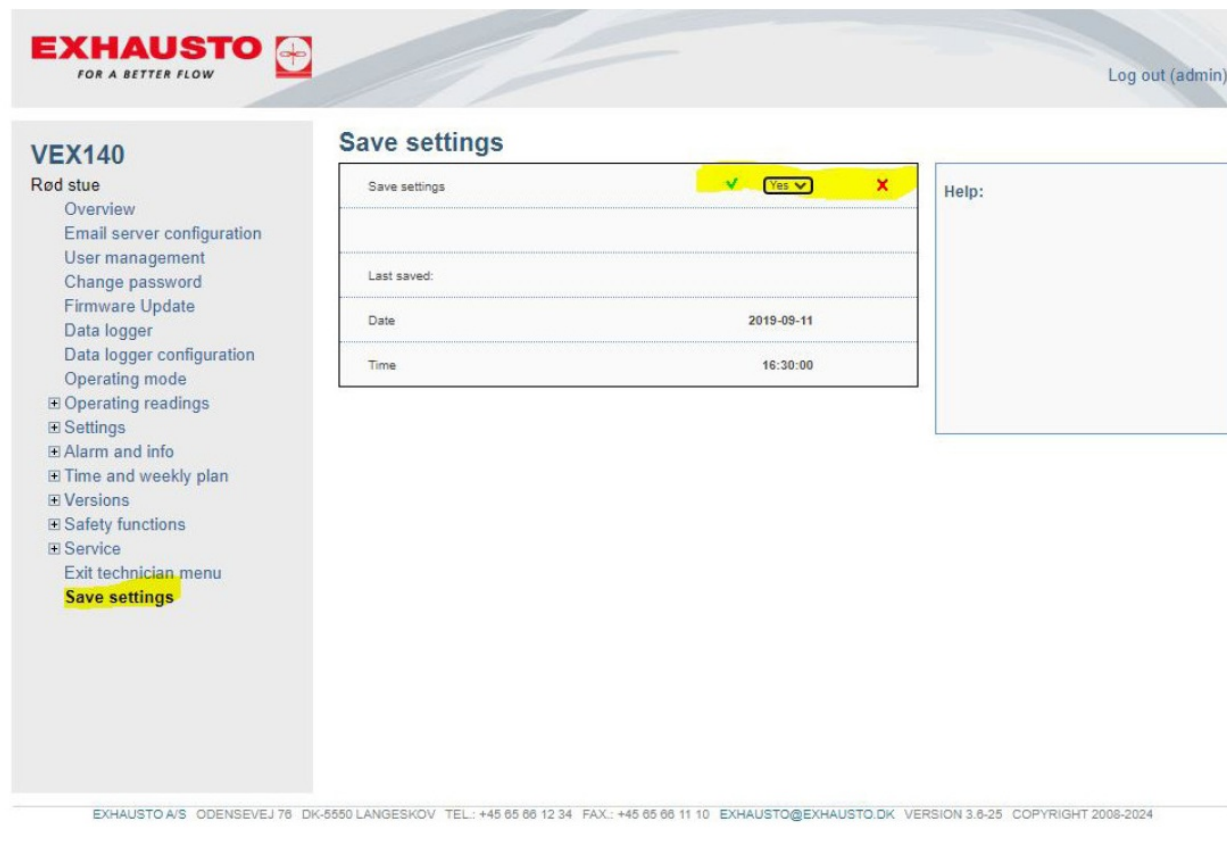

- Click on Firmware Update, select the firmware file from a connected pc, and press uUpload

VEX140

Rød stue

- Overview
- Email server configuration
- User management
- Change password
- Firmware Update**
- Data logger
- Data logger configuration
- Operating mode
- ⊞ Operating readings
- ⊞ Settings
- ⊞ Alarm and info
- ⊞ Time and weekly plan
- ⊞ Versions
- ⊞ Safety functions
- ⊞ Service
- Exit technician menu
- Save settings

Firmware Update

Vælg fil Der er ikke valgt nogen fil **Upload**

Running firmware version is:
liab6I-ARM-3.6-25
MemTotal: 62488 kB

Backup/Restore settings

Backup settings

Download

Restore settings

Vælg fil Der er ikke valgt nogen fil **Upload**

Help:

- Wait until the update is finished (appr. 5 min), and the menu should appear as in the following screenshot:

[Overview](#)

Firmware Update

Status:

System restarted.

- Power cycle the ventilation system.
- The time and date in the HMI menu (3.2.1) should now be able to be set to the current time.

Method 2

Prepare the USB stick:

1. Ensure that the latest software patch (3.6-25) is saved on an empty USB drive.
2. The software file must be placed in the root directory of the USB drive.
3. It should be the only file on the USB drive, avoid placing it in a subfolder.

Connect the USB drive to the Web Module:

4. Insert the USB drive into the Web Module of the ventilation system.



Restart the ventilation system:

5. While the USB drive is still connected, power cycle the system.
6. Upon restart, the Web Module will detect and begin loading the new software.
7. Wait for the software to be installed:
8. The installation process typically takes 5-8 minutes.
9. During this time, the system will automatically be updated to version 3.6-25

Verify the update:

10. The update process can be monitored via the HMI interface under Versions in menu 6.3.
11. Once the update is complete, the web module will display that it has been updated to version 3.6-25.

Access the Web Module:

12. After the update, the Web Module will be accessible through a local network (LAN).

13. The time and date in the HMI menu (3.2.1) should now be able to be set to the current time.

Documents / Resources

	EXHAUSTO EXact2 Web Server Module software [pdf] User Guide EXact2 Web Server Module software, EXact2, Web Server Module software, Server Module software, Module software, software
---	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.