




[Home](#) » [EXIT TOYS](#) » **EXIT TOYS MSP-U061-V01 Padel Rebounder User Manual** 

EXIT TOYS MSP-U061-V01 Padel Rebounder User Manual

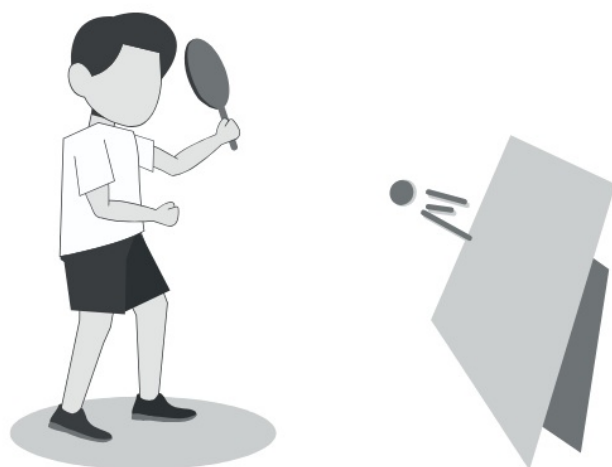

Contents [[hide](#)]

- [1 Outdoor fun, games and sports for everyone](#)
- [2 General info](#)
- [3 Safe Use](#)
- [4 Assembly and installation](#)
- [5 Usage and maintenance](#)
- [6 Warranty](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Outdoor fun, games and sports for everyone

Making outdoor toys that everyone can have fun with. It was in this spirit that the founding partners began developing outdoor toys under the name EXIT Toys in 2011. There is one thing we are still sure of: fun comes first! With its unique items, EXIT Toys encourages the whole family to go outside and play together, engage in sports and have lots of fun.

Years of challenging outdoor fun!

The best adventures are had outside; by children, young people and adults alike. At EXIT Toys, we are convinced that good products add to the experience. Because the cooler, better-looking and more challenging the item, the more fun everyone has with it. That's precisely why the design of our products comes first. We are always looking for just that little bit extra.

Safety first

We do everything we can to develop products that are safe for everyone. For us it is a matter of course that our products meet the highest consumer safety standards. Before launching a product on the market, we have independent and expert tests carried out to obtain the necessary certification. We also carry out continuous checks during production and stay informed of the latest legislative and regulatory developments. You will only find products that meet EXIT Toys' strictest standards in our range.

Do you have a question or comment? We will be happy to help!

We really appreciate you being our customer and thank you for your confidence in EXIT Toys and our products. As we are open to your views, we welcome your comments and ideas. So that we can further improve, develop and expand our products.

Visit the world of EXIT Toys at www.exittoys.com and also discover our other exciting and cool outdoor products that will provide you with years of entertainment. Or simply contact us at info@exittoys.com. We will be happy to provide you with personal advice.

Go Play Outside!

EXIT Toys Team

General info

The padel rebounder is the ideal product to practice your padel skills. You no longer need to go to the Padel court to practice your strokes. You can play alone or with a friend.

What is required to play:

- Padel rebounder
- 3-4 meters of free space
- Padel racket
- Padel ball

Exercises to practice:

- Forehand
- Backhand
- Volley variations
- Smashes
- And a lot more!

For a tutorial and exercise routines please follow QR-code below for video's



<https://www.exittoys.com/tutorials/smash>

Safe Use

To simplify the assembly, please read the following instructions before beginning. Keep this manual and the assembly manual for future reference.

- Minimum user age: 3 years.
- Adult assembly required.
- This product is for domestic use only.
- **IMPORTANT:** Product is designed to be used with Padel racket and ball.
- **WARNING.** Choking hazard, small parts. Not for children under 3 years old.
- This product should, at all times, be used by the child under direct supervision of an adult.
- Stored product can fall over causing serious injury.
- Keep small children away from net area at all times.
- The metal frame of the product will conduct electricity. Lights, extension cords, and all such electrical equipment must never be allowed to come in contact with the product.

In case of missing parts, please contact place of purchase for assistance. Or go to www.exittoys.com.

Assembly and installation

- Product must be assembled by 1 or more adults.
- Make sure that the product is properly assembled and used as intended.
- Place the product on a solid and level surface before use.
- Folding and unfolding of the frame must be performed by an adult.
- When unfolding the product e.g. after storage, pay attention to fix the frame position (bolt and knob) before using the product again.

- To prevent the product from falling over, ensure that the product is secured when not in use.

Usage and maintenance

- Wear comfortable clothing free of hooks, snaps, drawstrings or anything which may snag or catch in the products mesh. Remove jewelry, necklaces, and earrings.
- In warmer and sunnier conditions, parts can become hot.
- Body parts can stick to metalwork at subzero temperatures.
- When not in use, store the product in a dry location.
- In case of strong winds store the product.
- Inspect the product before each use. Make sure all parts are correctly and securely positioned and attached.
- Tighten any loose hardware. Replace any worn, defective, or missing parts.
- Do not affix additions/appendages to parts of the frame that could affect the essential safety.

Warranty

1. After the date of the purchase invoice, the owner of the EXIT product has a:
 - 2-year warranty on the breaking of the frame
 - 6-month warranty on the other parts
2. The warranty becomes defunct if:
 - This product is used incorrectly and/or carelessly and is used in such a way that it does not comply with its purpose.
 - The maximum (user) weight has been exceeded.
 - This product is not assembled and maintained according to the instruction booklet.
 - Technical repairs are performed without consultation with the supplier.
 - Parts, which are mounted afterwards, do not comply with the technical specifications of the product concerned or are mounted incorrectly.
 - Defects are a result of climatic influences such as corrosion, UV rays or normal disintegration.
3. The warranty only applies when proof, accompanied by original purchase invoice, is presented to the EXIT toys costumer service or an EXIT Toys dealer.
4. In case of material and construction defects that have been ascertained by EXIT Toys,

the product or its components will be repaired or replaced – according to its choice – free of charge during the warranty period mentioned in Article 1.

5. If the claim for warranty is not justifiable, all the costs are at the expense of the owner.
6. The EXIT Toys products are designed for domestic and outdoor use. It is not permitted to rent out or place the product in public areas like schools or day-care centers or sporting facilities. The warranty and any other liabilities shall expire if the product is rented out or used in public areas.



www.exittoys.com



8 720791 618858 >

Contact Information:

Dutch Toys Group B.V.
Edisonstraat 83
7006RB Doetinchem, The Netherlands

+31 314 323 005
info@exittoys.com
www.exittoys.com



EXIT Toys is part of:


SIMBA · DICKIE · GROUP

EXIT Toys is a registered trade mark of Dutch Toys Group

info@exittoys.com

www.exittoys.com

Documents / Resources

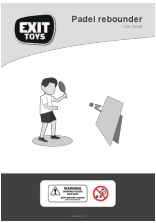	<p>EXIT TOYS MSP-U061-V01 Padel Rebounder [pdf] User Manual</p> <p>MSP-U061-V01, MSP-U061-V01 Padel Rebounder, Padel Rebounder, Rebounder</p>
--	---

References

- [User Manual](#)

EXIT TOYS, MSP-U061-V01, MSP-U061-V01 Padel Rebounder, Padel Rebounder, Rebounder

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

[Post Comment](#)

Search:

[Search](#)

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.