

EXIT TOYS PS600 GetSet Dip Station Gym Frame Instructions

Contents

- [1 PS600 GetSet Dip Station Gym Frame](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
 - [3.1 Documents / Resources](#)

PS600 GetSet Dip Station Gym Frame

Product Information

Product Name: GetSet Dip Station Gym Frame

Model Number: MG-904-V01

 
UPC Code: 8 720791 613518

Product Usage Instructions

1. Ensure you have all the necessary components listed in the user manual.
2. Assemble the GetSet Dip Station Gym Frame according to the provided instructions.
3. Tighten all screws and bolts using a torque wrench with a torque setting of 30Nm.
4. Attach the M8x78mm screw using the provided wrench. Use two of these screws.
5. Attach the eight brackets to the frame using the eight provided screws.
6. Make sure all connections are secure and stable before use.

Please refer to the user manual for any additional information or specific usage guidelines.

[View Fullscreen](#)



GetSet
EXIT GetSet Dip Station Gym Frame

61.81.90.10
8 720791 613518

MG-904-V01

GetSet
EXIT GetSet Dip Station Gym Frame

1
54.90.10.00 1X
MG-904-V01

13
30Nm

1

1x

M8x78mm

2x

8x

8x

8x

!

13

30Nm

1

MG-904-V01

2

Documents / Resources

	EXIT TOYS PS600 GetSet Dip Station Gym Frame [pdf] Instructions PS600 GetSet Dip Station Gym Frame, PS600, GetSet Dip Station Gym Frame, Station Gym Frame, Gym Frame
---	--