



# EXPERIENCE MOSAIC Gorilla Babo Iptv Big Button Remote Instructions

[Home](#) » [EXPERIENCE MOSAIC](#) » EXPERIENCE MOSAIC Gorilla Babo Iptv Big Button Remote Instructions 

## EXPERIENCE MOSAIC Gorilla Babo Iptv Big Button Remote Instructions

 


### Contents


- [1 Getting Started](#)
- [2 Setup Method A](#)
- [3 Setup Method B](#)
- [4 FAQ's](#)
- [5 Remote Control Guide](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

## Getting Started

1. Remove battery cover.

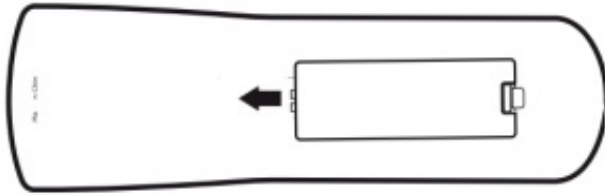

 2. Insert 2 AA batteries.

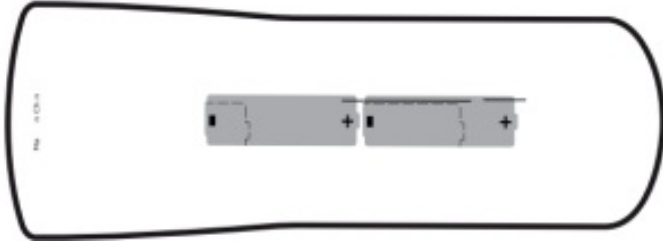

3. Match the + and – marks.

4. Replace battery cover.

### Note

- Make sure TV is ON before starting remote control setup.
- The LED will blink 5 times with each key-press when batteries need replacement.

### Setup Method A

1. Press and hold SETUP until LED blinks twice.



2. Press the TV POWER key.



3. Press and hold down the DIGIT key for your TV brand



1. Insignia/Dynex
  2. LG/Zenith
  3. Mitsubishi
  4. Panasonic
  5. Phillips/Magnavox
  6. Samsung
  7. Sharp
  8. Sony
  9. Toshiba
  10. (0) Vizio
4. Let go of the key when complete.
- 2 Blinks = Success
  - 1 Long Blink = Failure

#### **Note**

If your brand does not appear on popular TV brand chart, try either Method B to setup the remote to control your TV.

#### **Setup Method B**

1. Press and hold SETUP until LED blinks twice.



2. Press the TV POWER key.



3. Press and hold down the OK/SELECT.



4. Let go of the OK/SELECT key when the TV turns off.



## FAQ's

 
**Problem: LED does not blink when a key is pressed.**

**Solution:** Replace batteries.

**Problem: TV does not respond when TV POWER or VOLUME keys are pressed.**

**Solution:** Program remote control for your TV brand using instructions in Setup Method A, or B.

## Remote Control Guide

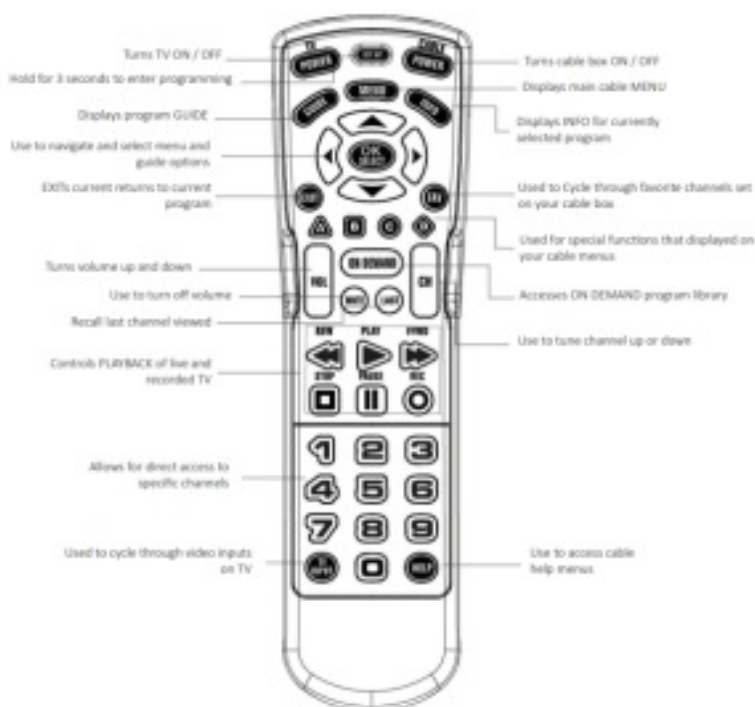

## Documents / Resources

**Manuals+,**