



EXTECH 45170 4 In 1 Temperature Airflow Environmental Meter User Manual

[Home](#) » [EXTECH](#) » EXTECH 45170 4 In 1 Temperature Airflow Environmental Meter User Manual 

EXTECH 45170 4 In 1 Temperature Airflow Environmental Meter User Manual




Contents

- 1 Introduction
- 2 Meter Description
- 3 Operation
- 4 Useful Equations
- 5 Specifications
- 6 Two-year Warranty
- 7 Calibration and Repair Services
- 8 Contact Customer Support
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

Introduction

Congratulations on your purchase of Extech's Model 45170 4-in-1 Humidity, Temperature, Airflow and Light Meter. With careful use, this meter will provide years of reliable service.

Meter Description

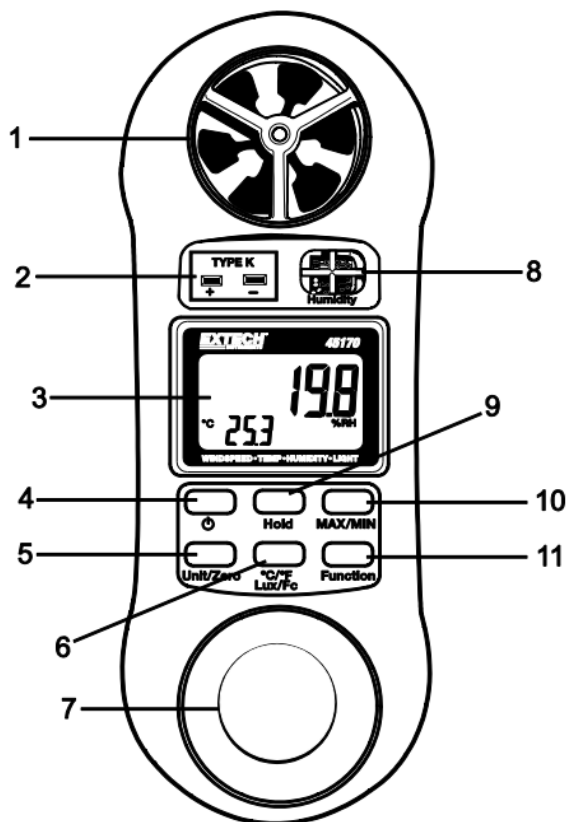

1. Vane Airflow Sensor
2. Type K Thermocouple Input Jack
3. Display
4. Power Button
5. Unit /Zero Button
6. C°/F° /Lux/Ft-cd Button
7. Light Sensor
8. RH and Air Temperature Sensors
9. Hold Button
10. Max/Min Button
11. Function Button

Operation

Turn Power ON

Press the power button to turn power on. The meter will perform a short self-test.

A. Air Velocity Measurements

1. Press the Function button to select the Anemometer mode. In Air Flow mode, the display will show Air Velocity

and Temperature.

2. Press Unit/Zero button to select desired unit of measure (**FPM, MPH, KNOT, KM/H**, or M/S) and face the Air Flow Sensor towards the source of wind.
3. Allow time for the reading to stabilize and note value. From a practical point of view the velocity may fluctuate slightly.

B. Humidity and Ambient Air Temperature Measurements

1. Press the Function button to select RH mode.. In RH mode, the display will show %RH and Temperature.
2. Press the °C/°F button to select the desired temperature unit of measure.

C. Temperature Measurements Using Type K Thermocouple

1. Press the Function button to select the Temperature mode. In Temperature mode, the display will show only temperature.
2. Plug the thermocouple into the meter's thermocouple input jack. If no thermocouple is connected, or if the thermocouple is defective, the meter will display "—". (Primary display temperature will only work if a thermocouple is connected).

D. Light Measurements

1. Press the Function button to select the Light Meter mode. The light values are displayed and orientated 180° from the other functions for easy use.
2. Press the Lux/Ft-cd to select Lux or Footcandle units of measure.
3. Before making measurements "Zero" the meter out by blocking the light sensor to simulate a no light condition and pressing the Unit/Zero button. The reading should go to Zero.
4. Hold the sensor toward the light source and note reading.

MIN, MAX, Data Recording Function

1. Press the **Max/Min** button once. The RECORD symbol will appear on the display. This starts the **Min/Max** Data Recording Mode.
2. Press the **Max/Min** again and the **MAX** symbol along with the maximum value will appear on the display.
3. Press the Max/Min once more and the MIN symbol along with the minimum value will appear on the display.
4. To Clear the recorded Max/Min values press the HOLD button once. Press and Hold the Max/Min button for 3 seconds to exit Min/Max Data Record Mode and return to normal measurement mode. Record and Max/Min will disappear from the display once this is done.

Data Hold

Press the HOLD button to freeze the reading in the display. The 'HOLD' icon will appear on the upper right-hand side of the display. Press the HOLD button again to return to normal operation (the 'HOLD' hold icon will disappear).

Auto Power OFF

The meter will automatically turn off after 10 minutes if no keys are pressed during this period. Auto power off is

disabled in the max/min recording mode.

Turning Power OFF

Press the power button to turn power off.




You, as the end user, are legally bound (EU Battery ordinance) to return all used batteries, disposal in the household garbage is prohibited! You can hand over your used batteries / accumulators at collection points in your community or wherever batteries / accumulators are sold!


Disposal: Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle

Useful Equations

Area equations

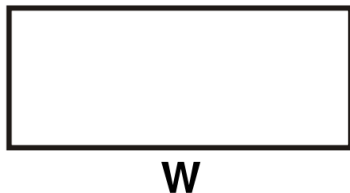

$$A = W \times H$$

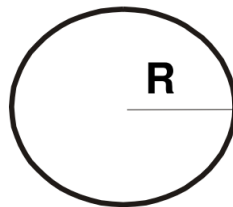

$$A = \pi \times R^2$$

Cubic equations

CFM (ft³ /min) = Air Velocity (ft/min) x Area (ft²)

CMM (m³ /min) = Air Velocity (m/sec) x Area (m²) x 60

Specifications

Range Specifications

| Measurement | Range | Resolution | Accuracy |
|---------------------------------|------------------------------|------------|---|
| MPH (Miles per hour) | 0.9 to 67.0MPH | 0.1MPH | £ 3937 ft/min: ±3% F.S.> 3937 ft/min: ±4% F.S |
| km/hr (kilometers per hour) | 1.4 to 108.0 km/h | 0.1km/h | |
| Knots (nautical miles per hour) | 0.8 to 58.3 knots | 0.1knots | |
| m/sec (meters per second) | 0.4 to 30.0 m/s | 0.1 m/s | |
| ft/min (feet per minute) | 80 to 5910 ft/min | 1ft/min | |
| Temperature/Thermistor | 32 to 122oF (-0 to 50oC) | 0.1oF/C | ± 2.5oF (± 1.2oC) |
| Temperature /Thermocouple | -148 to 2372°F-100 to 1300°C | 0.1°F0.1°C | ± (1% + 2°F)± (1% + 1°C) |
| Relative Humidity | 10.0 to 95.0% | 0.1% | ±4% RH (from 10% to 70%RH)±4% rdg +1.2% RH (> 70% RH) |
| Light (Auto Ranging) | 0 to 2,200 Lux | 1 Lux | ±5% rdg +8 digits |
| | 1,800 to 20,000 Lux | 10 Lux | |
| | 0 to 204.0 Fc | 0.1 Fc | |
| | 170 to 1,860 Fc | 1 Fc | |

General Specifications

| Display | 4 digit (9999 count) Dual Display LCD |
|----------------------|--|
| Sensors | Thin film capacitance humidity sensor |
| Min/Max | Min/Max recalls the highest/lowest reading |
| Data Hold | Data Hold freezes the display |
| Operating conditions | 0 to 50oC (32 to 122oF) / < 80% RH |
| Power supply | 9 Volt Battery |
| Dimensions / Weight | Instrument: 156 x 60 x 33mm(6.14 x 2.36 x 1.29") Vane: 24mm (1") diameter / 160 g (5.7 oz) |

Two-year Warranty

Teledyne FLIR LLC warrants this Extech brand instrument to be free of defects in parts and workmanship for two years from date of shipment (a six-month limited warranty applies to sensors and cables). To view the full warranty text please visit: <http://www.extech.com/support/warranties>.

Calibration and Repair Services

Teledyne FLIR LLC offers calibration and repair services for the Extech brand products we sell. We offer NIST traceable calibration for most of our products. Contact us for information on calibration and repair availability, refer to the contact information below. Annual calibrations should be performed to verify meter performance and accuracy. Product specifications are subject to change without notice. Please visit our website for the most up-to-date product information: www.extech.com.

Contact Customer Support

Customer Support Telephone List: <https://support.flir.com/contact>

Calibration, Repair, and Returns: repair@extech.com

Technical Support: <https://support.flir.com>


Copyright © 2021 Teledyne FLIR LLC

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

EXTECH®

Documents / Resources

| | |
|--|--|
|  <p>EXTECH® User Manual 4-in-1 Humidity, Temperature Airflow and Light Meter Model 45170</p> | <p>EXTECH 45170 4 In 1 Temperature Airflow Environmental Meter [pdf] User Manual 45170 4 In 1 Temperature Airflow Environmental Meter, 45170, 4 In 1 Temperature Airflow Environmental Meter, Temperature Airflow Environmental Meter, Airflow Environmental Meter, Environmental Meter, Meter</p> |
|--|--|

References

- [🔗 Extech is now on FLIR.com | Teledyne FLIR](#)
- [🔗 Extech is now on FLIR.com | Teledyne FLIR](#)
- [🔗 Extech Product Warranty | Teledyne FLIR](#)
- [🔗 support.flir.com](#)
- [🔗 support.flir.com/](#)
- [🔗 support.flir.com/contact](#)
- [User Manual](#)