



EXTECH LCR200 Digital LCR Meter User Manual

[Home](#) » [EXTECH](#) » EXTECH LCR200 Digital LCR Meter User Manual 

Contents

- 1 EXTECH LCR200 Digital LCR Meter
- 2 Product Information
- 3 Product Usage Instructions
- 4 Introduction
- 5 Features
- 6 Meter Description
- 7 Operation
- 8 Battery Replacement
- 9 Specifications
- 10 Two-year Warranty
- 11 Documents / Resources
 - 11.1 References

EXTECH[®]

EXTECH LCR200 Digital LCR Meter



Product Information

The Extech Model LCR200 is a digital LCR meter designed to accurately measure capacitors, inductors, and resistors. It features a dual LCD display with a count of 19,999/1,999, allowing for simultaneous display of associated quality factor, dissipation, or phase angle values. The meter offers five test frequencies – 100Hz, 120Hz, 1kHz, 10kHz, and 100kHz – and supports both serial and parallel modes. It can measure Ls/Lp/Cs/Cp with D/Q/RP/ESR parameters, as well as DC resistance. The test range varies depending on the frequency used. Additionally, the LCR200 is equipped with a multi-level battery detector and a green backlight for the LCD display.

Product Usage Instructions

Setup:

1. Press the Power button to turn on the meter.
2. The meter will turn on in the default mode: AUTO LCR and 1kHz.
3. If no AC adapter is used, the APO (auto power off) will be active with an auto shutoff every 5 minutes.

LCR Primary Parameter Selection:

1. The meter turns on with auto parameter selection enabled.
2. To manually select the primary parameter, press the L/C/R button to cycle through the available options: Auto-

LCR, Auto-L, Auto-C, Auto-R, DCR.

3. The value of the primary parameter will be displayed in the upper display, and the secondary parameter will be displayed in the lower display.

D/Q/ Secondary Parameter Selection:

1. The meter turns on with auto parameter selection enabled.
2. To manually select the secondary parameter, first select the primary display.
3. Press the D/Q/ button to cycle through the available options: L, C, R, DCR, none.
4. The value of the secondary parameter will be displayed in the lower display.

Series or Parallel:

1. When the L/C/R function mode is selected and "AUTO" is enabled, the default measurement in serial or parallel mode is auto-selected.
2. If the impedance is greater than 10k, a parallel equivalent circuit (L_p , C_p , or R_p) will be selected.
3. If the impedance is less than 10k, a series equivalent circuit (L_s , C_s , or R_s) will be selected.


Introduction

Congratulations on your purchase of Extech's Model LCR200 LCR meter. This meter will accurately measure capacitors, inductors and resistors using the test frequencies of 100Hz, 120Hz, 1 kHz, 10 kHz and 100 kHz. The dual display will simultaneously display the associated quality factor, dissipation or phase angle value using a series or parallel equivalent circuit. This meter is shipped fully tested and calibrated and, with proper use, will provide years of reliable service.

Features

- 19,999/1,999 count dual LCD display.
- Auto LCR smart check and measurement.
- Serial/Parallel modes are selectable.
- $L_s/L_p/C_s/C_p$ with D/Q/RP/ESR parameters.
- DC Resistance.
- Five test frequencies are available: 100Hz/120Hz/1kHz/10kHz/100kHz.
- Test range : (ex. $F = 1 \text{ KHz}$)
 - $L : 0.00\mu\text{H}$ to 2000.0H
 - $C : 0.0\text{pF}$ to 2.000 mF
 - $R : 0.000\Omega$ to 200.0 $M\Omega$
- Multi-level battery detector.
- LCD with green backlight.


Meter Description

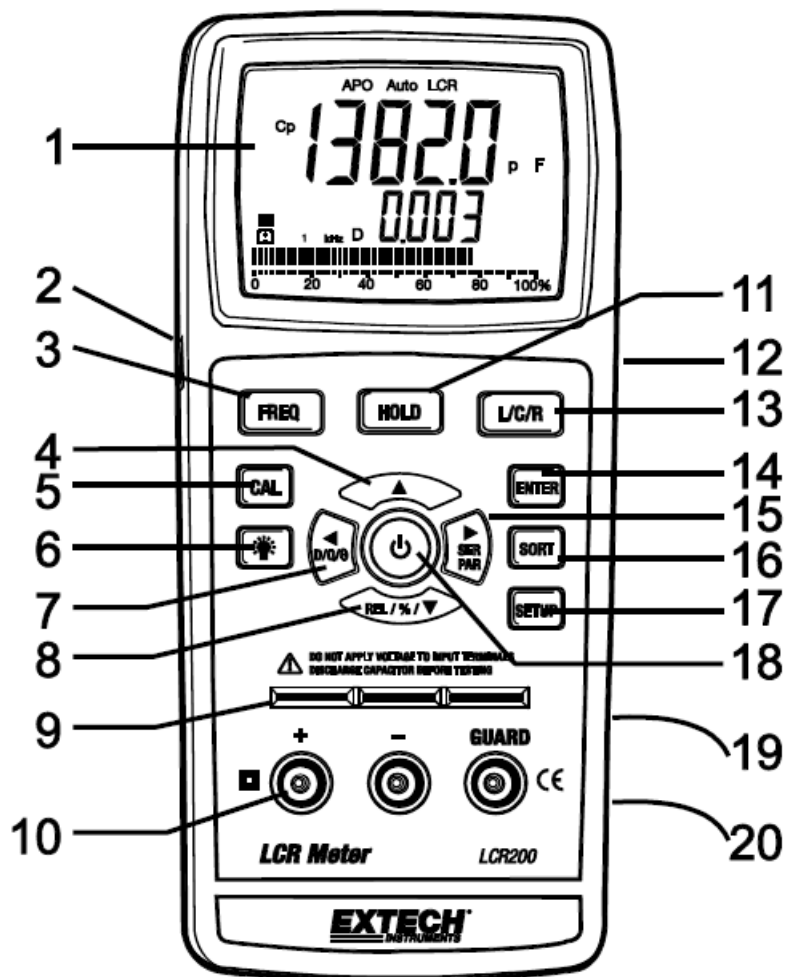

1. Display
2. Power Adapter Socket
3. Frequency Button
4. ▲ Button
5. CAL Button
6. Backlight Button
7. ◀, D/Q/θ Button
8. REL/%/ ▼ Button
9. Input terminals (pin terminals)
10. Input terminals (banana terminals)
11. Hold Button
12. RS232 Port (not active on this model)
13. L/C/R Button
14. Enter Button
15. ▶, SER/PAR Button
16. Sort Button
17. Setup Button
18. Power Button
19. Stand (rear)
20. Battery Compartment (rear)

Operation

Setup

1. Press the  Power button to turn the meter on.
2. The meter will turn on in the default mode: AUTO LCR and 1kHz
3. APO will be active with auto shutoff every 5 minutes unless an AC adaptor is used

LCR primary parameter selection

1. The meter will turn on with auto parameter selection enabled and with the "APO" (auto power off), "Auto" (autoranging) and "LCR" (auto-parameter) icons appearing at the top of the display.
2. To manually select the parameter, press the L/C/R button to step through and select the parameter needed. Each button press will sequentially display:
 1. Auto-LCR Auto Range Auto Parameter
 2. Auto-L Auto Range Inductance
 3. Auto-C Auto Range Capacitance
 4. Auto-R Auto Range Resistance
 5. DCR DC Resistance
3. The value of the primary parameter will be displayed in the upper display and the secondary parameter in the lower display.

D/Q/θ secondary parameter selection

1. The meter will turn on with auto parameter selection "LCR" enabled. The primary and secondary parameter will be automatically selected based on the value of the measured impedance.
2. To manually select the secondary display, first select the primary display.
3. Press the D/Q/θ button to select the secondary parameter
 1. L D, Q, ESR(RP) or θ
 2. C D, Q, ESR(RP) or θ
 3. R none
 4. DCR none
4. The value of the secondary parameter will be displayed in the lower display

Series or Parallel

1. When the L/C/R function mode is selected and 'AUTO' is enabled, the default measurement in serial or parallel mode is auto selected. A parallel equivalent circuit (Lp, Cp or Rp) will be selected if the impedance is greater than 10kΩ. A series equivalent circuit (Ls, Cs or Rs) will be selected if the impedance is less than 10kΩ.
2. Press the SER/PAR button as needed to change the default selection.

Frequency

Press the FREQ button to change the test frequency. The selections are: 100Hz, 120Hz, 1kHz, 10kHz and 100kHz.

Data Hold

Press the HOLD button to freeze the reading in the display. Push the HOLD key again to cancel the hold mode and return to normal operation

Relative / % Function

The REL/% mode allows for % deviation measurements from a stored reference value.

1. Setup the meter with the parameters required for the test to be performed.
2. Insert the reference component into the test fixture and wait for a stable reading.
3. Press the REL/% button to store the value. The Δ icon will appear in the display.
4. For all subsequent measurements, readings on the lower display will indicate the % difference between the currently measured component and the stored value.
5. Press and hold the REL/% button for >2 seconds to exit the mode

Sorting

The sorting mode is used to select components within a % limit of a reference value.

1. Insert the reference component and set the test parameters. "LCR" auto-parameter is not allowed in the sorting mode.
2. With the desired reading in the display, press the SORT button to establish the reference value. The main display will indicate "PASS" and the lower display will indicate the value of the component. The default sorting % is +/- 1%. Note: If the reference value is above 2000 counts or below 200 counts, sort will not work.
3. Press the SETUP button in sequence to change the Range, Reference Value, and the % Tolerance.
 1. Range: With the "RANGE" icon flashing, press the ◀ or ▶ button to change the range. Press the ENTER button to store the setting and proceed to the Value setting.
 2. Value Setting: Press the ◀ or ▶ button to select the flashing digit for adjustment. Press the ▲ or ▼ button to adjust the value of the digit. Press the ENTER button to store the setting and proceed to the Tolerance setting.
 3. Tolerance setting: Press the ◀ or ▶ button to step through the available tolerance selections: $\pm 0.25\%$ $\pm 0.5\%$ $\pm 1\%$ $\pm 2\%$ $\pm 5\%$ $\pm 10\%$ $\pm 20\%$ $+80\%$ -20%
Press the ENTER button to store the Tolerance setting.
4. Press the SORT button for > 2 seconds to exit the Sorting mode.

Open/Short Calibration


In order to improve the accuracy for high/low impedance measurements, it is recommended to do OPEN/SHORT calibration mode before the measurement. This removes stray impedances in test leads or fixtures.

1. Press the CAL button for greater than 2 seconds to start the open/short calibration procedure.
2. The "CAL" icon and "OPEN" appear in the display
3. With no component connected, press the CAL button. The display will count down from 30 and either "PASS" or "FAIL" will appear in the display.
4. Press the CAL button and "Srt" will appear.
5. Short the input and press the CAL button. The display will count down from 30 and either "PASS" or "FAIL" will

appear in the display.

6. Press the CAL button to exit the cal mode.
7. If PASS appeared for both the OPEN and SHORT modes, the calibration data will be stored.
8. If FAIL appeared for either calibration, the impedance was too large to zero out and the data is not stored.

Backlight

Press the  backlight button to turn the backlight on. Press again to turn it off.

Guard Terminal

The guard is used to improve noise immunity and reduce stray impedances. The optional test fixtures utilize the guard feature.

Auto Power Off

In order to extend battery life APO will turn the meter off after 5 minutes of inactivity (no button is pressed). The meter will alarm (beep) three times before the power is shut off. Press any button to reset the APO and continue using the meter. RS232 output port
The RS232 port is not active on this meter.

AC Adaptor

The meter can be powered from an AC adaptor (9VDC, 1A). When an AC adaptor is used, APO is disabled. Purchase a Linear Power Supply (9V 1A) from a third party.

Battery Replacement

The battery icon indicates the status of the 9V battery. A fresh battery will have three lines above it. As the battery weakens, the number of lines will decrease. When the battery becomes too weak to power the meter, "batt" will appear in the display and the meter will shut down.


To replace the battery:

1. Remove the two screws holding the rear bottom battery cover.
2. Remove and replace the 9V battery
3. Secure the cover with the two screws

All EU users are legally bound by the battery ordinance to return all used batteries to collection points in your community or wherever batteries / accumulators are sold! Disposal in the household garbage is prohibited!

Optional Accessories

- LCR203 SMD Component Tweezers
- Used to quickly measure and sort chip components.

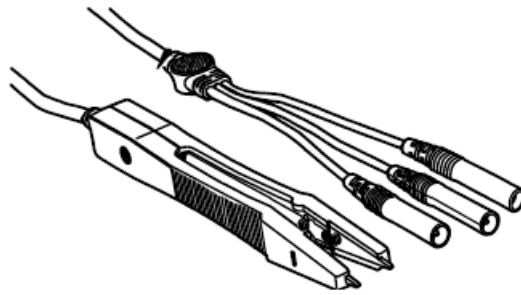

- LCR205 SMD Component Fixture
- Used to accurately measure surface mount devices



Specifications

Display	LCD size: 66.8 X 52.8mm (2.6 x 2.1") backlit LCD
Test frequency	100Hz, 120Hz, 1kHz, 10kHz, 100kHz
Test AC signal level	630mV rms typically
Dissipation factor	0.000 to 1999
Quality factor	0.000 to 1999
θ measurements	$\pm 90^\circ$
Sorting tolerance	$\pm 0.25\%$, $\pm 0.5\%$, $\pm 1\%$, $\pm 2\%$, $\pm 5\%$ $\pm 10\%$, $\pm 20\%$, $+80\%$ -20%
Calibration	Open/Short calibration
Power off	Auto shut off or manual off by push button
Operating temperature	0°C to 50°C (32 to 122°F)
Operating humidity	< 85% R.H
Power Supply	DC 9V battery * <i>Alkaline or Heavy-duty type</i>
Power consumption	DC 35 mA approximately
Dimension	193 x 88 x 41mm (7.6 x 3.5 x 1.6")
Weight	385 g (13.6 oz.) * <i>meter only</i>

Electrical Specifications (23 \pm 5 °C)

DC Resistance

Range	Accuracy	Remark
20Ω	± (0.5%rdg + 5digits)	After calibration
200Ω	± (0.5%rdg + 5digits)	
2kΩ	± (0.5%rdg + 5digits)	
20kΩ	± (0.5%rdg + 5digits)	
200kΩ	± (0.5%rdg + 5digits)	
2MΩ	± (0.5%rdg + 5digits)	After calibration
20MΩ	± (1.0%rdg + 5digits)	After calibration
200MΩ	± (2.0%rdg + 5digits)	After calibration

AC Resistance

Range	Accuracy	Accuracy	Remark
	100Hz/120Hz	1000Hz	
20Ω	± (1% + 5digits)	± (1%rdg + 5digits)	After calibration
200Ω	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
2kΩ	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
20kΩ	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
200kΩ	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
2MΩ	± (1.0%rdg + 5digits)	± (1.0%rdg + 5digits)	After calibration
20MΩ	± (1.0%rdg + 5digits)	± (2.0%rdg + 5digits)	After calibration

Range	Accuracy	Accuracy	
	10kHz	100kHz	
20Ω	± (1.0%rdg + 5digits)	± (2.0%rdg + 5digits)	After calibration
200Ω	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
2kΩ	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
20kΩ	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
200kΩ	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
2MΩ	± (1%rdg + 5digits)	± (2.0%rdg + 5digits)	After calibration
20MΩ	± (2.0%rdg + 5digits)	—————	After calibration

1. If the impedance is larger than 10kΩ, Rp is shown on the display.
2. If the impedance is less than 10kΩ, Rs is shown on the display

Capacitance (Cp/Cs) : D ≤ 0.1

Range	Accuracy	Accuracy	Remark
	100Hz/120Hz	1000Hz	
20pF	± (2.0%rdg + 5digits)	± (1.0%rdg + 5digits)	After calibration
200pF	± (1.0%rdg + 5digits)	± (1.0%rdg + 5digits)	After calibration
2000pF	± (0.8%rdg + 5digits)	± (0.8%rdg + 5digits)	After calibration
20nF	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
200nF	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
2000nF	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
20uF	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	
200uF	± (0.5%rdg + 5digits)	± (0.5%rdg + 5digits)	After calibration
2000uF	± (1.0%rdg + 5digits)	± (1.0%rdg + 5digits)	After calibration
20mF	± (2.0%rdg + 5digits)	—————	After calibration

Capacitance (Cp/Cs) : D ≤ 0.1

Range	Accuracy	Accuracy	Remark
	10kHz	100kHz	
20pF	± (1.0%rdg + 5digits)	± (1.0%rdg + 5digits)	After calibration
200pF	± (0.5%rdg + 5digits)	± (0.5%rdg+ 5digits)	After calibration
2000pF	± (0.5%rdg + 5digits)	± (0.5%rdg+ 5digits)	After calibration
20nF	± (0.5%rdg + 5digits)	± (0.5%rdg+ 5digits)	
200nF	± (0.5%rdg + 5digits)	± (0.5%rdg+ 5d igits)	
2000nF	± (0.5%rdg + 5digits)	± (0.5%rdg+ 5digits)	
20uF	± (0.8%rdg + 5digits)	± (0.8%rdg+ 5digits)	
200uF	± (1.0%rdg + 5digits)	—————	After calibration

1. If the impedance is larger than 10kΩ, Cp is shown on the display.
2. If the impedance is less than 10kΩ, Cs is shown on the display.

Inductance (Lp/Ls) : D ≤ 0.1

Range	Accuracy	Accuracy	Remark
	100Hz/120Hz	1000Hz	
20uH	$\pm (1\% + 5d)$	$\pm (1\% + 5d)$	After calibration
200uH	$\pm (1\% + 5d)$	$\pm (1\% + 5d)$	After calibration
2000uH	$\pm (0.8\% + 5d)$	$\pm (0.8\% + 5d)$	
20mH	$\pm (0.5\% + 5d)$	$\pm (0.5\% + 5d)$	
200mH	$\pm (0.5\% + 5d)$	$\pm (0.5\% + 5d)$	
2000mH	$\pm (0.5\% + 5d)$	$\pm (0.5\% + 5d)$	
20H	$\pm (0.5\% + 5d)$	$\pm (0.5\% + 5d)$	
200H	$\pm (0.5\% + 5d)$	$\pm (0.8\% + 5d)$	After calibration
2000H	$\pm (1\% + 5d)$	_____	After calibration

Range	Accuracy	Accuracy	Remark
	10kHz	100kHz	
20uH	$\pm (1\% + 5d)$	$\pm (1\% + 5d)$	After calibration
200uH	$\pm (0.8\% + 5d)$	$\pm (0.8\% + 5d)$	After calibration
2000uH	$\pm (0.5\% + 5d)$	$\pm (0.5\% + 5d)$	
20mH	$\pm (0.5\% + 5d)$	$\pm (0.5\% + 5d)$	
200mH	$\pm (0.5\% + 5d)$	_____	
2000mH	$\pm (0.5\% + 5d)$	_____	

Note:

- If the impedance is larger than 10k Ω , Lp is shown on the display.
- If the impedance is less than 10k Ω , Ls is shown on the display.

Two-year Warranty

FLIR Systems Inc. warrants this Extech brand instrument to be free of defects in parts and workmanship for two years from date of shipment (a six-month limited warranty applies to sensors and cables). To view the full warranty text please visit: <http://www.extech.com/support/warranties>.

Calibration and Repair Services

FLIR Systems Inc. offers calibration and repair services for the Extech brand products we sell. We offer NIST traceable calibration for most of our products. Contact us for information on calibration and repair availability, refer to the contact information below. Annual calibrations should be performed to verify meter performance and accuracy. Product specifications are subject to change without notice. Please visit our website for the most up-to-date product information: www.extech.com.

Contact Customer Support

Customer Support Telephone List: <https://support.flir.com/contact>


Calibration, Repair, and Returns: repair@extech.com

Technical Support: <https://support.flir.com>

Copyright © 2022 FLIR Systems Inc.

All rights reserved including the right of reproduction in whole or in part in any form www.extech.com

Documents / Resources

	<p>EXTECH LCR200 Digital LCR Meter [pdf] User Manual LCR200, LCR200 Digital LCR Meter, Digital LCR Meter, LCR Meter, Meter</p>
---	--

References

- [Extech is now on FLIR.com | Teledyne FLIR](#)
- [Extech is now on FLIR.com | Teledyne FLIR](#)
- [Extech Product Warranty | Teledyne FLIR](#)
- support.flir.com
- support.flir.com/
- support.flir.com/contact