




EXTECH LT250W Light Meter with Connectivity to Exview and Reg User Guide

[Home](#) » [EXTECH](#) » EXTECH LT250W Light Meter with Connectivity to Exview and Reg User Guide 


EXTECH®

Quick Start
LT250W Light Meter
Bluetooth® Connectivity with the
ExView® Mobile App

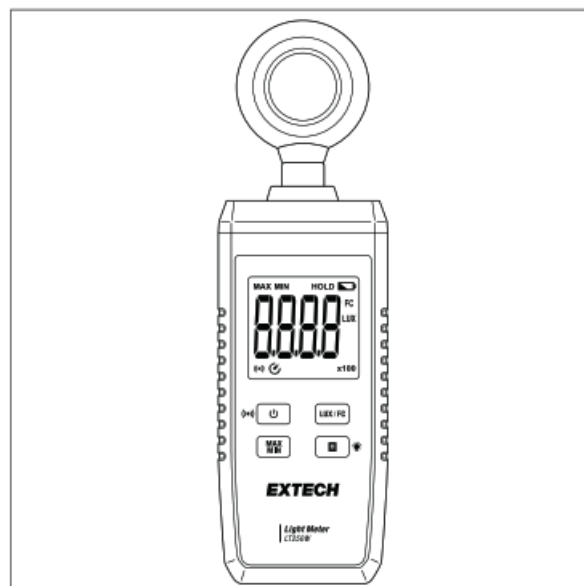

Quick Start


PREPARATION

1. Included items: LT250W, Quick Start, and batteries.
2. Download the User Manual from the Extech website.
3. Download the ExView mobile app from the App Store (iOS®) or Google Play (Android™).
4. Install batteries in the rear compartment.
5. Long press the power button  to switch the meter on (short press to switch off).


GENERAL SAFETY

- Check for damage to the device before use. Return the unit if the damage is evident.
- Do not attempt to open the meter housing or sensor.
- CE and FCC compliant.

TAKING MEASUREMENTS


1. Long press the power button  to switch the meter on.
2. Hold the meter, place it on a table or desk, or mount it on a tripod in the test area.
3. For best results, allow the light to fully cover the sensor dome.
4. Read the illuminance reading on the LCD. If the x10 or x100 display appears, multiply the displayed reading by 10 or 100.
5. If the measurement is out of range, OL will appear.

BLUETOOTH OPERATION

Long press the Bluetooth button  to switch Bluetooth on or off.

Download the ExView mobile app onto your smart device from the App Store or Google Play.

Instructions for app use are available on the Extech website (Ex- View product page). Switch APO off when using

Bluetooth by pressing the power  and H buttons until the APO symbol switches off.

Contents


[1 METER DESCRIPTION](#)

[2 DISPLAY SYMBOLS](#)

[3 Documents /
Resources](#)




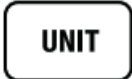
[4 Related Posts](#)

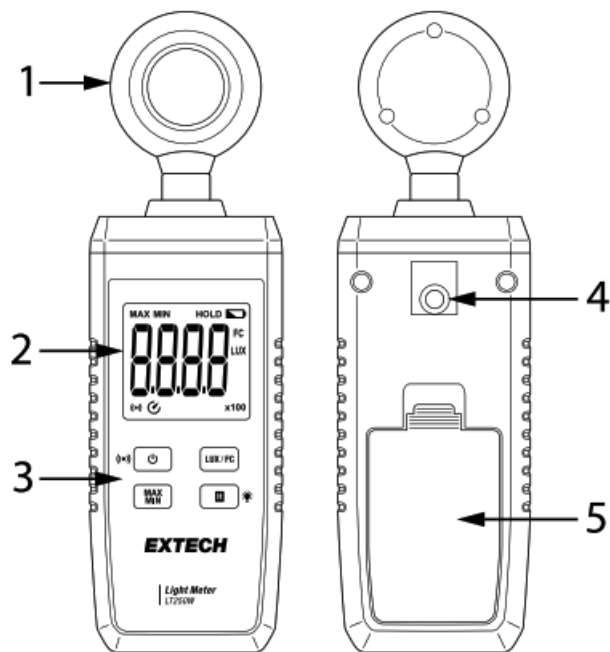METER DESCRIPTION




1. Light sensor
2. Backlit LCD
3. Function buttons
4. Tripod mount
5. Battery compartment

FUNCTION BUTTONS


	<p>Long press to switch the meter on. Short press to switch off. Long press to switch Bluetooth on/off.</p>
	<p>Short press to cycle through MAX/MIN readings. MAX/MIN memories are cleared each time meter power is cycled.</p>
	<p>Short press to freeze/unfreeze the displayed reading. Long press to switch the LCD backlight on/off.</p>
	<p>Short press to toggle Lux and foot-candle (Fc) units.</p>

DISPLAY SYMBOLS

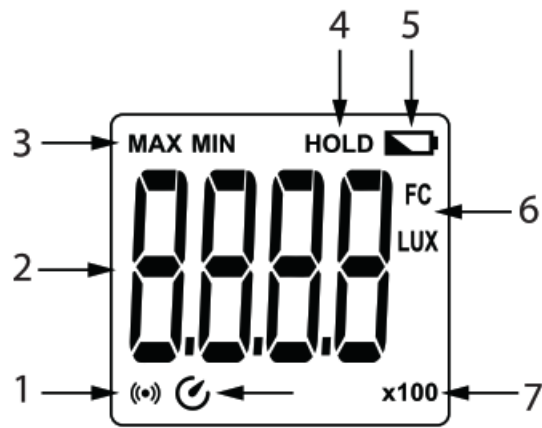

1. Bluetooth active
2. Illuminance measurement
3. MAX/MIN memory modes
4. Data Hold
5. Low battery symbol
6. Units of measure
7. x10 and x100 indicators

BASIC SPECIFICATIONS

Display type	4 digit backlit LCD
Low battery indication	Replace batteries when battery symbol appears 
Operating conditions	32 to 104°F (0 to 40°C); < 80% RH
Storage conditions	-4 to 140°F (-20 to 60°C); < 75% RH

Illuminance ranges	Resolution	Accuracy (% of reading)
0 to 9999 Lux 10,000 Lux 100,000 Lux	1 Lux 10 Lux 100 Lux	$\pm (4\% + 8 \text{ digits}) \pm (5\% + 10 \text{ digits}) \pm (5\% + 10 \text{ digits})$
Readings above 9999 are accompanied by a x/0 or x/00 display indicator Foot candle (Fc) readings are converted from Lux measurements		

TWO-YEAR WARRANTY

FLIR Systems, Inc. warrants this Exttech brand instrument to be free of defects in parts and workmanship for two years from date of shipment. View the full warranty at this link: <https://www.extech.com/support/warranties>

CUSTOMER SUPPORT

Customer Support Telephone List:

<https://support.flir.com/contact>

Service e-mail: repair@extech.com

Technical Support: <https://support.flir.com>



last page

Website

<http://www.flir.com>

Customer support

<http://support.flir.com>

Copyright


© 2021, FLIR Systems, Inc. All rights reserved worldwide.

Disclaimer

Specifications subject to change without further notice. Models and accessories subject to regional market considerations. License procedures may apply.

Products described herein may be subject to US Export Regulations. Please refer to exportquestions@flir.com with any questions.

Documents / Resources

	<p>EXTECH LT250W Light Meter with Connectivity to Exview and Reg [pdf] User Guide LT250W, Light Meter with Connectivity to Exview and Reg, LT250W Light Meter with Connectivity to Exview and Reg</p>
---	---

[Manuals+](#)