




EXTECH Tone Generator and Amplifier Probe User Manual

[Home](#) » [EXTECH](#) » EXTECH Tone Generator and Amplifier Probe User Manual 

EXTECH Tone Generator and Amplifier Probe

Tone Generator and Amplifier Probe

Model 40180

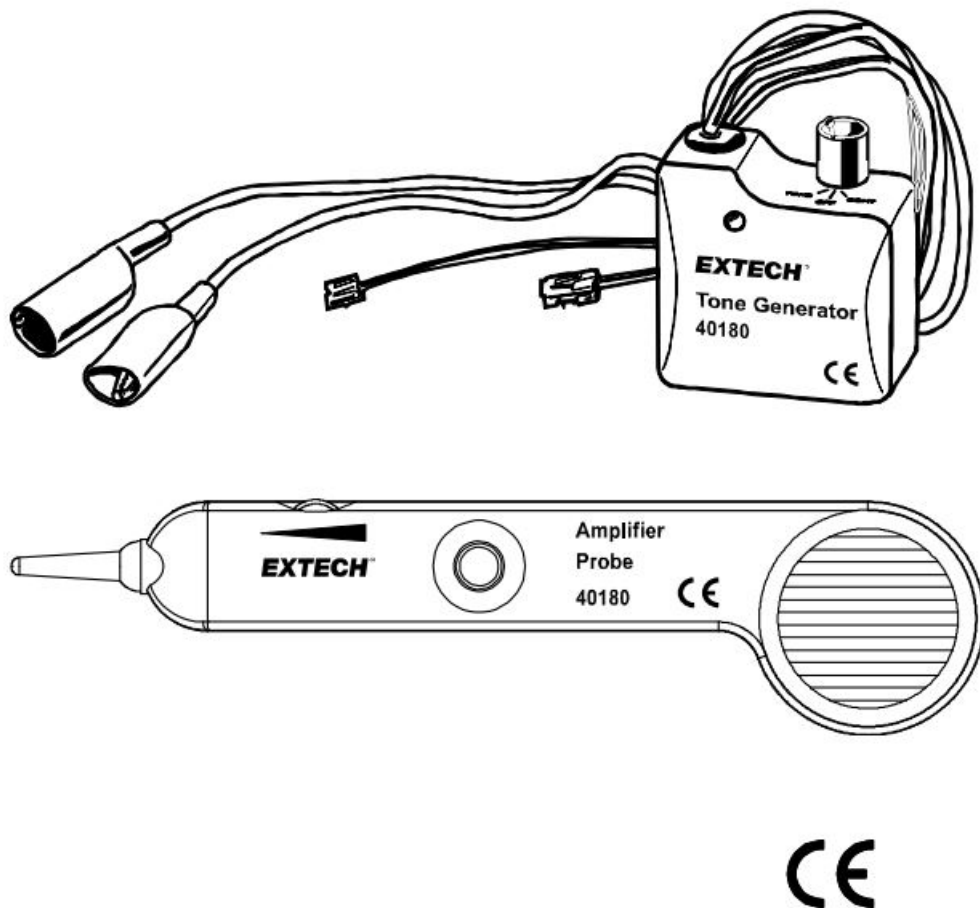

Contents

- [1 Introduction](#)
- [2 Operating Instructions](#)
- [3 Specifications](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Introduction

Congratulations on your purchase of Extech's Model 40180. This tone generator and amplifier probe set is used to quickly trace and identify cables or wires within a group and also to check the operation of phone lines. With proper use and care, this meter will provide many years of reliable service.

Meter Description

1. Power switch
2. Modular connectors
3. Test leads
4. Battery compartment (rear)
5. Probe tip
6. Volume/Sensitivity control
7. Power button
8. Battery compartment (rear)
9. Headphone jack

Operating Instructions

Note: Remember to turn off the tone generator after tracing the cables

Cable/Wire tracing

CAUTION:

Do not connect the tone generator in the TONE position to any wire or cable with an active circuit of more than 24VAC.

1. Connect the tone generator to the cable
 - a) For cables terminated at one end, connect the red alligator clip to a wire and the black alligator clip to equipment ground
 - b) For unterminated cables, connect the red alligator clip to one wire and the black alligator clip to another wire.
 - c) For cables with modular connectors, plug the RJ11 or RJ45 connectors directly into the mating cable connectors.
2. Set the tone generator power switch to the TONE position.
3. On the amplifier probe, press and hold the side on/off switch.
4. Hold the insulated probe tip against the wire in question to pick up the signal generated by the tone generator.
5. Rotate the volume/sensitivity control on the top of the probe for the appropriate level and sensitivity to identify and trace the wire.
6. The tone will be the loudest on the wires connected to the tone generator.

Note: RJ11 tests are performed on one pair only and RJ45 tests are performed on pins 4 and 5.

Note: A headphone jack is located on the bottom of the probe.

Identifying telephone cable Tip and Ring Using Alligator Clips

1. Switch the tone generator to the OFF position
2. Connect the red test lead to one line and the black lead to the other line.
3. The LED color indicates the connection to the RED test lead as:
GREEN = Ring side, RED = Tip side.

Identifying telephone cable Tip and Ring Using the RJ-11 or RJ-45 Connectors

1. Switch the tone generator to the OFF position
2. Connect the RJ-11 or RJ-45 connector mating cable connector.
3. The LED color indicates the condition of the telephone jack wiring.
GREEN = Jack wired properly, RED = Jack wired with reversed polarity.

Identifying telephone cable Line Condition

1. Switch the tone generator to the OFF position
2. Connect the red test lead to the RING side and the black test lead to the TIP side.
3. The LED will indicate line condition by:
GREEN = CLEAR , OFF = BUSY, Flickering YELLOW = RINGING
4. Switch the tone generator power switch to CONT to terminate the call.

Continuity testing

CAUTION: Do not connect the tone generator in the CONT position to any wire or cable with an active circuit.

1. Connect the test leads to the wire pair under test.
2. Switch the tone generator to the CONT position.
3. The LED will glow bright GREEN for a low resistance or continuity. The LED will glow less brightly as the resistance increases and will extinguish at approximately 10,000 ohms.

Tone selection

The output of the tone generator can be set to continuous or wobble. To change the type of output, change the tone type switch position (located in the battery compartment)

Battery replacement

Install a new battery by removing the battery cover as indicated in the meter description diagram.

Specifications

Power	9V battery (tone generator and probe (1 each))
Tone output	1kHz, 6V square wave (approximately)
Dimensions	Probe: 9 x 2.25 x 1"(228 x 57 x 25.4mm) Generator: 2.5 x 2.5 x 1.5"(63.5 x 63.5 x 38.1mm)
Weight	0.6lb (272g)

Two-year Warranty

FLIR Systems, Inc. warrants this Extech brand instrument to be free of defects in parts and workmanship for two years from date of shipment (a six-month limited warranty applies to sensors and cables). To view the full warranty text please visit: <http://www.extech.com/support/warranties>.

Calibration and Repair Services

FLIR Systems, Inc. offers calibration and repair services for the Extech brand products we sell. We offer NIST traceable calibration for most of our products. Contact us for information on calibration and repair availability, refer to the contact information below. Annual calibrations should be performed to verify meter performance and accuracy. Product specifications are subject to change without notice. Please visit our website for the most up-to-date product information: www.extech.com.

Contact Customer Support

Customer Support Telephone List: <https://support.flir.com/contact>


Calibration, Repair, and Returns: repair@extech.com

Technical Support: <https://support.flir.com>

Copyright © 2021 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form
www.extech.com

Documents / Resources

 <p>EXTECH USER MANUAL Tone Generator and Amplifier Probe Model 40180 CE</p>	<p>EXTECH Tone Generator and Amplifier Probe [pdf] User Manual Tone Generator and Amplifier Probe, 40180, 40180-en-US_V2.5 2-21</p>
--	---

References

- [🌐 repair@extech.com](mailto:repair@extech.com)
- [🔗 Extech is now on FLIR.com | Teledyne FLIR](#)
- [🔗 Extech is now on FLIR.com | Teledyne FLIR](#)
- [🔗 Extech Product Warranty | Teledyne FLIR](#)
- [🔗 support.flir.com](https://support.flir.com)
- [🔗 support.flir.com/](https://support.flir.com/)
- [🔗 support.flir.com/contact](https://support.flir.com/contact)