

Extron MLC Plus 200 MediaLink Plus Controllers



# Extron MLC Plus 200 MediaLink Plus Controllers User Manual

[Home](#) » [Extron](#) » Extron MLC Plus 200 MediaLink Plus Controllers User Manual 

### Contents

- 1 Extron MLC Plus 200 MediaLink Plus Controllers
- 2 Product Information
- 3 Product Usage Instructions
- 4 Teaching Station Instructions
- 5 Display Buttons
- 6 Volume Knob
- 7 Connections
- 8 Frequently Asked Questions
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts



Extron MLC Plus 200 MediaLink Plus Controllers



## Product Information

### Specifications

- **Product Name:** Teaching Station
- **Main Features:** Source Buttons, Display Buttons, Volume Knob, Connections
- **Connectivity:** HDMI cable, network jack

### Product Usage Instructions

#### Source Buttons

To use the Teaching Station with your laptop:

1. Connect the HDMI cable to your laptop.
2. Press the HDMI button on the Teaching Station.

#### Display Buttons

The Display Buttons function is not specified in the provided text.

#### Volume Knob

The Volume Knob controls the volume of the selected source (PC or Laptop) as heard through the ceiling speakers:

- Turn the knob RIGHT to increase the volume, even if the LEDs are indicating RED.
- Turn the knob LEFT to decrease the volume for the audience.

#### Connections

If your device is unable to connect to WiFi, use the network jack for a wired connection.

### Teaching Station Instructions

#### Source Buttons



- If you want to use the IWU computer,

- Press the PC button
- Restart PC when done
- PC will eventually enter sleep mode
- To wake from sleep mode, wiggle mouse or press a button on the keyboard
- If PC is off, press the PC's front panel power button to turn it on.
- If you brought your own device...
- If your laptop has an HDMI jack,
  - Connect the HDMI cable to your laptop
  - Press the HDMI button
- If your mobile device has a USB-C jack,
  - Connect the USB-C cable to your device
  - Press the USB-C button

## Display Buttons

- To turn on the Projector, press the ON button, located in the display section of the control panel. The selected source will appear on the projection screen.
- Press the OFF button when you are through, to turn off the projector.
- The Audio Mute button will silence all audio.
- The Blank button will cause the projector to show a black screen without turning the projector off.

## Volume Knob

The VOLUME KNOB controls the volume of the selected source (PC or Laptop), as heard through the ceiling speakers. The illuminated LEDs beside the knob are an approximate estimation of the volume level. Turn the knob RIGHT until it is loud enough, even if the LEDs are indicating RED. Turn the knob LEFT until it is quiet enough for the audience.



## Connections

- The HDMI laptop cable can be plugged into the HDMI jack of a laptop (or a BluRay player). A video adapter may be required, to allow smaller portable devices to connect to the HDMI laptop cable. Press the HDMI button to display the laptop. Press the USB-C button to display a mobile device.
- The USB-C cable will power a mobile device (up to 60 watts).
- Plug a power cable into the power outlet to charge your mobile device's battery.
- USB jack is for a flash drive or document camera. Press the PC button.
- Plug the network cable in the network jack into your mobile device's network jack, if your device won't connect to WiFi.



## Frequently Asked Questions


**Q: How do I adjust the volume for a specific source?**

A: Use the Volume Knob to control the volume of the selected source. Turn it RIGHT to increase and LEFT to decrease.

**Q: What should I do if my laptop is not displaying on the screen?**

A: Ensure the HDMI cable is properly connected between your laptop and the Teaching Station. Press the HDMI button on the Teaching Station to switch to the correct input source.

## Documents / Resources

	<p><a href="#">Extron MLC Plus 200 MediaLink Plus Controllers</a> [pdf] User Manual</p> <p>MLC Plus 200 MediaLink Plus Controllers, MLC Plus 200, MediaLink Plus Controllers, Plus Controllers, Controllers</p>
--	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.