

EZBASICS
KD303 Facial
Cleansing Brush



EZBASICS KD303 Facial Cleansing Brush User Manual

[Home](#) » [Support](#) » EZBASICS KD303 Facial Cleansing Brush User Manual 

Contents

- [1 EZBASICS KD303 Facial Cleansing Brush](#)
- [2 Safety Precautions](#)
- [3 Part Identification](#)
- [4 Operation](#)
- [5 Maintenance](#)
- [6 Troubleshooting](#)
- [7 Specification](#)
- [8 Packing List](#)
- [9 WARRANTY](#)
- [10 FAQs](#)
- [11 Video-EZBASICS KD303 Facial Cleansing Brush](#)
- [12 References](#)
- [13 Related Posts](#)

EZBASICS

EZBASICS KD303 Facial Cleansing Brush



Thank you for purchasing this product! In order to use this product correctly, please read this manual before use and retain this manual for future reference.

About this manual:

The product pictures and related product features shown in this manual, as well as some nouns, can only be used as a reference. The user will use the actual product as per the standard. The referenced data comes from the company's laboratory.

Safety Precautions

Be sure to read the safety precautions before use. Use this product correctly according to the contents and recommendations of this manual.

The product should be cleaned after each use to avoid accumulation of grease and residue.

Danger:Related content: Incorrect action(s) can lead to personal injury.

Caution: Related content: Incorrect operation can result in personal safety or property damage.

Danger


- Use the supplied charging cable along with a wall adapter that meets the product requirements to properly charge this product and to avoid any malfunction or fire caused by excess heat.
- Do NOT place this product near fire or in a high-temperature environment as the built-in rechargeable battery may expand and malfunction or start a fire.

- Do NOT use if the product is deformed, damaged, or emitting an odor to avoid the risk of electric shock and fire.

Caution

- Do not disassemble or modify this product yourself to avoid malfunction.
- Avoid dropping and hitting the product to prevent malfunction.
- Do not use this product for purposes other than those specified in this manual to avoid malfunction or overheating.
- If the product is damaged, it must be repaired by the manufacturer, its maintenance department or a specialist in a similar department.
- Do not use this product near flammable or explosive materials (alcohol, benzene, nail polish remover, aerosols, etc.) as these may result in a fire or explosion.
- Supervise children to make sure they do not play with the product.
- Place packaging materials, such as plastic bags, where children cannot reach them.
- Power off the device before attempting cleaning and maintenance or when a problem is encountered during use.
- If the product becomes abnormally hot during use, stop using it immediately and power it off to avoid potential burns.
- Do not use the product if it is defective or malfunctioning. Using this product in a malfunctioning state may have adverse effects on the body or cause other hazards.
- This product is not intended for use by persons with physical, sensory, or mental problems, or those who lack experience or common sense (including children), unless supervised by a guardian and instructed on the use of the product.
- The device is waterproof, but do not submerge the device for a prolonged period of time.
- Do not use with water temperatures above 40 degrees Celsius or 104 degrees Fahrenheit.

Part Identification

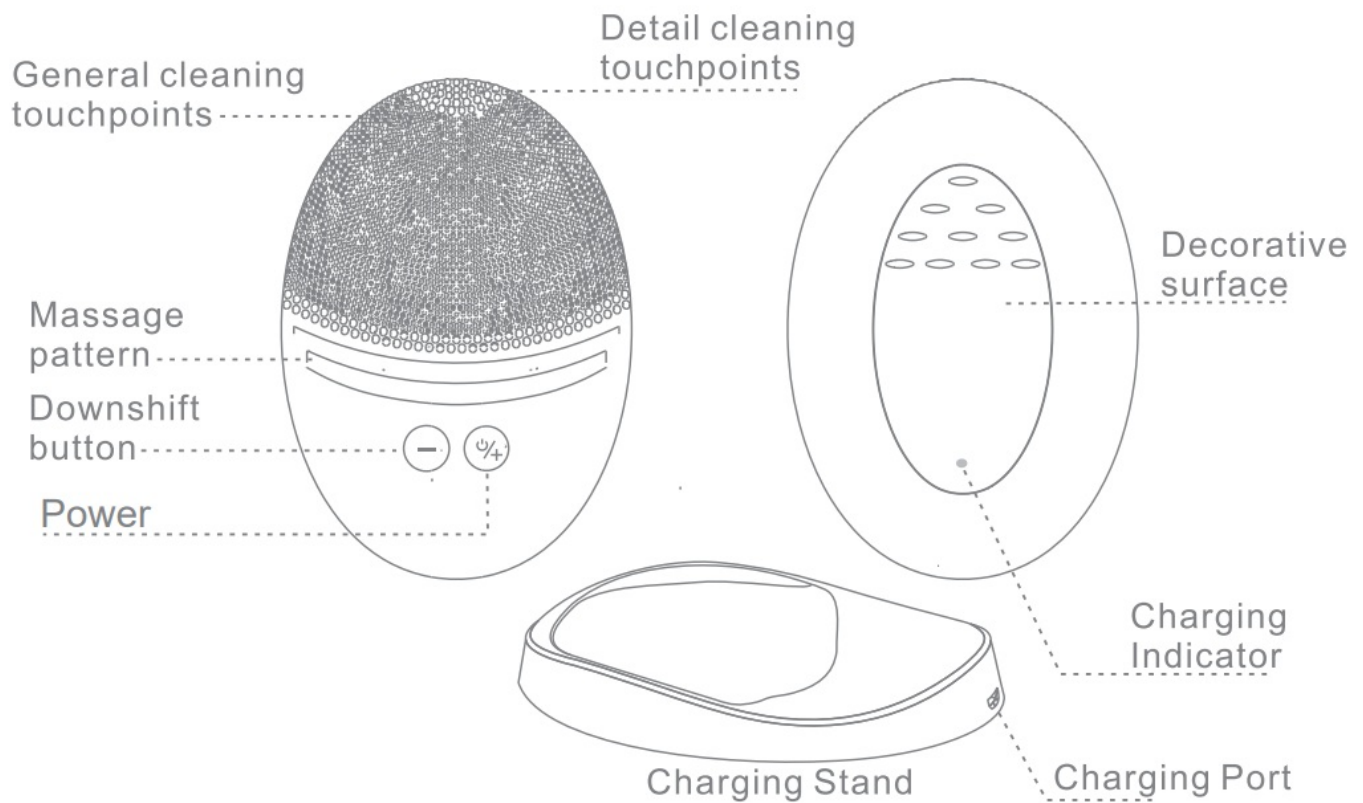


Operation instructions

- Short press the power button to power on and long press (~2 seconds) to power off. The device starts at intensity level 3.
- When powered on, the device's intensity can be changed by short pressing either the downshift or upshift/power button. The vibration intensity ranges from 1-5, with 5 being the strongest option available.

Operation

Charging and usage time

- Fully charge the device before first use.
- When the device is out of battery, the charging indicator will flash a red light three times.
- To charge, place the device horizontally (with the buttons facing down) on the charging stand, connect the charging cable and wall adapter, and plug the adapter into a household electrical outlet.
- While charging, the charging indicator will flash a red light.
- When the battery is fully charged, the charging indicator will remain red.
- A full charge takes about 3 hours and allows the device to run for up to 200 times (~1 minute per time)

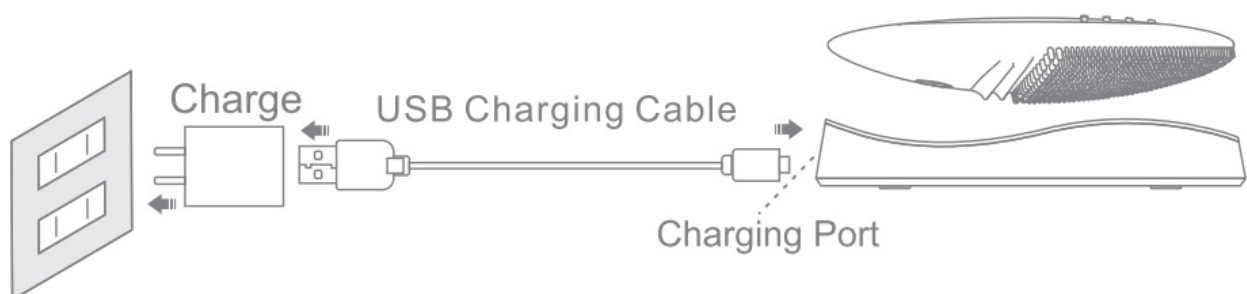

Preparation before use

- Prepare your desired facial cleanser.
- Rinse the device with water.
- Remove any makeup as per your regular routine.

1. **Apply to cleanse**

Apply the desired facial cleanser onto your face, power on the device, and select the preferred vibration intensity.



2. **Cleansing**

15 seconds on each cheek – go from the bottom up;

15 seconds on the forehead – swipe from the middle to either side;

15 seconds on nose and around eyes – go up and down the sides of the nose; lower the intensity when going around the eyes



3. **Power of**

After cleansing, long press the power button to power off the device.

4. **Rinse**

Rinse with water and dry your face. Apply a toner or essence after cleansing.

The device is set to automatically power off after 5 minutes of continuous usage.



Maintenance

- Power off the device before cleaning.
- Protect the device from moisture and keep it away from the dishwasher or microwave oven.
- Do not use water above 104°F or sharp, corrosive, or volatile thinning cleaners.
- Rinse the device directly with clean water. Allow it to air dry or wipe it off with a soft, dry cloth. The charging port should not be exposed to water.
- Do not use the device with excessive force to prevent damaging the massage head.
- To maintain device health, fully charge the battery at least every 2-3 months, even when it is placed in storage.

Waste Treatment

The marking on this product, packaging material, or accessory indicates that the material is made from a recyclable material. Separate waste into different recycling levels to facilitate the recycling of useful materials.

The lithium battery inside this device should be disposed of safely and separately from the device. Do NOT attempt to replace the battery yourself. The device must be powered off when attempting to remove the battery.

Steps to remove the battery:

1. Remove the decorative silicone case on the back of the device.
2. Remove the screws that hold the outer casing in place and remove the bottom cover.
3. Pull out the battery leads and remove the battery.



Troubleshooting

Situation	Possible Cause	Solution
The machine does not start	Low battery	Fully charge the device and try powering on again
The light on the indicator does not light up when charging	The battery is not fully charged	Fully charge the device and try powering on again
	The battery has reached the end of its life	Contact customer support department for replacement or repair
Charging light is not lit	The battery is in standby mode	Charge the battery for 6-30 minutes to exit standby mode. Allow the battery to fully charge.
	Battery is out of service	Contact customer support department for replacement or repair
If the device still does not work properly, please stop using and contact the customer support department.		

Environmental Protection

The symbol on this product in the instruction manual or on the packaging indicates that this product cannot be disposed of as general household waste at the end of its useful life. Please consult your local government for recycling according to the classification of waste.

Specification

- **Product Name:** Sonic Cleanser
- **Model:** KD303

Voltage	3.7V~	Rated Power	2.0W
Charging Power Supply	5V 1A	Net Weight	0.12lb
Product Dimensions	100x70x21mm	Gross Weight	0.43lb

Packing List

- 1 main unit
- 1 charging cable
- 1 manual
- 1 charging stand.

WARRANTY

EZBasics offers an extensive warranty for all products that extends through 1 YEAR of the delivery date. This warranty covers quality related issues and product defects.

If you are past the 30-day return period on Amazon, contact us directly via the “Contact Seller” option on your Order Details. If the product is not working properly, we can send a replacement product after we receive the original defective item and our team has a chance to inspect and verify the issue(s).

This warranty does not apply in cases of abuse, mishandling, or unauthorized repair of the product.

Please keep the original box, packing materials and all documentation if service is required.

FAQs

What is the EZBASICS KD303 Facial Cleansing Brush?

The EZBASICS KD303 Facial Cleansing Brush is a sonic facial cleansing tool designed to provide deep cleansing, gentle exfoliation, and facial massage for a vibrant, youthful complexion.

How does the EZBASICS KD303 work?

The EZBASICS KD303 uses sonic technology to deliver vibrations that help dislodge dirt, oil, and makeup from the skin, ensuring a thorough cleanse and promoting blood circulation.

What material is the EZBASICS KD303 made from?

The EZBASICS KD303 is made from ultra-hygienic soft silicone rubber, which is gentle on the skin and easy to clean.

How often should I use the EZBASICS KD303?

You can use the EZBASICS KD303 daily as part of your skincare routine for optimal results, but it's best to start with a few times a week and adjust based on your skin's response.

What are the benefits of using the EZBASICS KD303?

The EZBASICS KD303 helps remove stubborn makeup, deeply cleanses pores, reduces blackheads, exfoliates the skin, and provides a soothing massage to enhance circulation and collagen production.

How do I charge the EZBASICS KD303?

The EZBASICS KD303 is equipped with induction charging technology. Simply connect the included charging cable to a USB power source, and it takes about 3 hours for a full charge.

How long can I use the EZBASICS KD303 on a full charge?

A full charge of the EZBASICS KD303 allows for up to 200 uses, making it convenient and long-lasting.

How should I clean the EZBASICS KD303 after use?

To clean the EZBASICS KD303, rinse the brush head under warm water and apply a mild soap or cleanser. Gently scrub the bristles, then rinse thoroughly and let it air dry.

Is the EZBASICS KD303 a good gift option?

Absolutely! The EZBASICS KD303 makes a perfect gift for friends and family members who value skincare, helping them achieve glowing, healthy skin.

What should I do if the EZBASICS KD303 doesn't turn on?

If the EZBASICS KD303 doesn't turn on, check if it's charged. If not, connect it to the charger and allow it to charge fully. If the issue persists, refer to the user manual for troubleshooting steps.

What is the design of the EZBASICS KD303?

The EZBASICS KD303 features a sleek, oval design that is ergonomic and easy to hold, making it convenient for single-handed use during your cleansing routine.

What color options are available for the EZBASICS KD303?

The EZBASICS KD303 is available in a light blue color, providing a stylish and modern look for your skincare routine.

How do I turn on the EZBASICS KD303?

To turn on the EZBASICS KD303, simply press the power button. You can then select your desired speed setting by pressing the button again.

 
How do I know when the EZBASICS KD303 is fully charged?

The EZBASICS KD303 typically has an indicator light that shows when it is charging and turns off or changes color when fully charged.

What is the warranty on the EZBASICS KD303?

The warranty details may vary, but typically, the EZBASICS KD303 comes with a one-year warranty that covers manufacturer defects. Always check the warranty policy when purchasing.

Video-EZBASICS KD303 Facial Cleansing Brush



[Download this Manual: EZBASICS KD303 Facial Cleansing Brush User Manual](#)
[Cleansing-Brush.mp4](#)

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.