



[Home](#) » [Ezurio](#) » **ezurio Sona NX611 Series Wi-Fi 6 Module Owner's Manual** 

Contents [[hide](#)]

- 1 ezurio Sona NX611 Series Wi-Fi 6 Module
- 2 Introduction
- 3 Requirement
- 4 Yocto Integration: Build Environment Setup
- 5 Wi-Fi: Configuring the Supplicant or NetworkManager
- 6 FAQ
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts



ezurio Sona NX611 Series Wi-Fi 6 Module



Specifications

- Product Name: Sona NX611 Evaluation Package
- Series: Sona NX611
- Wi-Fi Standard: Wi-Fi 6
- Form Factors: SIP module, M.2 1216 module, M.2 2230 module

Introduction

This guide covers hardware and software setup for implementing our Sona NX611 Series Wi-Fi 6 module in Yocto Linux. The Sona NX611 is offered in three form factors: the SIP module, the M.2 1216 module and the M.2 2230 module. Since the M.2 2230 is a pluggable edge-connector module, it's easier to integrate for evaluation, and is recommended. This guide assumes integration of the M.2 2230 module.

Table 1: Sona NX611 variants

Form Factor	Wi-Fi	BT	Part Number
SIP	<i>SDIO</i>	<i>UART</i>	• 453-00155 (2 RF trace pins) • 453-00156 (1 RF trace pin)

<i>M.2 2230</i>	<i>SDIO</i>	<i>UART</i>	• 453-00165 (1 RF connector) • 453-00166 (2 RF connectors)
<i>M.2 1216</i>	<i>SDIO</i>	<i>UART</i>	• 453-00157 (2 RF connectors) • 453-00158 (1 RF connector) • 453-00160 (Chip antenna)
Requirement			

Requirement

- iMX8MP EVK (or any platform which has an M.2 interface with SDIO)
- Sona NX611 SDIO M.2 2230 card (either 453-00165 or 453-00166)
- Sona NX611 evaluation package (Please contact Ezurio FAE to get this evaluation package)
- Development PC with Yocto build environment
- Terminal software for console message dump
- AP/Router which is able to support 2.4G/5GHz band

Yocto Integration: Build Environment Setup

1. Modify the **bblayers.conf** under **imx-yacto-bsp/build/conf** as below:

```
BBLAYERS = "\ ${BSPDIR}/sources/poky/meta \ ${BSPDIR}/sources/poky/meta-
yocto \ \ ${BSPDIR}/sources/meta-openembedded/meta-oe \
${BSPDIR}/sources/meta-openembedded/meta-multimedia \ \
${BSPDIR}/sources/meta-fsl-arm \ ${BSPDIR}/sources/meta-fsl-arm-extra \
${BSPDIR}/sources/meta-fsl-demos \ ${BSPDIR}/sources/meta-summit-radio-
eng/meta-summit-radio \
```

2. Change kernel config and rebuild kernel: cd ~/imx-yacto-bsp/ source setup- environment build/ bitbake -c menuconfig virtual/kernel

Kernel Config Modification:

- **Wi-Fi:**

Set cfg80211 to 'm' instead of build-in. Networking support → Wireless <m>

cfg80211

Disable the firmware sysfs fallback mechanism. Device drivers → Generic Driver options → Firmware loader → [] Enable the firmware sysfs fallback mechanism

- **BT:**

Disable networking support for Bluetooth: Networking support → < > Bluetooth

In iMX8M platform, to integrate BT via UART, you may need to set “i.MX SDMA support” to M as kernel module instead of built-in. In newer i.MX BSP, the built-in module may be initialized before root file system loading and cause SDMA initialization failure. Device drivers → DMA Engine support → [M] i.MX SDMA support

3. To integrate Wi-Fi functionality, add the following packages in IMAGE_INSTALL in local.conf under imx-yacto-bsp/build/conf. Be sure to select the correct firmware recipe: IMAGE_INSTALL:append = “ kernel-module-nx-backports \ nx61x-firmware \ summit-suplicant-nx \ summit-networkmanager-nx \ summit-networkmanager-nx-nmcli \

Additional packages may be needed to add imx-sdma kernel module/firmware and packagegroup-tools-bluetooth in IMAGE_INSTALL in local.conf under imx-yacto-bsp/build: IMAGE_INSTALL:append = “ packagegroup-tools-bluetooth \ kernel-module-imx-sdma \ firmare-imx-sdma-imx7d“

Several device tree changes are required on the iMX8MP EVK for compatibility with the NX611 SDIO interface. The SDIO bus signal strength may need to reduce from the default value to improve signal integrity to get better performance result. The following is an example of device tree modification in the iMX8MP EVK: imx8mp-evk-usdhc1-m2.dts. &iomuxc { pinctrl_usdhc1: usdhc1grp { fsl,pins = <

MX8MP_IOMUXC_SD1_CLK__USDHC1_CLK 0x190

MX8MP_IOMUXC_SD1_CMD__USDHC1_CMD 0x1d0

MX8MP_IOMUXC_SD1_DATA0__USDHC1_DATA0 0x1d0

MX8MP_IOMUXC_SD1_DATA1__USDHC1_DATA1 0x1d0

MX8MP_IOMUXC_SD1_DATA2__USDHC1_DATA2 0x1d0

MX8MP_IOMUXC_SD1_DATA3__USDHC1_DATA3 0x1d0

```

        MX8MP_IOMUXC_SD1_DATA4__GPIO2_IO06    0x10
    >;
};

pinctrl_usdhc1_100mhz: usdhc1-100mhzgrp {
    fsl,pins = <
        MX8MP_IOMUXC_SD1_CLK__USDHC1_CLK      0x190
        MX8MP_IOMUXC_SD1_CMD__USDHC1_CMD      0x1d0
        MX8MP_IOMUXC_SD1_DATA0__USDHC1_DATA0   0x1d0
        MX8MP_IOMUXC_SD1_DATA1__USDHC1_DATA1   0x1d0
        MX8MP_IOMUXC_SD1_DATA2__USDHC1_DATA2   0x1d0
        MX8MP_IOMUXC_SD1_DATA3__USDHC1_DATA3   0x1d0
        MX8MP_IOMUXC_SD1_DATA4__GPIO2_IO06     0x10
    >;
};

pinctrl_usdhc1_200mhz: usdhc1-200mhzgrp {
    fsl,pins = <
        MX8MP_IOMUXC_SD1_CLK__USDHC1_CLK      0x190
        MX8MP_IOMUXC_SD1_CMD__USDHC1_CMD      0x1d0
        MX8MP_IOMUXC_SD1_DATA0__USDHC1_DATA0   0x1d0
        MX8MP_IOMUXC_SD1_DATA1__USDHC1_DATA1   0x1d0
        MX8MP_IOMUXC_SD1_DATA2__USDHC1_DATA2   0x1d0
        MX8MP_IOMUXC_SD1_DATA3__USDHC1_DATA3   0x1d0
        MX8MP_IOMUXC_SD1_DATA4__GPIO2_IO06     0x10
    >;
};

```

Hardware handshaking is required on the Bluetooth UART. Check if the UART port in use is configured with CTS/RTS handshaking enabled. The UART interface on the M.2 slot is uart1 (ttymxc0) on the iMX8MP EVK. The iMX8MP EVK device tree enables handshaking by default on uart1.

```

Imx8mp-evk.dts
&uart1 { /*BT*/
    pinctrl-names = "default";
    ...
    fsl,uart-has-ctsrts;
    status = "okay";
};

```

By default, the dtb file, imx8mp-evk.dtb, is only to enable PCIE interface. To enable the SDIO bus, you need to use imx8mp-evk-usdhc-m2.dtb instead.

4. Build core-image-minimal image:

```
bitbake core-image-minimal
```

5. Program the SD card with the whole image including kernel and root file system: `sudo dd if=xxxx.wic of=/dev/mmcblk0 bs=1M`

Wi-Fi: Configuring the Supplciant or NetworkManager

The Wi-Fi connection can be configured either by NetworkManager or supplciant.

After driver loading, two virtual interfaces will come out, "mlan0" and "uap0" for STA and

AP modes.

If you only want to run in either STA or AP mode, you may need to disable the other interface to reduce the RF sharing.

Here is the example while only run NX611 in STA mode.

- `ifconfig uap0 down`

You can run either `nmcli` or `sdcsupp` on “`mlan0`” interface.

Configuration with NetworkManager

Here is an example to set up a connection with a WPA3-SAE network using NetworkManager.

```
nmcli conn add con-name NETGEAR84-5G ifname mlan0 type wifi ssid NETGEAR22-5G wifi.powersave 2 802-11-wireless- security.key-mgmt sae 802-11-wireless-security.psk miles123
```

Configuration with sdcsupp

You can also use the supplicant (`sdcsupp`) directly with a configuration file.

```
sdcsupp -Dnl80211 -c /etc/wpa_supplicant.conf -i mlan0 -B -dddddd

/etc/wpa_supplicant.conf
ctrl_interface=/var/run/wpa_supplicant
update_config=1
sae_groups=19
sae_pwe=2

network={
ssid="NETGEAR84-5G"
key_mgmt=SAE
sae_password="miles123"
ieee80211w=2
}
```

BT: Running btattach to bring up hci interface

The traditional `btattach` implementation for BT serial interface may be used for BT support. Upon successfully loading this firmware by the Wi-Fi driver, `btattach` may be issued.

For example:

- `/usr/bin/btattach -B /dev/ttymx0 -P h4 -S 3000000 2>&1 > /dev/null&`

An alternative method to using `btattach` is to use the `serdev` driver `btnxpuart.ko` (available with kernel version 4.12 and higher). This mechanism is configured in the device tree.

Here is a sample device tree snippet configuring a serial port for use with the NX 611 radio on the iMX8mp-evk evaluation board.

- `&uart1 {`
- `bluetooth {`
- `compatible = "nxp,88w8987-bt";`
- `fw-init-baudrate = <3000000>;`
- `};`
- `};`

Note – To eliminate race conditions that occur when loading the BT firmware via the Wi-Fi driver, the Wi-Fi driver, `moal.ko`, should be instructed to load just the Wi-Fi firmware, `sd_w61x_v1.bin.se`. This change results in the BT firmware always being loaded by the `serdev` driver.

Revision History

Version	Date	Notes	Contributor(s)	Approver
0.1	6 June 2024	Preliminary Release	Miles Chung	Bob Monroe

Ezurio’s products are subject to standard Terms & Conditions.

<https://www.ezurio.com/>

© Copyright 2024 Ezurio All Rights Reserved

- **Americas:** +1-[800-492-2320](tel:8004922320)

- **Europe:** +44-1628-858-940
- **Hong Kong:** +852-2762-4823

FAQ

- **Q: Which form factor is recommended for integration?**

A: The M.2 2230 module is recommended for easier integration and evaluation.

- **Q: How to disable networking support for Bluetooth?**

A: In the kernel configuration, navigate to Networking support and unselect Bluetooth option.

- **Q: What modifications are needed for integrating BT via UART on iMX8M platform?**

A: Set i.MX SDMA support to 'M' as a kernel module instead of built-in.

Documents / Resources

	ezurio Sona NX611 Series Wi-Fi 6 Module [pdf] Owner's Manual SIP, M.2 2230, M.2 1216, Sona NX611 Series Wi-Fi 6 Module, Sona NX611 Series, Wi-Fi 6 Module, Module
---	--

References

- [🇮🇳 Terms and Conditions for Sales | Ezurio](#)
- [User Manual](#)

Related Posts



[BABSON DIAGNOSTICS WFASPD Wi-Fi Module User Guide](#)

WFASPD Wi-Fi Module User Guide Unlicensed

Transmitters: Approved Antennas List Manufacturer

Antenna Description Type Peak Gain (dBi) Min...

[STARLINK UTW-231 Wi-Fi Module Installation Guide](#)



STARLINK UTW-231 Wi-Fi Module Setting up the Wi-Fi Router The Wi-Fi Module Model UTW-231 is intended to be...

DO MU1MWMO146 Wi-Fi and BT Mod



[SECO MU1MWMO146 Wi-Fi and BT Module User Manual](#)

SECO MU1MWMO146 Wi-Fi and BT Module Specifications Model Name: MU1MWMO146 FCC ID: 2ALZB-MU1MWMO146 MU1MWMO146 User Manual for FCC...



[Honeywell PM23c/PM43/PM43c Wi-Fi Plus Bluetooth Module Installation Guide](#)

Honeywell PM23c/PM43/PM43c Wi-Fi Plus Bluetooth Module Wi-Fi + Bluetooth Module Installation Instructions

Caution: Turn the printer off and...

■ Ezurio

◆ Ezurio, M.2 1216, M.2 2230, Module, SIP, Sona NX611 Series, Sona NX611 Series Wi-Fi 6 Module, Wi-Fi 6 Module

—Previous Post

[ezurio NX611 Series Evaluation Package Yocto Integration Instructions](#)

Next Post—

[ezurio Sona NX611218 Chip Antenna Module Owner's Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.