



F&D RW40
Retro Wireless
Bluetooth Speaker
Product Manual

Please make sure to read this manual carefully and keep it properly


Contents [[hide](#)]

- 1 Package Content
- 2 Specifications
- 3 Operation Guide
- 4 CAUTION
- 5 CE DOC
- 6 FCC STATEMENT
- 7 Microphone Quick Guide
- 8 WARRANTY CARD
- 9 WARRANTY TERMS & CONDITIONS
- 10 Documents / Resources
 - 10.1 References


Package Content



 
Speaker*1



Signal cable*1

 

AC Power cable*1

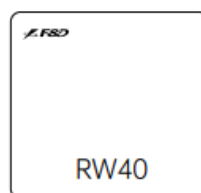 


User manual *1

Specifications

Model No.: RW40	BT Version: V5.3
Driver: Woofer: 4"*1 Tweeter: 1.25"*2	Operating Frequency: 2400MHz-2483.5M Hz

Output Power (RMS): 40W (Woofer 20W+ Tweeter10W*2)	Frequency Response: 50Hz~20KHz
Source: BT/AUX(3.5mm)/USB	S/N Ratio: ≥70dB
Battery: 11.1V/4000mAh	Control: Buttons+ Knobs + APP
Power Input: 100-240V~50/60Hz 0.85A	Wireless Microphone: Up to 2
Product Weight: 2.6kg	Product Size: W257*D140*H164mm

 *The above measured data is for reference only, please refer to the actual product for any discrepancies.

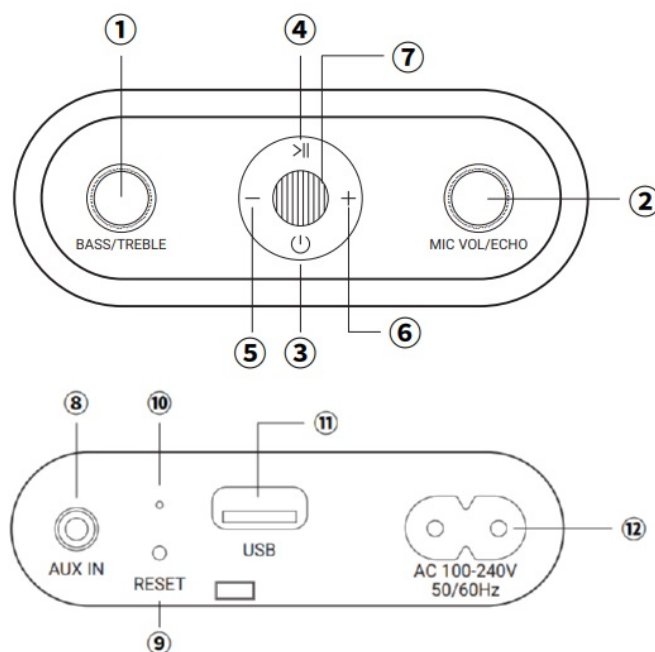

1. BASS/TREBLE
2. MIC VOL/ECHO
3. Power/Source
4. Play/Pause/⌂
5. Volume -/Previous
6. Volume +/Next
7. Standby Indicator
8. AUX IN
9. Reset
10. Charging Indicator

11. USB Slot

12. Power Input

Operation Guide

(1) BASS/TREBLE

- Rotate directly to adjust the bass volume.
- Short press and then rotate to adjust the treble volume.

(2) MIC VOL/ECHO

- Rotate directly to adjust the microphone volume.
- Short press and then rotate to adjust the ECHO.

(3) Power/Source

- Long press for 2 seconds to power on/off.
- Short press to switch between audio sources—Bluetooth, AUX mode, and USB mode.

(4) Play/Pause/

- Short press to pause/play music. (Note: In AUX mode, short press the button to mute the speaker.)
- When the speaker is connected to a Bluetooth device, long press for 2 seconds to disconnect the connected Bluetooth device and enter Bluetooth pairing mode.

(5) Volume -/Previous

- Short press to decrease the volume. In Bluetooth and USB mode, long press to switch to the previous song.

(6) Volume +/Next

- Short press to increase the volume. In Bluetooth and USB mode, long press to switch to the next song.

(7) Indicator Light :

- Standby indicator: Bluetooth/Orange light — AUX/Orange light — USB/Orange light. When switching audio sources, the indicator light flashes orange. When the audio source is connected, the prompt tone sounds and the indicator light remains orange. When the power is low, the indicator light flashes red.
- Charging indicator: speaker being charged: red indicator light is always on; speaker fully charged: green indicator light is always on.

(8) AUX Mode:

- Connect the speaker to the device with the signal cable and switch to AUX mode to play music.

(9) USB Mode:

- Insert a USB flash drive and switch to USB mode to play music.


(10) Power Input:

- Plug in the AC power cord and connect the power supply.

(11) Restore Factory Settings :

- Long press the “+” button for 8 seconds to clear the speaker’s Bluetooth pairing history, reset the volume to default, and switch to Bluetooth mode (microphones will synchronously reset the default volume and Original Mode if connected).

(12) Bluetooth Mode :

- Press the “” button to switch to Bluetooth mode (the standby indicator light flashes when Bluetooth is not paired), turn on the device’s Bluetooth, search for “F&D RW40”, and click to pair.
- When pairing is successful, the Bluetooth mode tone sounds and the standby indicator light is always on.
- If a password is required, please input “0000”.

(13) TWS Operating Instructions

- TWS connection is supported and up to two RW40 speakers can be connected to achieve TWS stereo sound. The operation is as follows:
- Turn on the speakers and switch to Bluetooth mode, and make sure they are not connected to any Bluetooth device.
- Double-click the " >|| " button on either speaker to enter the TWS pairing state.
- Once connected, the tone sounds, the host speaker standby indicator flashes slowly, and the vice speaker standby indicator is always on.
- Turn on the device's Bluetooth and search for "F&D RW40" to connect. After successful connection, both standby indicator lights are always on and ready to play music.
- Double-click the ">||" button on either speaker to disconnect the TWS connection.

(14) Auto Shutdown

- If there is no audio connection, the speaker will automatically turn off after 15 minutes of inactivity without button presses or audio playback.

(15) Speaker is silent, what should I do?

- Please check if the battery is sufficient.
- Please check if the volume is minimized or if you have pressed pause in AUX mode.
- Please check if the Bluetooth device is turned on and whether the connection is successful or normal.
- In Bluetooth mode, if the sound is cut off, please move the speaker closer to the Bluetooth device.
- In Bluetooth mode, to ensure the best use of the speaker, please set the Bluetooth device to an appropriate volume.
- If the Bluetooth connection fails, please restart the speaker, and then reconnect the Bluetooth device.
- For further assistance or inquiries, please contact us (refer to the after-sales service card for details).

CAUTION

- No exposed flame sources, such as lighted candles, should be placed on the speaker.
- Ventilation holes should not be covered with items such as newspapers, tablecloths and curtains that would prevent ventilation.
- The speaker must not be left in a wet environment, and must not be exposed to rain or strong shocks.
- Items such as vases filled with liquids should not be placed on the speaker.
- If debris or liquid accidentally falls into the speaker, immediately disconnect the power supply and have it inspected by a professional before use.
- Do not open the back cover so as to prevent electric shock and other accidents. If the speaker needs repairing, contact the company's personnel for service.
- This product uses indoor 100V-240V~50/60Hz 0.85A AC power supply.
- Operating ambient temperature: 0 – 45°C, Charging ambient temperature: 0-30°C
- Altitude not higher than 2000m.
- Batteries must not be squeezed or cut, as this may cause an explosion.
- Do not expose the battery to extremely high temperatures/low air pressure, as this may cause the battery to explode or trigger the leakage of flammable liquids or gases.
- If the battery is not replaced properly there is a risk of explosion, and it can only be replaced with the same type or equivalent type of battery.

CE DOC

Hereby, SHENZHEN FENDA TECHNOLOGY CO., LTD. declares that the radio equipment type RW40 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://server-in.fendasmart.com/project/src/speaker/RW40/cedoc/index.html>

Bluetooth: 2400MHz-2483.5MHz (10dBm)

EU regulatory conformance: RF exposure information: The EIRP power of the device at maximal case is below the exempt condition, 20mW specified in EN62479: 2010.

RF exposure assessment has been performed to prove that this unit will not generate the harmful EM emission above the reference level as specified in EC Council Recommendation(1999/519/EC).

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

 
Warning: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Microphone Quick Guide

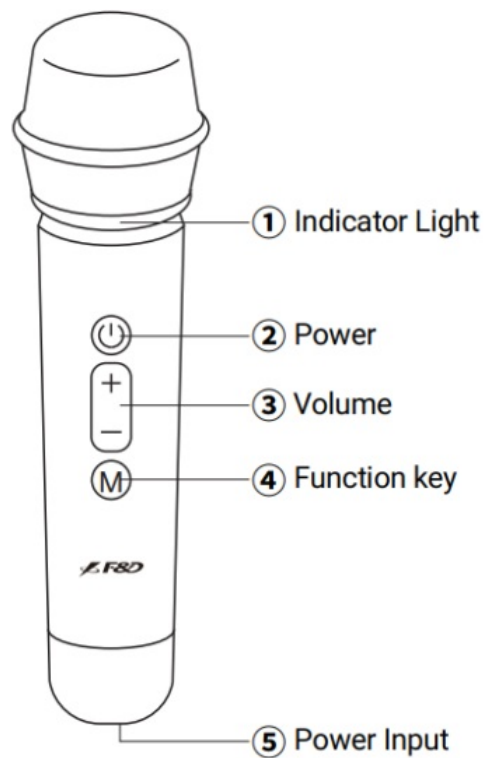

Power

- Long press to switch on/off. Power on, indicator light constant; power off, indicator light off.

Volume

- Short press volume +, the indicator light flashes once, and the microphone volume increases.
- Short press volume -, the indicator light flashes once, and the microphone volume decreases.
- Volume adjustment ranges from 0 to 9. When the volume is increased to the maximum/decreased to the minimum, the indicator light flashes twice quickly.

Function key

- Short press to switch between Karaoke sound modes (Original Mode, Singing Idol Mode, Robot Mode, Child Mode, Studio Mode, Host Mode, Popular Mode).
- Long press to switch between 5 frequencies, and the indicator light flashes twice.

Power Input

- Connect the Type-C cable for charging. When charging, the red light is on. When fully charged, the green light is on (the red light flashes slowly when the battery is low, please charge in time).

What to do when microphone cannot connect to speaker or makes no sound?

- Make sure microphone can be powered on normally and the battery is sufficient.
- Power on speaker first, then turn on microphone. Microphone should automatically connect to speaker.
- Within 30 seconds after speaker is powered on, while microphone is off, press and hold “ ” button and “M” button on microphone for 3 seconds. The red indicator light on microphone flashes rapidly, initiating the pairing. Once the connection is successful, the red indicator light stays on.

What to do when microphone makes abnormal sounds, noise, or intermittent sound?

- Note that microphone has a built-in Robot sound mode; please differentiate it from other sounds.
- While microphone is connected to speaker, press and hold “M” button on microphone for 2 seconds.
- The red indicator light on microphone flashes twice and then stays on. Test microphone again to confirm normal operation. If the issue persists, repeat the process until the sound is normal.

Note: Microphone automatically turns off when being charged and cannot be used.

WARRANTY CARD

DISTRIBUTOR 'S COPY

WARRANTY REGISTRATION CERTIFICATE

First Name:.....

Last Name:.....

Address:.....

Contact No.:.....

Product Name:.....

Model No:.....

Serial No.:.....

Date of Purchase:.....

Invoice No.:.....

Retail Outlet:.....

(Please print the name & address)

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period from its date of purchase from our Authorized Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our F&D Authorized Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorized Dealer.
(Parts would be replaced when necessary)
A. Parts:_____1 year
B. Technical service free_____1 year
3. Under the following circumstances, service and parts will be chargeable even within the warranty period:
A. Failure to present the warranty card and receipt when servicing is required. Full particulars not clearly shown or alterations made against the actual information.
E.G.: Alteration of the date of purchase, serial numbers-altered or removed.
B. This unit being tampered with, altered in any way by any unauthorized technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occur in transit by or from the customer.
C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage of generator.



SHENZHEN FENDA TECHNOLOGY CO., LTD.

Add: Fenda Hi-Tech Park, Zhoushi Road, Shiyan
Town, Baoan District, Shenzhen City, Guangdong, China

P.C.: 518108 <https://en.fenda.com/>


Tel:+86-755-27486668 Fax:+86-755-27353888



APP Installation

<https://fendasmart.com/project/src/downapp/index.html>

Documents / Resources

	F and D RW40 Retro Wireless Bluetooth Speaker [pdf] Instruction Manual RW40 Retro Wireless Bluetooth Speaker, RW40, Retro Wireless Bluetooth h Speaker, Wireless Bluetooth Speaker, Bluetooth Speaker, Speaker
---	--

References

- [User Manual](#)

■ F and

D

◆ Bluetooth Speaker, F and D, Retro Wireless Bluetooth Speaker, RW40, RW40 Retro Wireless Bluetooth Speaker, speaker,
Wireless Bluetooth Speaker

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.