



## F D F380X 2.1 Computer Multimedia Speaker User Manual

[Home](#) » [F D](#) » F D F380X 2.1 Computer Multimedia Speaker User Manual 



[www.fenda.com](http://www.fenda.com)



**F380X User Manual**  
2.1 Computer Multimedia Speaker

### CAUTION

- Do not place the system in a high-temp and humid environment to prevent It from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents, do not open the right-side panel cover for repair without

any professional guidance.

- In case fragments or other liquids are accidentally sprinkled inside the cabinet, please switch off the power immediately In case of repair pls Come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work.
- Keep it safe from water drops or splashing water, and no liquid container is allowed to be put on its top side.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked. Do not keep It close to the fire.

## Contents

### 1 FEATURES

### 2 SYSTEM COMPOSITION

### 3 Front panel keys

### 4 The function of Panel keys

### 5 Remote control

### 6 Pairing a Bluetooth device supporting NFC

### 7 Specifications

### 8 Troubleshooting

### 9 Documents / Resources

### 10 Related Posts

## FEATURES

 
- Seamlessly stream music from your iPad, iPhone, Android device, laptop, or other Bluetooth-enabled No wires means your mobile devices stay mobile.
- Bluetooth & NFC-enabled speakers allowed you to stream your music from your smart device.
- Innovative, colorful LED brightens the listening
- USB/SD/FM/AUX you can play your entire collection with ease
- Built-in OCL Amplifier,super-bass design for subwoofer and with the output of 3 channels.
- Powerful and perfect transformer to assure transforming efficiency and strong power output.
- Adaptable to any type of equipment with an audio system such as PC, VCD, DVD, LCD&TV, etc.

## SYSTEM COMPOSITION

 
• Subwoofer unit	1pc	• Operation manual
• Plastic satellite speakers	2pcs	• 3.5mm to RCA stereo cable
• Remote control	1pc	• RCA to RCA stereo cable

## INSTALLATION GUIDE: (See the below guiding pictures)

1. Connect the satellite speaker cable to the output port of the subwoofer in the respective color port
2. Insert the Input signal cable(RCA Socket) into the subwoofer input port and the other end with the output port of your AudioNideo system in the respective color port.

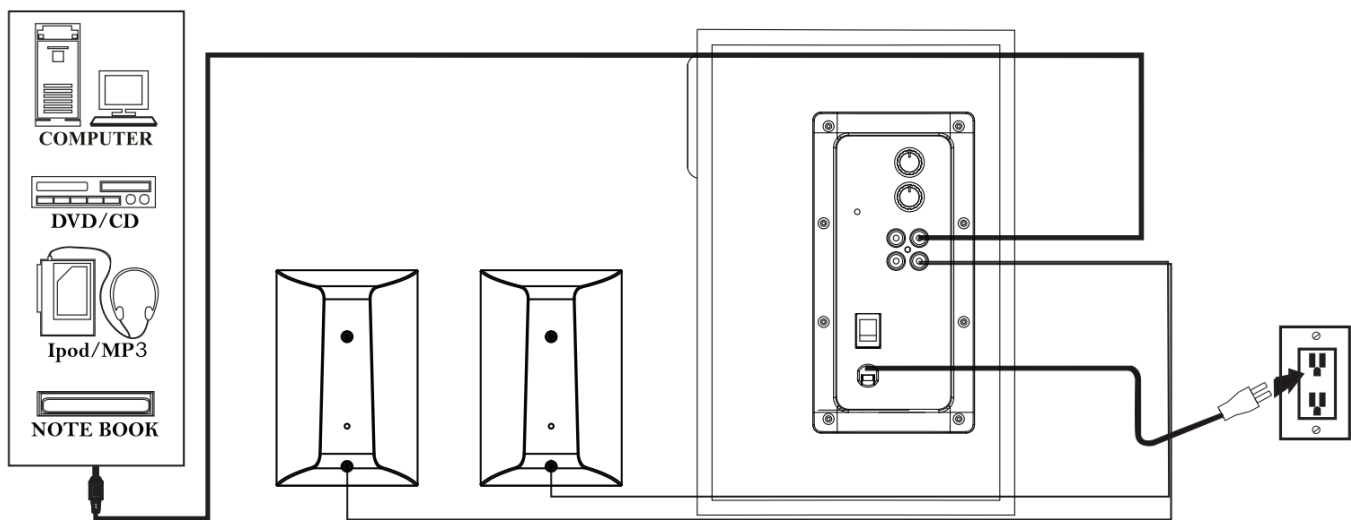



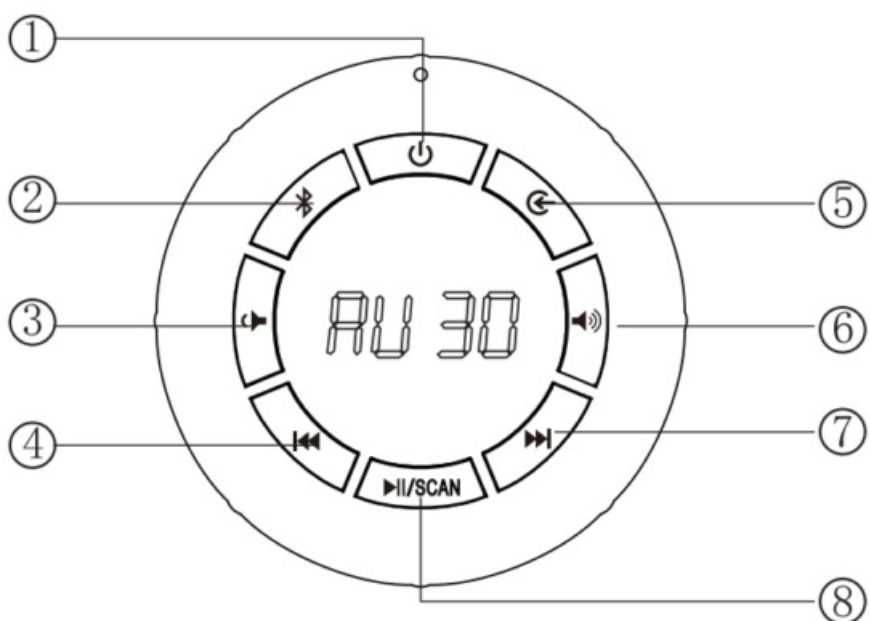

## Front panel keys



1. Standby button
2. Bluetooth button
3. Volume decrease button
4. Previous/CH- button
5. Source button
6. Volume increase button
7. Next/CH+ button
8. Play/Pause/FM auto scan button

## The function of Panel keys

- A.  : Turn on/off the unit.
- B.  : short press to Bluetooth mode, long press entering pairing mode, and the display will flash fast.
- C.   : Decrease or increase the volume level.

D.: Switch between BT, AUX, USB/SD, and FM mode.

E. **▶II/SCAN**

(1). USB/SD Mode: short press for play/pause music.

(2). FM Mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.

(3). Bluetooth mode: short press to play/pause music.

F. **II◀◀**

(1). USB/SD mode: Short press to select a previous song and long press to select the previous folder.

(2). FM mode: Short press to select a previously-stored station.

(3). Bluetooth mode: short press to select the previous song.

G. **▶▶II**

 
(1). USB/SD mode: Short press to select next song and long press to select next folder.


(2). FM mode: Short press to select the next stored station.


(3). Bluetooth mode: short press to select the next song.


## Remote control


### The remote control keys function

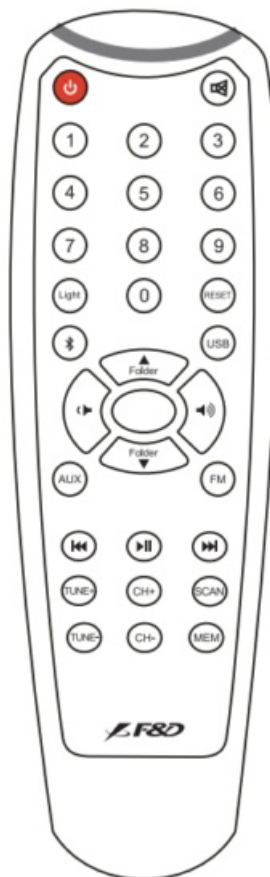

A.  : turn on/off the unit.

B. AUX,  USB (For USB /SD Mode), and FM key: short press the keys to switch to respective modes.

C.  : press it to mute or unmute the sound.

D.  : increase or decrease master volume.

E. Tune+/-: FM mode:

Fine Tuning: Short press to increase or decrease one step (100Khz),

Manual Tuning: Long press of this key works for Manual tuning.

F. MEM: Short press of this key works to store tuned station through Fine or Manual tuning.

G. CH+/-:FM mode: select stored station.

H. Scan: FM mode: Short press to start Auto Search & this will store the found frequencies (channels)

automatically.

I. Enter: confirm selection and return to the main screen.

J. Light: Short press to turn on/off the lights.

K. 0~9 number keys:


1. USB/SD source: directly press numeric keys through the remote to select your favorite song if you know the song number in the folder. The system will automatically play the last song of the folder if you press the number excess of the song number of that folder.
2. FM source: directly press numeric keys through the remote to select your favorite station if you know the station number (1~100). Or press 3 or 4 digits of frequency to play that station, for example, 1026 for 102.6 MHz station.

K. Play/Pause: USB/SD and BT source, short press to play or pause.

L. Prev: USB/SD and BT source, short press to select the previous song.

M. Next: USB/SD and BT source, short press to select next song.

N. Folder ▲/▼ : USB/SD source, short press to select next/previous folder.

O.  : short press to Bluetooth mode and Long press entering pairing mode, and the display will flash fast.

P. Reset: short press to go to default settings.

## Pairing a Bluetooth device supporting NFC

If your Bluetooth device supports Near Field Communication (NFC), make sure that the NFC feature is activated. Touch the NFC area of your Bluetooth device to the top of F380X in order to automatically pair.

Note: 1. If your phone has NFC support but it is running an OS below Android 4.1, you will need to download an NFC Bluetooth APP from Google play or a similar online store.

**Notice:** After switching to a Bluetooth source, the unit will automatically search the Bluetooth device and connect it.

If the device was paired before. If can't find the paired device, it will enter pairing mode automatically and the LCD display will flash quickly. The Bluetooth device should active "Bluetooth" function during pairing and search for "Fenda F380X".

## Compatibility

Compatible with Smartphones and tablets supporting Bluetooth (A2DP) protocol


## Specifications



Output power(RMS): 28W4-13WX2 Speaker unit: Full Range Speaker: 3', Subwoofer: 5.25' Frequency response: Subwoofer: 301-1z-90Hz Satellite: 110Hz-20KHz Power supply: 220-240V-50/60Hz 0.4A	Signal input:RCA jack S/N Ratio: 70dB Separation: 40dB Unit size: Subwoofer: W195XD260XH296MM Satellite: W115XD104XH176mm Net Weight: 4Kg
--	---

## Troubleshooting

Problem	Possible Cause	Solution
F&D system does not turn on	Power cord is not connected to the power	Check connection
Sound reproduction is too soft	The volume of the F&D System set too low	Increase the volume using the Volume button. re-set to increase the volume of the source device
F&D System does not respond to the remote control.	The battery is empty	Replace the battery, observe correct polarity at the insertion
No sound reproduction	The source device does not produce any signal.	Digital output on the source device is not activated
	Cable, not correctly connected faulty cable.	Check the connection of the source device to the R&D System and change the cable if necessary.
	Distance is far from the device in Bluetooth mode	Put your Bluetooth device close to the speaker
	Bluetooth device not connected successfully	Please restart the speaker and try again
Speaker can not connect to desktop or notebook through Bluetooth	Driver not installed in the driver software.No driver installed on desktop or notebook	Find a desktop or notebook service to get the right Bluetooth driver software and install

## WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services  no product within the warranty period from its date of purchase from our Authorised Dealer.

- The warranty covers services by our  to Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of a loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our  no Authorised Dealer. (Parts would be replaced when necessary)
  - Parts..... 1 year
  - Technical service free .....1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
  - Failure to present the warranty card and receipt when servicing is required. Full particulars not clearly shown or alterations made against the actual information. For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
  - This unit is being tampered with, altered in any way by any unauthorized technicians, or has been subjected to misuse, negligence, or accident. This guarantee does not cover damage occurring in transit by or from the customer.
  - The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal

voltage, or the usage of a generator.

**Shenzhen Tenda Technology Co., Ltd.**

Add: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, China

P.C.: 518108

<http://www.fenda.com>



**WARRANTY CARD END-USER'S COPY**

**WARRANTY REGISTRATION CERTIFICATE**

Mr./Mrs/Ms First Name: \_\_\_\_\_

Last Name: \_\_\_\_\_

Address: \_\_\_\_\_

Contact No: \_\_\_\_\_

Product Name: \_\_\_\_\_

Model No: \_\_\_\_\_

Serial No: \_\_\_\_\_


Date Purchased: \_\_\_\_\_



Invoice No: \_\_\_\_\_

Retail Outlet Where Purchased: \_\_\_\_\_

(Please print the name & address)

**WARRANTY TERMS & CONDITIONS**

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services  no product within the warranty period from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follows:

1. The warranty covers services by our  no Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our  Authorised Dealer. (Parts would be replaced when necessary)
3. Parts.....1 year  
B. Technical service free ....1 year
4. Under the following circumstances, service and parts will be chargeable even within the warranty period:
  - A. Failure to present the warranty card and receipt when servicing is required. Full particulars not clearly shown or alterations made against the actual information. For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
  - B. This unit is being tampered with, altered in any way by any unauthorized technicians, or has been subjected to misuse, negligence, or accident. This guarantee does not cover damage occurring in transit by or from the customer.
  - C. The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage, or the usage of a generator.

**Shenzhen Tenda Technology Co., Ltd.**

Add: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, China

P.C.: 518108

<http://www.fenda.com>



**WARRANTY CARD DISTRIBUTOR'S COPY**


## WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: \_\_\_\_\_  
Last Name: \_\_\_\_\_  
Address: \_\_\_\_\_  
Contact No: \_\_\_\_\_  
Product Name: \_\_\_\_\_  
Model No: \_\_\_\_\_  
Serial No: \_\_\_\_\_  
Date Purchased: \_\_\_\_\_  
Invoice No: \_\_\_\_\_  
Retail Outlet Where Purchased: \_\_\_\_\_  
(Please print the name & address)



**SHENZHEN FENDA TECHNOLOGY CO.,LTD, GUANGDONG, PRC**  
**ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, Guangdong, PRC**  
**Tel: +86-755-27486668 (800 line)**  
**Fax: +86-755-27486663 P.C.: 518108**

## Documents / Resources

	<p><a href="#">F D F380X 2.1 Computer Multimedia Speaker</a> [pdf] User Manual F380X, 2.1 Computer Multimedia Speaker, Multimedia Speaker, Speaker</p>
---	--



