



F D T-35X 2.0 Computer Multimedia Speaker User Manual

[Home](#) » [F D](#) » F D T-35X 2.0 Computer Multimedia Speaker User Manual 



T-35X User Manual

2.0 Computer Multimedia Speaker

Caution

* Do not place the system in a high-temp and humid environment, prevent it from raining or rough handling and strong shock.

* In order to avoid electric shock and other accidents, do not open the back panel cover for repair. professional guidance.

 
- * In case fragments or other liquids is accidentally sprinkled inside the cabinet, please switch off the power immediately.
- * In case of repair, Please come to the professional maintenance for help.
- * Switch off the power and take off the plug from the power jack when the system is not on work.
- * Keep it safe from water drops or splashing water, and no liquid container is allowed to be put on its top side.
- * Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.

Contents



- 1 Packaging content
- 2 Product wiring diagram
- 3 Panel key controls
- 4 Function panel instruction
- 5 Remote control
- 6 Remote control
- 7 Operation guidance
- 8 Specifications
- 9 Troubleshooting
- 10 WARRANTY TERMS & CONDITIONS *****
- *****
- 11 Documents / Resources
- 12 Related Posts

Packaging content

1. Speaker 1set
2. RCA to RCA cable 1pc
3. 3.5mm to RCA cable 1pc
4. Remote control 1pc
5. Operation manual 1pc
6. Connection cable 1pc
7. Wireless Microphone 1pc(optional)

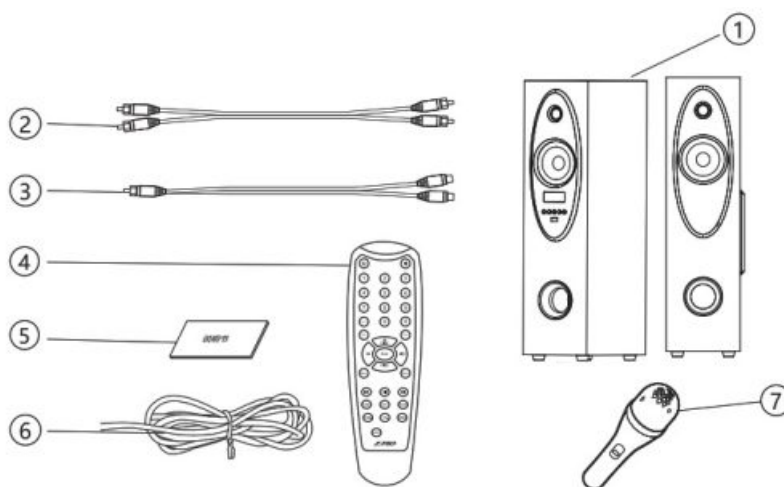

Product wiring diagram

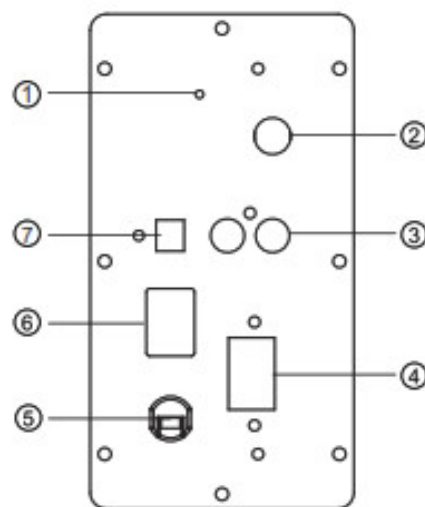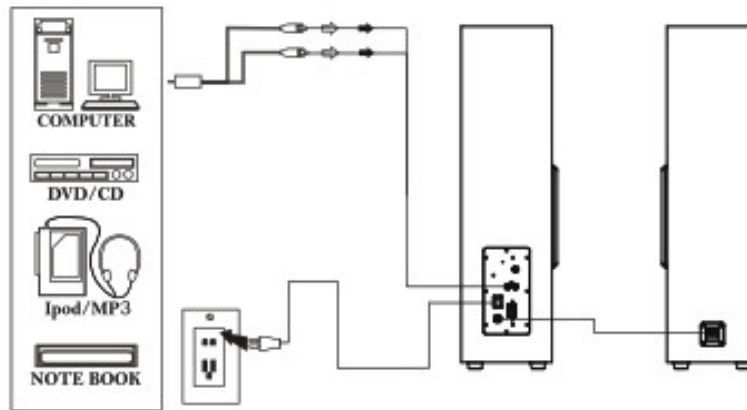  

1. FM Ant.
2. Microphone Input
3. Audio input
4. Audio output
5. Power cable
6. Power switch
7. Optical input

Panel key controls

A.: Turn on/off the unit.

B. Source: Switch between BT, Optical, AUX, USB, and FM mode.

C.

(1). USB Mode: short press for play/pause music.

(2). FM Mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.

(3). Bluetooth mode: long press entering pairing mode, the display will flash fast .short press to play/pause music.

D.

(1). USB mode: Short press to decrease volume, long press to select the previous song.

 
(2). FM mode: Short press to decrease volume, long press to select a previously-stored station.

(3). Bluetooth mode: Short press to decrease volume, long press to select the previous song.

E.

- (1). USB mode: Short press to increase volume, long press to select next song.
- (2). FM mode: Short press to increase volume, long press to select next stored station.
- (3). Bluetooth mode: Short press to increase volume, long press to select next song.

Function panel instruction

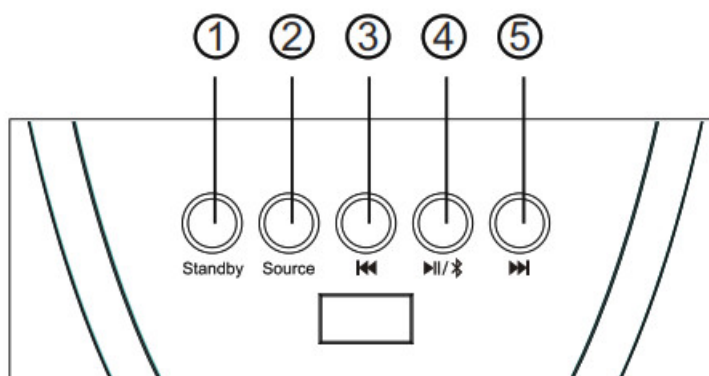

- 1. Standby button
- 2. Source button
- 3. Previous/CH-/Volume decrease button
- 4. Play/Pause/Bluetooth pairing/FM Auto scan
- 5. Next/CH+/Volume increase button

Remote control

The remote control keys function

- A. : turn on/off the unit.
- B. Source: switch among BT, Optical, AUX, USB, and FM mode.
- C. : press it to mute or unmute the sound.
- D. : increase or decrease master volume.
- E. Tune+/-: FM mode:
Fine Tuning: Short press to increase or decrease one step (100Khz), Manual Tuning: Long press of this key works for Manual tuning.
- F. MEM: Short press of this key work to store tuned station through Fine or Manual tuning.
- G. Scan: FM mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.
- H. Enter: confirm selection and return to the main screen.

I. 0~9 number keys:

- 1. USB source: directly press numeric keys through the remote to select your favorite song if you know the song number in the folder. The system will automatically play the last song of the folder if you press the number excess of the song number of that folder.
- 2. FM source: directly press numeric keys through the remote to select your favorite station if you know the station number (1~100). Or press 3 or 4 digits of frequency to play that station, for example, 1026 for 102.6 MHz stations.

J.: USB and BT source, short press to play or pause.

K. :

- a. USB Mode: Short press to select previous song & long press to select the previous folder.
- b. BT Mode: Short press to select the previous song. FM Mode: Short press to select a previously-stored station.

Remote control



- M.: short press to Bluetooth mode and Long press entering pairing mode, the display will flash fast.
- N.Reset: short press to reset the current mode & long press will make the default settings.
- O.TRE+: increase the treble level.
- P.TRE-: decrease treble level.
- Q.BASS+: increase the bass level.
- R.BASS-: decrease bass level.
- S.ECHO +/-: short press to increase and decrease the ECHO volume.
- T. MIC +/-: short press to increase and decrease the Microphone volume.

Operation guidance

Playback via Bluetooth Basic Requirement

1. Bluetooth must be activated on the mobile end device which you want to connect with F&D T-35X
2. The mobile end device must support Bluetooth A2DP
3. The mobile end device must be within range of the F&D T-35X(max.10m)

Steps need to be followed

1. Select input
2. Long press the
3. will appears on the display

 
4. You now have 30 seconds to register your mobile end device
5. Start the search on your mobile end device
6. If the mobile device requires an access code, please enter 0000
7. Once confirmed, the connection will be done automatically and will appear in the display

Please note:

1. the device most recently connected to the F&D System connects automatically when Bluetooth is activated and the input for Bluetooth playback has been selected. in this case, the message will appear.
2. Start the playback of a medium on your mobile end device and the sound will automatically be generated by the F&D System.

USB mode

1. Plug-in USB driver
2. Card reader supporting max 32GB as well as MP3/WMA dual formats decoding
3. Play music (refer to remote control function)

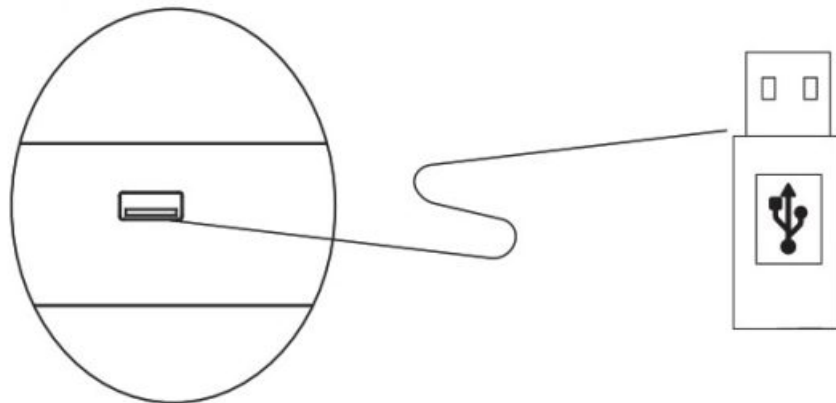


AUX mode

1. Short press to switch the audio source to AUX mode.
Connect the speaker with an audio source through signal cable (output interface of devices such as TV, PC, Mobile phones, etc).
2. Adjust volume while playing music.

Optical mode

 1. Short press to switch the audio source to Optical mode.
Connect the speaker with the audio source through an Optical signal cable
2. Adjust volume while playing music
3. To play digital optical audio well on T-35X, please make sure to set "PCM mode" as a digital output on your devices, such as Blue-ray DVD, TV and Video player, etc. Below an example:

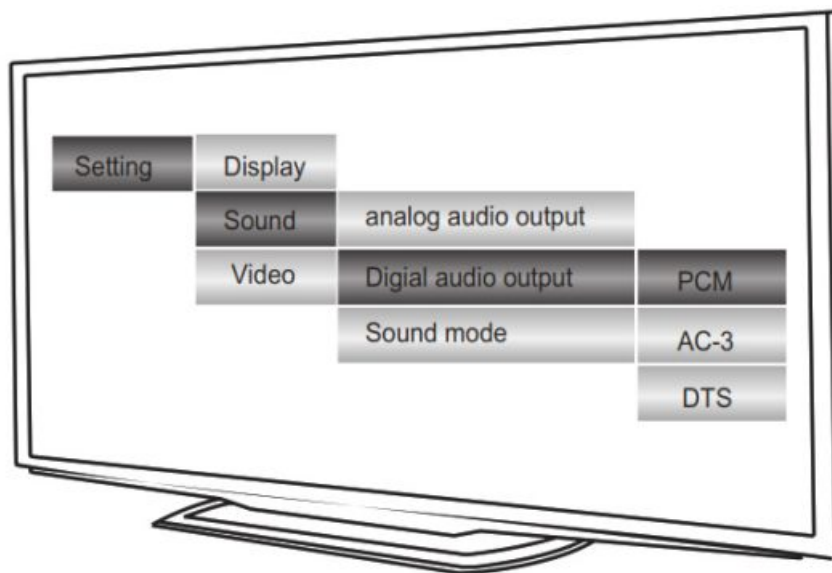

Specifications

Output power (RMS): 80W(40WX2)

Speaker Unit:

Tweeter: 1"

Full-range speaker: 4" 40

Subwoofer: 8" 40

Frequency response: 20Hz-20KHz

S/N Ratio: 75dB

Separation: z45dB

Unit size: W170XD265XH612mm

Power: 100-240V-50/60Hz 1.5A

Troubleshooting

Problem	Possible Cause	Solution
F&D system does not turn on	Power cable not connected to the power outlet and/or F&D System	Check connection
Sound reproduction is too soft	The volume of the F&D System set too low	increase the volume using the “Volume’ button. increase the volume of the source device
F&D System does not respond to the remote control.	The battery is empty	Replace battery. observe correct polarity at the insertion
No sound reproduction	The source device does not produce any signal.	Digital output on the source device not activated (please refer to device instructions).
	Cable not correctly connected/faulty cable.	Check the connection of the source device to the F&D System and change the cable if necessary.
	distance is far from the device in Bluetooth mode	put your Bluetooth device close to the speaker
	Bluetooth device not connected successfully	please restart the speaker and try again

WARRANTY CARD

END-USER'S COPY WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms. First Name.

Last Name.

Address

Contact No

Product Name.

Model No

Serial No

Date Purchased.

Invoice No

Retail Outlet Where Purchased.

(Please print the name & address)

SECTION 1

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of FICO products within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our A Faro Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of a loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our >c Fao Authorised Dealer. (Parts would be replaced when necessary) A. Parts. 1 year B. Technical service free 1 year
3. Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - A. Failure to present the warranty card and receipt when servicing is required. Full particulars not clearly shown or alterations made against the actual information. For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
 - B. This unit is being tampered with, altered in any way by any unauthorized technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - C. The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of a generator.

Shenzhen Tenda Technology Co., Ltd.

Add: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, China

P.C. : 518108 <http://www.fenda.com>

WARRANTY CARD

DISTRIBUTOR'S COPY WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name.

Last Name.

Address

Contact No

Product Name.

Model No

Serial No

Date Purchased.

Invoice No

Retail Outlet Where Purchased.

(Please print the name & address)

SECTION 2

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our Foso Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required.


This warranty card is irreplaceable in the event of loss
2. Repair services will be provided for defects arising from normal usage for the following period, commencing

from the date of purchase from our: 4 FASO Authorised Dealer. (Parts would be replaced when necessary) A. Parts. 1 year B. Technical service free 1 year

3. Under the following circumstances service and parts will be chargeable even within the warranty period:
- A. Failure to present the warranty card and receipt when servicing is required. Full particulars not clearly shown or alterations made against the actual information.
For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
 - B. This unit is being tampered with, altered in any way by any unauthorized technicians, or which has been subjected to misuse, negligence, or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - C. The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage, or the usage of a generator.

Shenzhen Fenda Technology Co, Ltd.
Add: Fenda Hi-Tech Park, Zhoushi RoadShiyan, Baoan, Shenzhen, China
P.C. : 518108 <http://www.fenda.com>

Documents / Resources

	<p>F D T-35X 2.0 Computer Multimedia Speaker [pdf] User Manual T-35X, 2.0 Computer Multimedia Speaker</p>
--	---