



F D T-88X Computer Multimedia Speaker User Manual

[Home](#) » [F D](#) » F D T-88X Computer Multimedia Speaker User Manual 



SINCE 1993

**T-88X User Manual
2.0 Computer Multimedia Speaker**



 
Contents

- 1 Caution**
- 2 Packaging content**
- 3 Product wiring diagram**
- 4 Panel key controls**
- 5 Remote control**
- 6 Operation guidance**
- 7 Specifications**
- 8 Troubleshooting**
- 9 WARRANTY TERMS & CONDITIONS**
- 10 Documents / Resources**
 - 10.1 References**

Caution



- Do not place the system in the high-temp and humid environment, prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents, do not open the back panel cover for repair without professional guidance.
- In case fragments or other liquids is accidentally sprinkled inside the cabinet, please switch off the power immediately.
- In case of repair, Please come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work.
- Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.

Packaging content

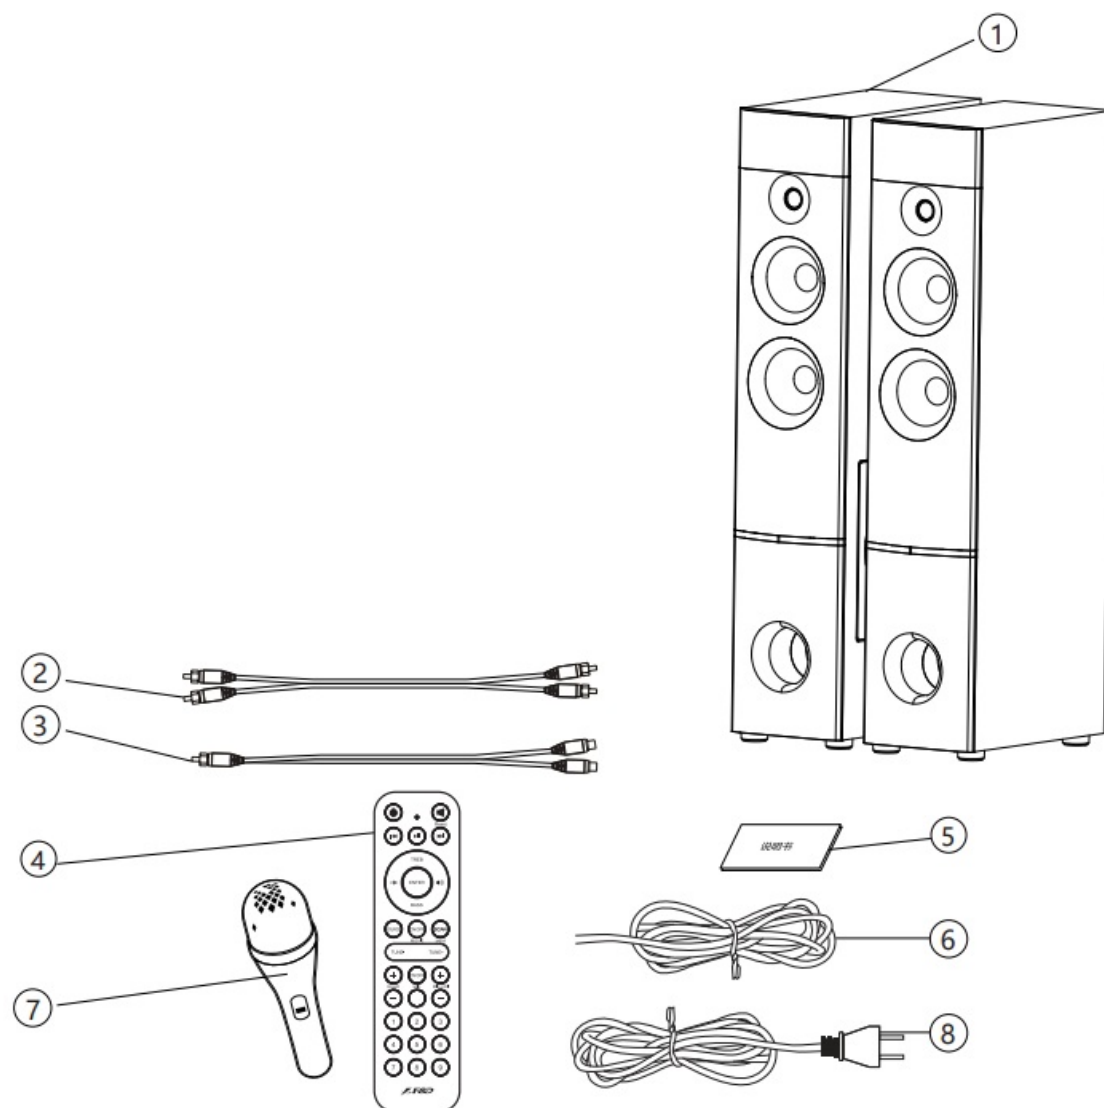


1. Speaker:	1unit
2. RCA to RCA cable	1pc
3.3.5mm to RCA cable	1pc
4. Remote control	1pc
5.Operation manual	1pc
6.Connection cable	1pc
7.Wireless Microphone	1pc(optional)
8.Power cable	1pc
9. Battery	1pc

  Product wiring diagram

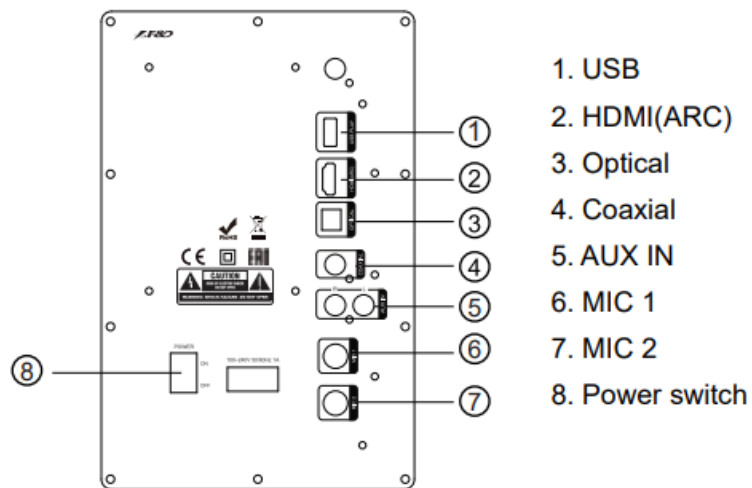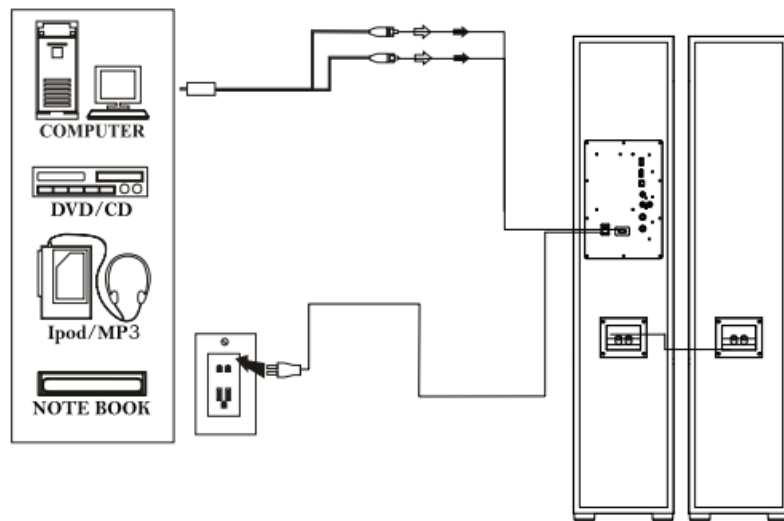

Panel key controls

 Panel instruction

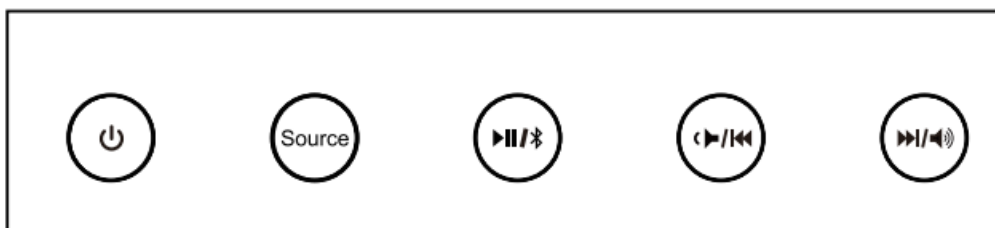

1.Standby button	4.Volume decrease button
2.Source button	5.Volume increase button
3 Play/Pause/Bluetooth button	

A.Standby: Turn on/off unit

B. Source: Switch among BT/OPTICAL/USB/AUX/HDMI (ARC)/Coaxial mode.

C. Play/Pause/▶||/⌂ :

a. USB Mode: Short press for play/pause the music play back.

- b. Bluetooth mode: short press to play/pause music.
- c. Long press to enter into pairing mode and display will flash fast

D. 

: a. USB mode: Short press to decrease volume level. Long press to select previous song.

b. Bluetooth mode: Short press to decrease volume and long press to select previous song.


E. : 

a. USB mode: Short press to increase volume and long press to select next song.


b. Bluetooth mode: Short press to increase volume and long press to select next song.


Remote control

Remote control keys function

A.  : turn on/off unit.

B. Source Switch among BT/OPTICAL/AUX/USB/HDMI (ARC)/Coaxial mode.

C.  : Short press to mute or unmute the sound. Long press to go to default settings.

D.  : increase or decrease master volume.

E. Play/Pause  :

a. USB Mode: Short press for play/pause the music playback.

b. Bluetooth mode: short press to play/pause music.

F.  :

a. USB mode: Short press to select previous song and long press to select previous folder.

b. Bluetooth mode: short press to select previous song.

G.  :

a. USB mode: Short press to select next song and long press to select next folder.

b. Bluetooth mode: short press to select next song.

H. Treble Short press Treble button to enter into treble adjustment mode, short press volume button to adjust treble level.

I. Bass Short press Bass button to enter into bass adjustment mode, short press volume button to adjust bass level

J. Movie Short press to turn on/off movie mode

K. Enter: confirm selection and return to main screen.

L. 0~9 number keys:

USB source: directly press numeric keys through remote to select your favorite song if you know the song number in the folder. The system will automatically play the last song of the folder if you press number excess of song number of that folder.

M. MIC ON/OFF Short press to turn on/off microphone

N. MIC volume +/- Short press to increase/decrease microphone volume

O. ECHO +/-: Short press to increase/ decrease ECHO volume






Operation guidance

Playback via Bluetooth

Basic Requirement

1. Bluetooth must be activated on the mobile end device which you want to connect with F&D T-88X
2. The mobile end device must support Bluetooth A2DP
3. The mobile end device must be within range of the F&D T-88X(max.15m)

Steps need to be followed

 
1. Select  input
2.  will appears on the display
3. You now have 30 seconds to register your mobile end device
4. Start the search on your mobile end device
5. If the mobile device requires an access code, please enter 0000
6. Once confirmed, the connection will be done automatically and  will appear in the display

Please note:

1. the device most recently connected to the F&D System connects automatically when Bluetooth is activated and the input for Bluetooth playback has been selected. in this case the message **bt** will appear.
2. Start the playback of a medium on your mobile end device and the sound will automatically be generated by the F&D System.

USB mode

1. Plug in USB driver
2. Card reader supporting max 32GB as well as MP3/WMA dual formats decoding
3. Play music (refer to remote control function)

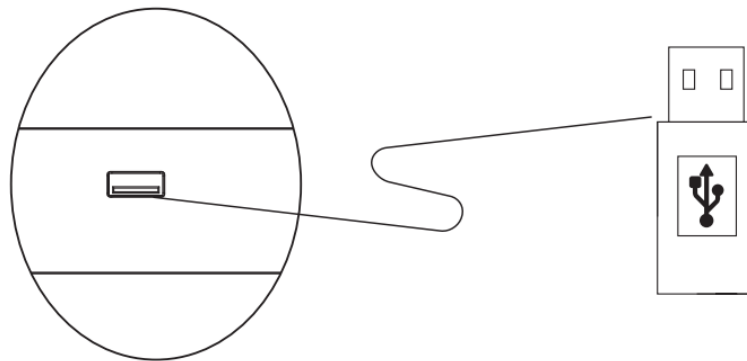**AUX mode**

1. Short press to switch audio source to AUX mode.
Connect the speaker with audio source through signal cable (output interface of devices as TV, PC, Mobile phones, etc).
2. Adjust volume while playing music.

HDMI(ARC) mode

Short press Source to select HDMI(ARC) mode.

 
1. Connect TV with HDMI(ARC) port through HDMI signal cable on the rear of the speaker.
2. Please make sure to set "HDMI(ARC) mode" as digital output on your devices.
3. Adjust volume while playing music.

Optical and Coaxial mode

Short press Source to select Optical or Coaxial mode.

1. Connect TV with optical or Coaxial port on the rear of the speaker through optical or Coaxial cable.
2. Please make sure to set "PCM mode" as digital output on your devices, such as Blue-ray DVD, TV and Video player, etc. Below as example.
3. Adjust volume while playing music.

Tips: Please make sure that TV supports HDMI(ARC) and optical function.

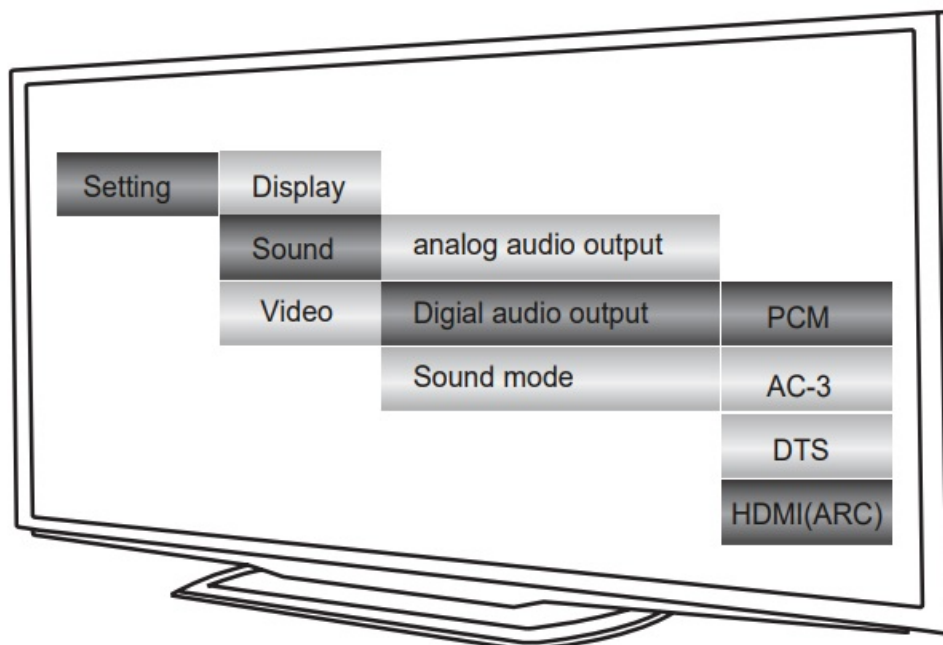

Specifications

Output power (RMS): $300W=150W*2$

Speaker Unit:

- Tweeter: 1"
- Full-range speaker: 5.25"
- Subwoofer: 10"

Frequency response: 20Hz-20KHz

S/N Ratio: $\geq 70\text{dB}$

Separation: $\geq 45\text{dB}$

Power: 100-240V~50/60Hz 1A

Dimension: W199XD380XH962MM

Troubleshooting

Problem	Possible Cause	Solution
F&D system does not turn on	Power cable not connected to the power outlet and/or F&D System	Check connection
Sound reproduction too soft	Volume of F&D System set too low	increase the volume using the "Volume" button. increase the volume of the source device
F&D System does not respond to remote control.	The battery is empty	Replace battery, observe correct polarity at insertion
No sound reproduction	Source device not producing any signal.	Digital output on the source device not activated (please refer to device instructions).
	Cable not correctly connected/faulty cable.	Check the connection of the source device to the F&D System and change the cable if necessary.
	distance is far from device in Bluetooth mode	put your Bluetooth device close to the speaker
	Bluetooth device not connected successfully	please restart the speaker and try again
No sound output under optical mode	optical cable not connect well or damaged	not bend optical cable over 50 degree

APP function:

Fenda T-88X support APP control, you can search "Fenda" to download the application in IOS store and Google play. or you can scan the below QR code to download the APP directly.

 <p>QR code for IOS</p>	 <p>QR code for Android</p>
https://itunes.apple.com/u3/app/fenda/id1192697569?l=zh&ls=1&mt=8	https://play.google.com/store/apps/details?id=vidson.btw.qh.fenda


WARRANTY CARD



END-USER'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
Last Name: _____
Address: _____
Contact No.; _____
Product Name: _____
Model No... _____
Serial No.; _____
Date Purchased: _____
Invoice No.; _____
Retail Outlet Where Purchased: _____

WARRANTY TERMS 8& CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of  purchase. We guarantee the provision of free services of 4 Faoproduct within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:


1. The warranty covers services by our  Authorised Dealer.
This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our  Authorised Dealer. (Parts would be replaced when necessary)
A. Parts:..... 1 year
B. Technical service free..... 1 year
3. Under the following circumstances, service and parts will be chargeable even within the warranty period:
A. Failure to present the warranty card and receipt when servicing is required.
Full particulars not clearly shown or alterations made against the actual information.
For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
C. The defect is caused by the attack of household pests, fire , lighting , natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd.
Add : Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, China
P.c. : \$18108 <http://www.fenda.com>

DISTRIBUTOR'S COPY WARRANTY REGISTRATION CERTIFICATE


Mr./Mrs/Ms First Name: _____
Last Name: _____
Address: _____
Contact No.; _____
Product Name: _____
Model No... _____
Serial No.; _____
Date Purchased: _____
Invoice No.; _____
Retail Outlet Where Purchased: _____

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of  product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our  Authorised Dealer.

This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.

2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our  Authorised Dealer. (Parts would be replaced when necessary)

A. Parts:..... 1 year

B. Technical service free..... 1 year

3. Under the following circumstances, service and parts will be chargeable even within the warranty period:

A. Failure to present the warranty card and receipt when servicing is required.

Full particulars not clearly shown or alterations made against the actual information.

For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.

B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.

C. The defect is caused by the attack of household pests, fire , lighting , natural disasters, pollution,abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd.

Add : Fenda Hi-Tech Park,Zhoushi Road,Shiyan,Baoan,Shenzhen,China

P.c. :\$18108 <http://www.fenda.com>

Documents / Resources



T-88X, T-88X Computer Multimedia Speaker, Computer Multimedia Speaker, Multimedia Speaker, Speaker

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.