**Manuals+** — User Manuals Simplified.



# F F AT-1U-DS Temperature Transducer with Voltage Output Instruction Manual

Home » FF » F F AT-1U-DS Temperature Transducer with Voltage Output Instruction Manual

F F AT-1U-DS Temperature Transducer with Voltage Output



#### **Contents**

- 1 Important Information
- 2 Purpose
- 3 Features
- **4 Front Description**
- **5 Mounting**
- **6 Wiring Diagram**
- **7 Transduction**
- **Characteristics**
- **8 LED Signalling**
- 9 Technical Data
- 10 Warranty
- 11 CE Declaration
- 12 Documents / Resources
  - 12.1 References
- **13 Related Posts**

## **Important Information**



CE Do not dispose of this device in the trash along with other waste!

According to the Law on Waste, electro coming from households free of charge and can give any amount to up to that end point of collection, as well as to store the occasion of the purchase of new equipment (in accordance with the principle of old-for-new, regardless of brand). Electro thrown in the trash or abandoned in nature, pose a threat to the environment and human health.

#### **Purpose**

The AT-1U-DS temperature transducer has been designed for temperature measurement using the DS1820 series digital temperature sensor and converting measurement result into an analog voltage signal in the range of 1÷10 V.

#### **Features**

- Continuous measurement of ambient temperature using digital temperature sensors DS1820, DS18S20 and DS18B20 (sensor to be purchased separately);
- Compatible with the RT4 temperature sensors (temperature range -30÷65°C) manufactured by F&F;
- Adjustable measuring range;
- Optical indication of the operation of the transducer and the state of the connected sensor.

#### **Front Description**

J-& F	indication of the transducer operation and sensor status
5 30 50 [max] 70 180 120 110 100	measuring range setting (maximum temperature)
-50 -40 -30 [min]	measuring range setting (minimum temperature)

## Mounting

Installation of the transducer should be performed by an installer with appropriate qualifications and experience in connecting electrical installations.

It is recommended to use high quality power supplies with a good output voltage filtering ratio to power the transducer.


Do not route signal cables, especially the cable for the temperature sensor, in parallel with other power cables.

It is recommended to use a 3-core shielded cable to connect the temperature sensor. The shield of the cable on one side must be connected to PE.

It is recommended to use a 2-core shielded cable to connect the voltage output, one side must be connected

- 1. Turn off the power to the switchboard.
- 2. Mount the module on a DIN rail in the distribution box.
- 3. Connect transducer's power supply to the terminal 1 (+) and 2 (-).
- 4. The output signal is connected to the terminals 3 (+) and 2 (-).
- 5. Connect the temperature sensor to terminals 10-12 according to the color markings of the RT4 sensor, or the pinout of the DS1820 sensor.
- 6. Use MIN and MAX potentiometers to set the required measuring range.
  - The set maximum temperature (MAX) must be higher than the minimum temperature (MIN). Failure to meet this condition will block the transducer and signal an error.
- 7. Switch on the power supply to the switchboard.


## **Wiring Diagram**

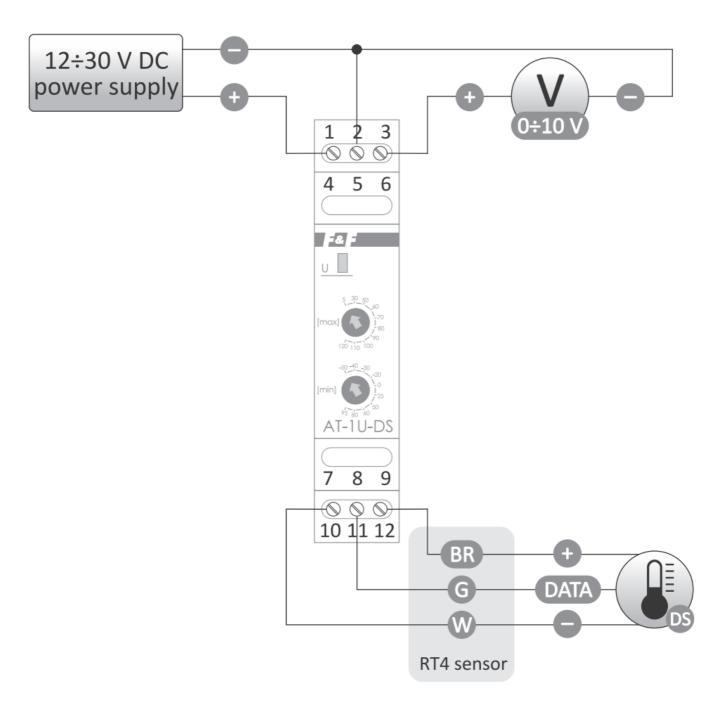

- 1 power supply (+)
- 2 power supply (–)
- 3 voltge output 1÷10 V
- 10 temperature sensor [white] power supply (–)
- 11 temperature sensor [green] data line (DATA)
- 12 temperature sensor [brown] power supply (+)

#### **Transduction Characteristics**

The value of the output voltage depends on the current temperature and the set measuring range. The shape of the characteristic is shown in the figure below:

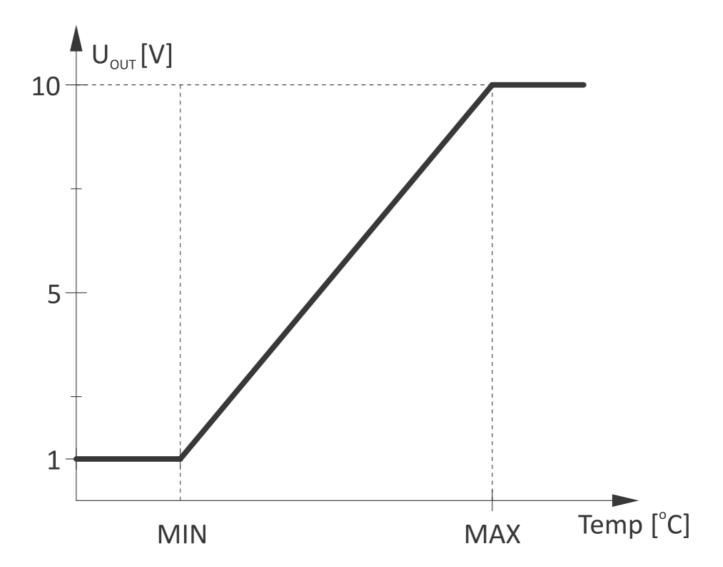

Incorrect configuration of the transducer or sensor failure is indicated by special output signal levels given in the table below:

Level	Description
10,3 V	Short circuit at the sensor output
10,6 V	No sensor connected
10,9 V	Incorrect measuring range

## **LED Signalling**

The operation of the transducer is indicated by the LED signal light located on the front of the device.

Signal light	Description
ON	The transducer and sensor are working properly
Short blinks every 1 second	Incorrectly set measuring range
Rapid, frequent blinking	Sensor error (short circuit at the output or sensor not connected)

#### **Technical Data**

- power supply 12÷30 V DC
- output voltage 1÷10 V
- maximum load capacity of the voltage output 4 mA
- measurement range -50÷125°C
- temperature sensor DS1820, DS18S20, DS18B20
- transducer accuracy 1%
- temperature sensor accuracy (typical)
- temperature -55÷-10°C 2°C
- temperature -10÷85°C 0.5°C
- temperature 85÷125°C 2°C
- power consumption < 0.3 W
- working temperature -25÷55°C
- terminal 2.5 mm² screw terminals
- tightening torque 0.4 Nm
- dimensions 1 module (18 mm)
- mounting on TH-35 rail
- ingress protection IP20

### Warranty

The F&F products are covered by a warranty of the 24 months from the date of purchase. Effective only with proof of purchase.

Contact your dealer or directly with us.

#### **CE Declaration**

F&F Filipowski L.P. declares that the device is in conformity with the essential requirements of the Electromagnetic Compatibility (EMC) Directive 2014/30/UE.

The CE Declaration of Conformity, along with the references to the standards in relation to which conformity is declared, can be found at <a href="https://www.fif.com.pl">www.fif.com.pl</a> on the product page.



#### **Documents / Resources**



**F F AT-1U-DS Temperature Transducer with Voltage Output** [pdf] Instruction Manual AT-1U-DS Temperature Transducer with Voltage Output, AT-1U-DS, Temperature Transducer with Voltage Output, Voltage Output, Output

#### References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.