



FamBrow 4K Digital Fam Brow Autofocus 48MP Vlogging Camera Instructions

[Home](#) » [FamBrow](#) » FamBrow 4K Digital Fam Brow Autofocus 48MP Vlogging Camera Instructions 

FamBrow 4K Digital Fam Brow Autofocus 48MP Vlogging Camera Instructions



Contents

1 ABOUT THE CAMERA BATTERY

2 Frequently Asked Questions

3 Q: The camera can't turn on after installing the batteries.

4 Q: Can not take still images and video after pressing the shutter button.

5 Q: Images/Video is blurry

6 Q: The camera automatically shuts down. A: The remaining battery is low. Please fully charge the battery before use.

7 Q: Can't delete files in the camera. A:

8 Q: Can you let me know how to focus in video mode?

9 Q: Why does the camera flicker/black out?

9.1 Documents / Resources

9.1.1 References

9.2 Related Posts

ABOUT THE CAMERA BATTERY

1. Please use the supplied original charging cable to charge the camera. Please fully charge it before using it for the first time.
2. The battery discharges itself even when not in use.
Please charge the battery before use.
3. Make sure the battery is installed in the correct orientation.
4. **Please note the status of the indicator lamps:**
 - **On (red indicator):** Charging in progress
 - **Off:** Charging is complete
 - **Blinking (red indicator):** The camera is dead or the battery is not installed correctly.
5. It is recommended to charge the battery at an ambient temperature between 10°C and 30°C. When the temperature is outside the recommended operating temperature range, the battery should be charged. When the temperature is outside the recommended operating temperature range, the charging indicator will still flash, indicating that charging has been suspended and is in standby mode.
6. In playback mode, power can be supplied via the power adapter. However, in shooting mode, power cannot be supplied through the power adapter.

Frequently Asked Questions

Q: The camera can't turn on after installing the batteries.

A: No remaining battery with the camera. The battery is in the unbroken package. Upside-down or inadequate installation of the battery

Q: Can not take still images and video after pressing the shutter button.

A: The built-in memory is full. No memory card installed.

Q: Images/Video is blurry

A: Hands shake when taking images. Use both hands to stabilize the camera, or use other objects (tripod) to stabilize, and do not shake the camera when taking images. The resulting images or videos are dim. The shooting environment is not well-lit. Shoot in a well-lit place, or use flash mode to improve.

Q: The camera automatically shuts down. A: The remaining battery is low. Please fully charge the battery before use.

To save power, the camera will automatically turn off according to the setting if there is no operation for more than 1 minute (3 minutes or 5 minutes, depending on the setting)

Q: Can't delete files in the camera. A:

The file protection function in the camera menu is enabled, turn off this function in the menu. The camera freezes or the screen is blurry. Wrong format of memory card, format the MicroSD Card for first-time use.

Q: Can you let me know how to focus in video mode?

A: In Image Mode, half-press the shutter button to focus, and fully press it when the focus screen turns from yellow to green to capture a sharp image. In video mode, the camera defaults to distance focusing and does not support close focusing. It is recommended to place the camera about one meter away from the subject, or you can try to lower the pixels of the video, which will help to focus better in video mode and the video will be sharper and smoother.

Q: Why does the camera flicker/black out?

A: There is an optical viewfinder and sensor in the upper left corner of the camera. When you are in a hot sunny environment, to avoid external light interference, you can touch the sensor on the right side of the viewfinder and the camera screen will automatically turn black to provide you with a clearer and more stable shooting experience. Please note: A flickering camera screen does not necessarily indicate a camera malfunction; it may be caused by a finger touching the sensor by mistake.

FamBrow

Documents / Resources

<div>ABOUT THE CAMERA BATTERY</div> <div>1. Please use the supplied original charging cable to charge the camera. Please fully charge it before using it for the first time.</div> <div>2. The battery discharges itself even when not in use. Please charge the battery before use.</div> <div>3. Make sure the battery is installed in the correct orientation.</div> <div>4. Please note the status of the indicator lamp:<ul style="list-style-type: none">On: Ind. indicator: Charging in progress.Off: Charging is complete.Blinking red indicator: The camera is dead or the battery is not installed correctly.</div> <div>5. It is recommended to charge the battery at an ambient temperature between 10°C and 30°C. When the temperature is outside the recommended operating temperature range, the battery should be charged. When the temperature is outside the</div>	<div>FamBrow 4K Digital Fam Brow Autofocus 48MP Vlogging Camera [pdf] Instructions</div> <div>4K Digital Fam Brow Autofocus 48MP Vlogging Camera, 4K, Digital Fam Brow Autofocus 48MP Vlogging Camera, Fam Brow Autofocus 48MP Vlogging Camera, Autofocus 48MP Vlogging Camera, 48MP Vlogging Camera, Vlogging Camera, Camera</div>
--	---

References

- [User Manual](#)