

 **FANTECH**  
**NOVA PRO**  
**WGP14v2 Wireless**  
**Multi-platform**  
**Gamepad**



# Fantech NOVA PRO WGP14v2 Wireless Multi-platform Gamepad User Manual

[Home](#) » [fantech](#) » Fantech NOVA PRO WGP14v2 Wireless Multi-platform Gamepad User Manual 

## Contents

- [1 Fantech NOVA PRO WGP14v2 Wireless Multi-platform Gamepad User Manual](#)
- [2 What's included in the box](#)
- [3 Technical Specification](#)
- [4 Buttons Assignment](#)
- [5 LED Indicator](#)
- [6 How to Connect](#)
- [7 How to Use](#)
- [8 Troubleshooting](#)
- [9 References](#)
- [10 Related Posts](#)



**Fantech NOVA PRO WGP14v2 Wireless Multi-platform Gamepad User Manual**



## What's included in the box

1. FANTECH NOVA PRO WGP14v2 Gaming Controller
2. One Set of Replaceable Thumbsticks
3. One Set PRO Aim 0-Ring
4. Type-C Charging Cable
5. User manual

## System requirements

1. Operating systems: PC/Steam, Switch, PS4, PS3, iOS, MacOS, tvOS, Android, Cloud Gaming/Game Pass

 
Thank you for purchasing the Fantech NOVA PRO WGP14v2 Wireless Multi-Platform Gamepad. This gamepad features anti-drift technology achieved through the use of Hall Effect sticks & triggers. Additionally, NOVA PRO features interchangeable thumbsticks with rear macro paddles for easy gameplay. Experience the next level of gamepads!

## Technical Specification

- Connectivity: BT 5.3, Wired
- Face Button Type: Membrane
- Total Number of Keys: 22
- Battery: 600mAh (Up to 10 hours usage)
- Charging Time: Approx. 2 hours
- Turbo: Yes (3 level adjustable modes)


- Rumble: Yes
- Voltage/Current: 3.7V/ 150mA
- Programmable Buttons: 12
- Weight: 289g
- Wireless Range: +10m
- Compatibility: PC/Steam, Switch, PS4, PS3, IOS,
- MacOS, tvOS, Android, Cloud Gaming/Game Pass

## Buttons Assignment

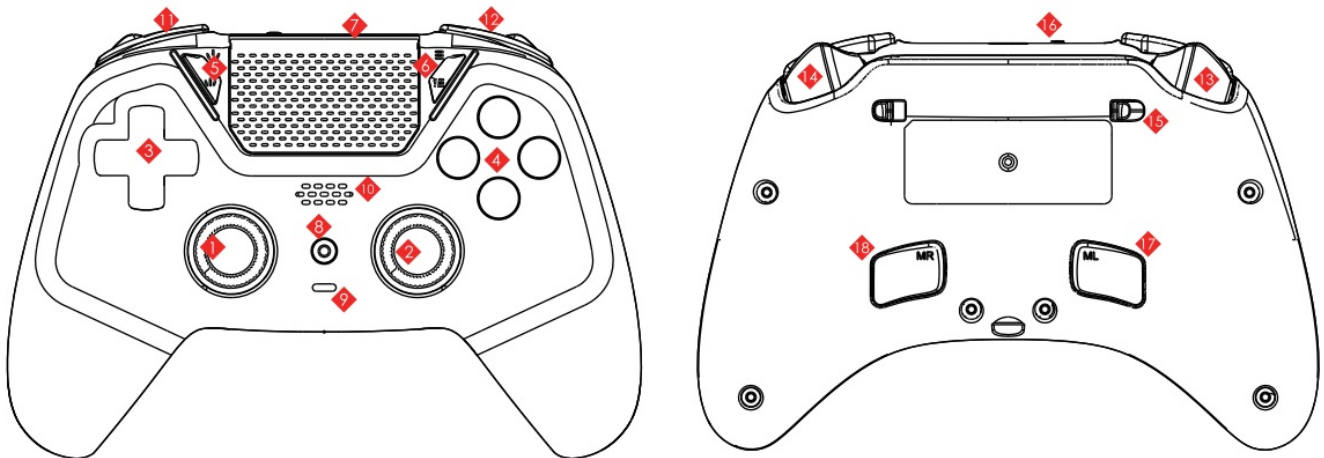


1. Left Joystick
2. Option Button
3. Right Joystick
4. TouchPad
5. Directional Pad
6. Home Button
7. Action Buttons
8. Turbo Button
9. Share Button
10. Speaker
11. L1 Button
12. R1 Button
13. L2 Trigger
14. R2 Trigger
15. Trigger lock
16. Off Button
17. Left Rear Trigger
18. Right Rear Trigger

## LED Indicator

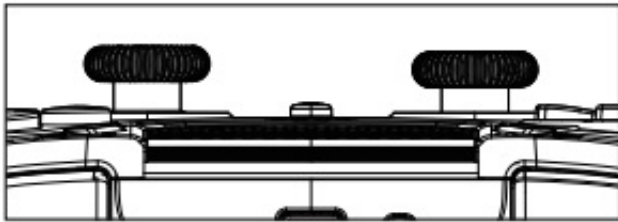 


## PC

 - Wired: LED Blue Bright Static Color
- BT: LED Sky Blue Bright Static Color

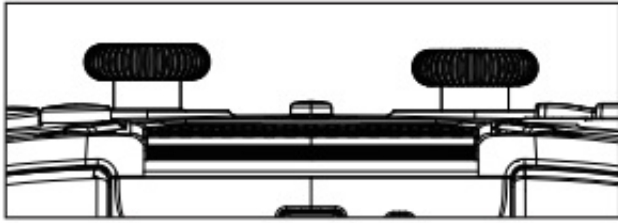


## Switch

 - Wired: LED Blue Bright Static Color
- BT: LED Blue Bright Static Color

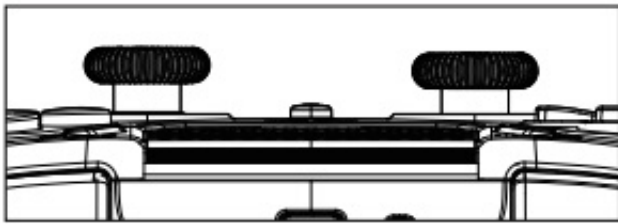


## PS4

 - Wired: LED Blue Bright Static Color
- BT: LED Blue Bright Static Color

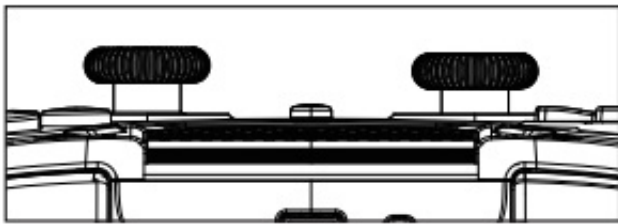


## PS3

 - Wired: LED Red Bright Static Color
- BT: LED Red Bright Static Color

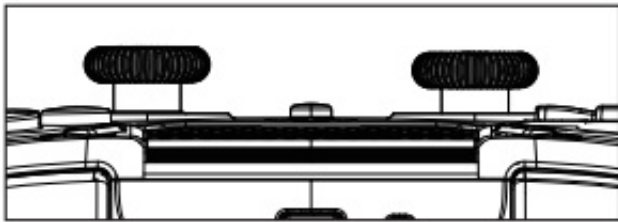

## Android

 - BT: LED White Bright Static Color

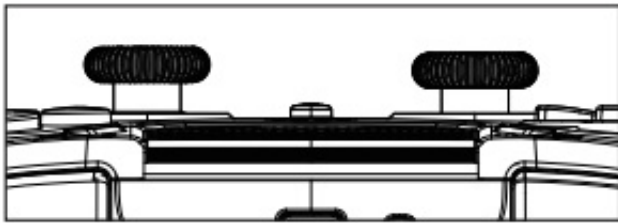


## iOS/MacOS/tvOS

- BT: LED Pink Bright Static Color

## How to Connect
 
### PC Connection

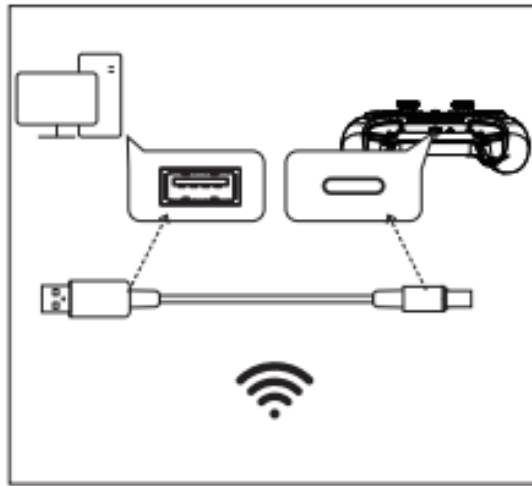

### **Wired**

Connect the gaming controller to your PC by inserting the Type-C cable into your PC USB port. If connected, then the LED indicators will be a bright Blue color.

### **BT**

Open “Bluetooth and other devices settings” and then add Bluetooth or another device, after that press the “Share+Home” buttons on your gamepad then press “Wireless Controller” to start the pairing process. If connected, then the LED indicator will bright Sky Blue color.

### **Switch Connection**




### **Wired**

Connect the gaming controller to your Switch Dock by inserting the Type-C cable into your Switch Dock USB port. If connected, then the LED indicators will be a bright Blue color. To connect the gamepad to the Switch, open the “controller” section on your switch, then open “change grip/order”. after that press & hold the “Option+Home” buttons on your gamepad and it will start the pairing process. If connected. then the LED indicator will be a bright Blue color.


### **PS4 Connection**

To connect the gamepad to PS4, ensure the included USB cable is connected to the PS4 USB port. When the USB is connected, press the Home button, which will result in the LED displaying a single color. After different gamepads are connected, the LED will display different colors to differentiate the users. To use via BT, Unplug the USB cable, then wait a few seconds, it will automatically connect to your PS4.

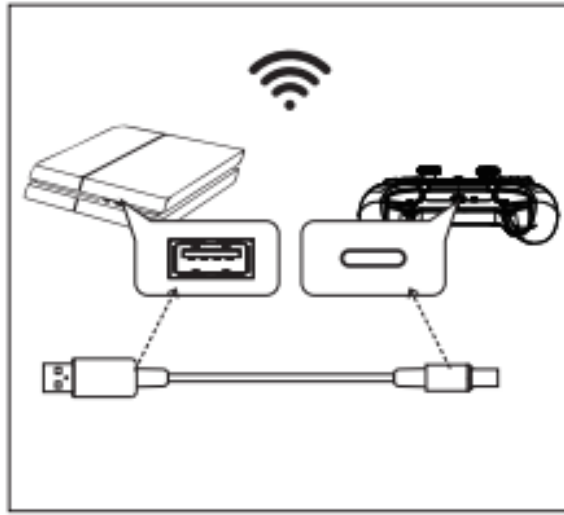

### PS3 Connection

To connect the gamepad to PS3, ensure the included USB cable is connected to the PS3 USB port. When the USB is connected, press the Home button, which will result in the LED displaying a single color. To use via BT. Unplug the USB cable, then wait a few seconds, it will automatically connect to your PS3.

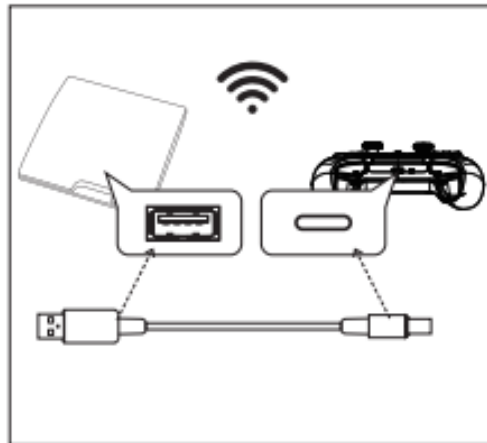


### Android Connection

To connect the gamepad to Android, first confirm that the Android device is version 10.0 or above, then ensure the gamepad toggle is switched to Android mode. Then open Bluetooth on your Android device, and press the home button + Share button on the gamepad for 3 seconds. Now it will show "Wireless Controller" as a Bluetooth device, press it to start pairing. If connected, then the LED indicators will be bright white color.



### iOS Connection


To connect the gamepad to iOS, First confirm that the iOS device has been upgraded to iOS13 or above. Then, ensure the gamepad toggle is switched to iOS mode, and open the Bluetooth on your iOS device. Next, press the home button + Share button on the gamepad for 3 seconds., and it will show as “DUALSHOCK 4 Wireless Controller”, press it to start pairing. If connected, then the LED indicators will be a bright pink color. The controller only supports Apple devices in IOS 13.0 or above, as well as Apple Store games. Currently, the controller does not support touch, six-axis, or vibration, while in use with phones.

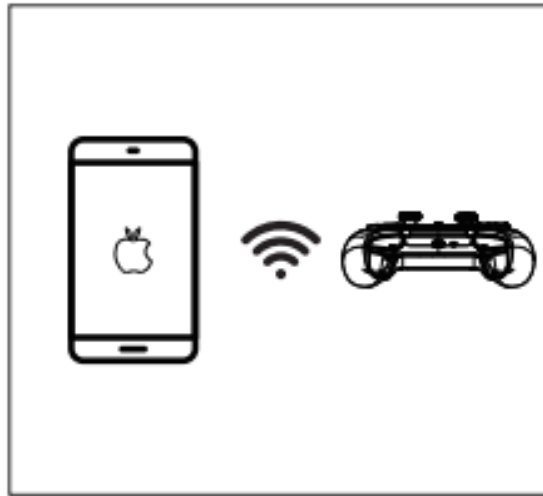

## How to Use


### Turbo Mode

Hold the Turbo button, then press another button that you want to assign. If you press again, it will trigger Auto Turbo Mode. To clear the Turbo effect, hold the Turbo button & another button that you already assign for 5 seconds. You can adjust Turbo speed by holding the turbo button and pushing the right analog stick up & down. If you push up the analog stick, it will increase the speed, if you push it down, it will decrease the speed.

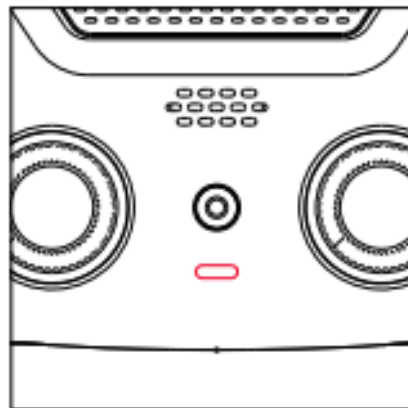


### Lighting Mode

You can adjust the lighting mode by pressing the option button & left or right on the D-pad. This will allow you to change between 4 lighting modes (Running RGB Mode, Breathing Mode, Static Mode, Lighting Off). To adjust the lighting brightness, press the option button and up or down on the D-pad.

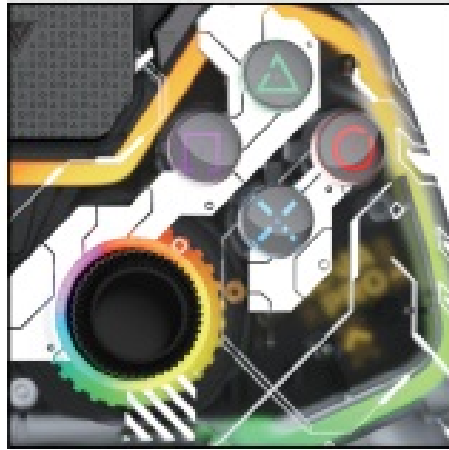


### Customizable Rear Triggers

Press and hold the Turbo button, then the gamepad will start to vibrate & LED indicator will begin to blink, which indicates that it is ready to receive input. Next, press the button that you want to assign, and then Press the Rear Paddle that you want to assign (left or right) to finish recording the input.

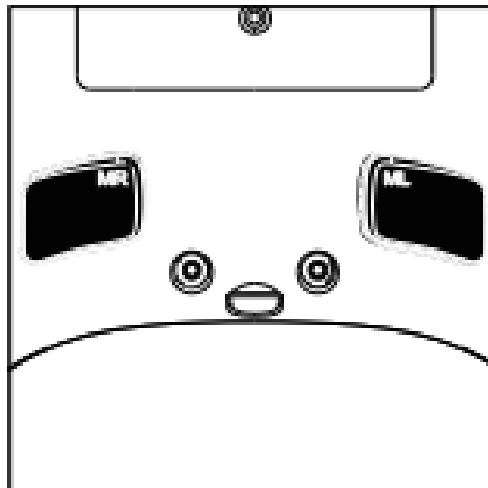

### Trigger Locks


Instantly reduce the trigger pull for faster in-game response time by sliding the built-in locks.

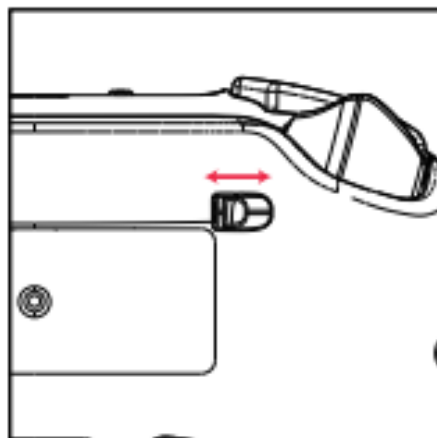

### Stereo Headset Port

Listen to your game by plugging in your headset 3.5mm jack cable to the gamepad headset port.



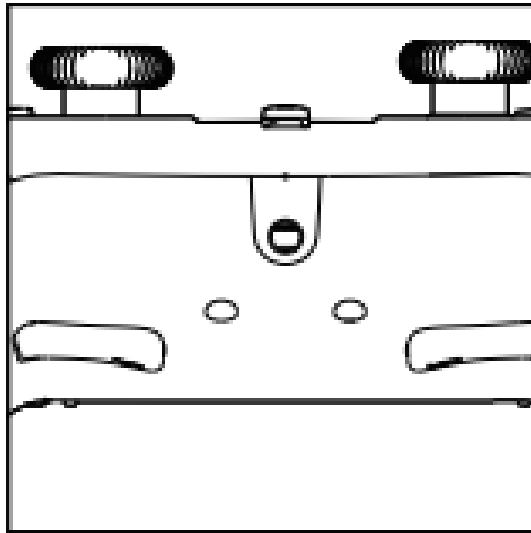

### **Interchangeable Thumbsticks**

Control your games, your way! Simply pull off the thumbsticks to replace them with higher or lower size, to fit your needs!



## **Troubleshooting**

- **Gamepad not recognized/not found/not connected**
  - Check the gamepad connection.
  - Check for USB port problems, or change to another USB port.
  - Check the Gamepad driver was installed correctly. (If not, please unplug and restart the computer.)
  - Press the Home button for 10 seconds to activate reset factory mode.
- **Gamepad not working in the game**
  - Be aware that not all games support gamepads.
  - Check the game's settings options for controller configuration
- **No vibration**
  - Check that the driver was installed correctly.
  - Check that the game supports vibration.
- **Charging Indicator Light**

The indicator light will continue to blink when charging while using the gamepad. The indicator lights will flash slowly when charging while not using the gamepad. When the battery power is low, the indicator lights will blink

and the gamepad will be unable to be used until it is charged, If the gamepad is not in use, the charging time will be around 3.5 to 4.5 hours. When the battery is full, the charging indicator light will burn off. While using the gamepad, the LED will flash slowly to indicate charging, and when the battery is full, the LEDs will be a solid color to indicate power.

For other language,  
please scan this barcode



**Download PDF:** [Fantech NOVA PRO WGP14v2 Wireless Multi-platform Gamepad User Manual](#)

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.