



# FANTECH WGP12 10 Button Pc Wireless Gamepad Instruction Manual

[Home](#) » [fantech](#) » FANTECH WGP12 10 Button Pc Wireless Gamepad Instruction Manual 

## Contents

- [1 FANTECH WGP12 10 Button Pc Wireless Gamepad](#)
- [2 What's included in the box](#)
- [3 System requirements](#)
- [4 Instruction manual](#)
- [5 Technical specification](#)
- [6 Features](#)
- [7 LED indicator](#)
- [8 How To Connect](#)
- [9 Troubleshooting](#)
- [10 Operating conditions](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



**FANTECH WGP12 10 Button Pc Wireless Gamepad**



### What's included in the box

1. FANTECH REVOLVER II WGP12 Gaming Controller
2. USB receiver
3. User manual

### System requirements

1. Operating systems: Windows XP/7/8/10, PS3
2. USB 2.0/3.0 port

 
### Instruction manual

Thank you for purchasing Fantech REVOLVER II WGP12 Wireless 2.4GHz Gaming Controller. This gamepad is a plug and play device, but some platforms or games may need to install additional software to make its function fully active. This gamepad supports PC installed with Windows XP/Nin7/Win8/Win10

### Technical specification

- **Battery:** 600mAh
- **Buttons:** 17 pcs
- **Vibration:** Yes
- **Wireless range:** 7m-8m
- **Weight:** +182gr


### Features

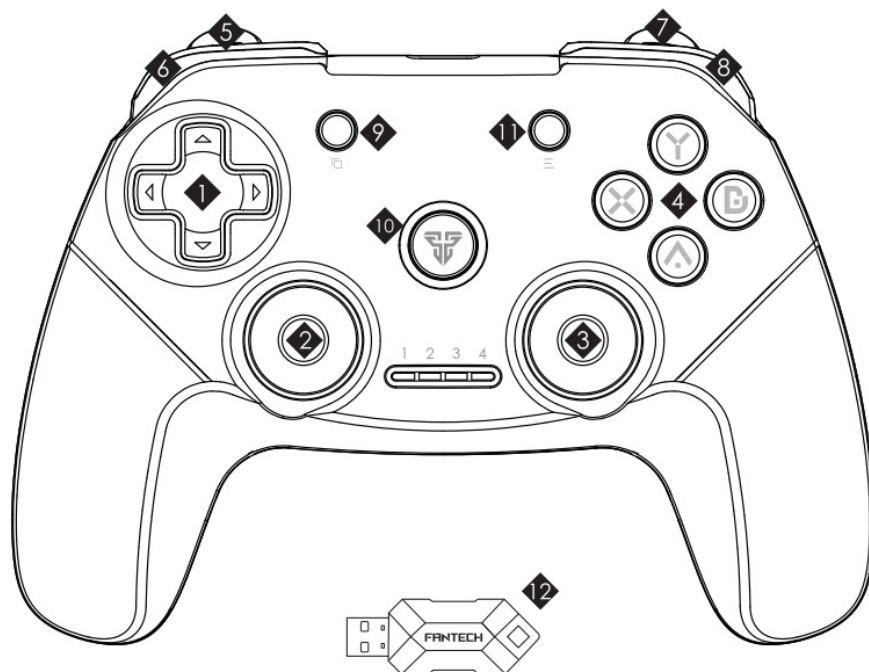

1. Directional pad
2. Left joystick
3. Right joystick
4. Action buttons
5. Left trigger
6. Left button
7. Right trigger
8. Right button
9. Select button
10. Home button
11. Start button
12. USB receiver


### **LED indicator**

 FANTECH REVOLVER II WGP12 LED indicator divided into 3 mode

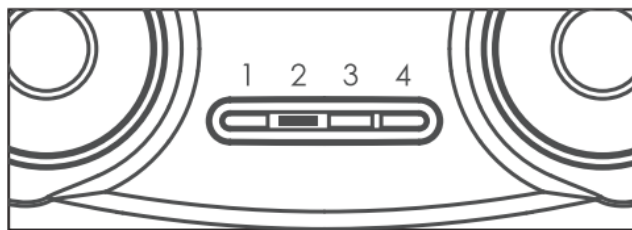


## PC mode

 LED 2

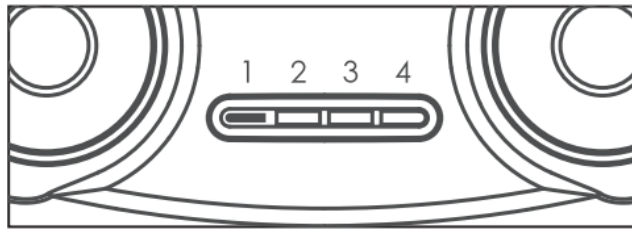

## PS3 mode

 LED 1

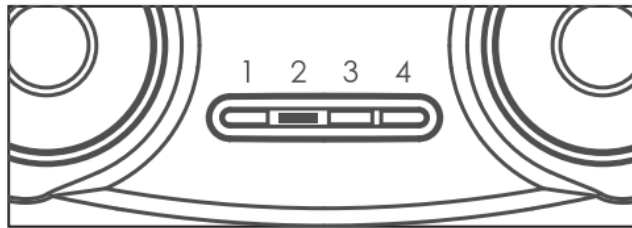


## Android mode


LED 2

### How To Connect

 
- Connect the gaming controller to your PC by inserting USB receiver to your PC USB port.

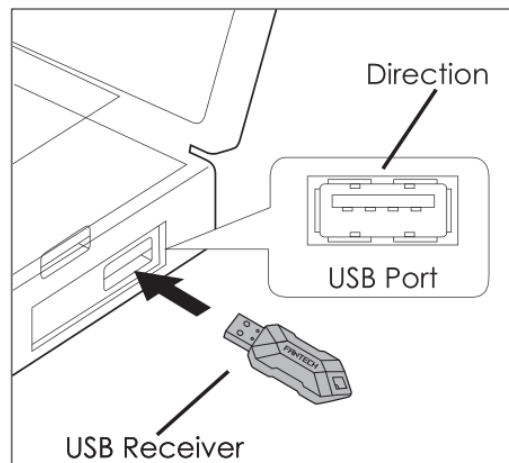

 - Connect the gaming controller to your Android devices by inserting USB receiver via OTG (OTG compatible device).

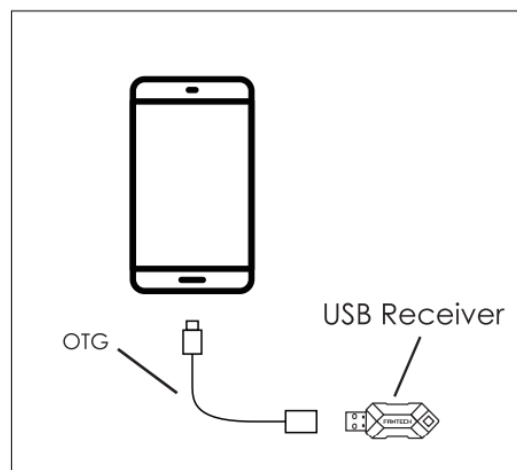

 - Connect the gaming controller to your PS3 by inserting USB receiver to your PS3 USB port.

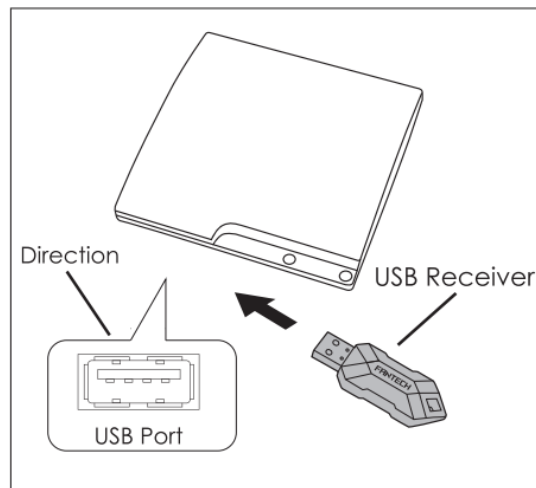

## Troubleshooting

- **Gamepad not recognize/ not found/ no response**
  - Check gamepad connection
  - USB port problem, change another USB port
  - Gamepad driver was not installed correctly, Please unplug and restart computer.
- **Gamepad not working in the game**
  - Game is not supporting gamepad
  - Gamepad was not set in the game setting
- **No vibration**
  - Driver was not installed correctly
  - Game is not supporting vibration
- **Charging Indicator Light**
  - The indicator light will continue to blink when charging, while using the gamepad. The four indicator lights will flash slowly when charging while not using the gamepad.
  - When the battery power is low, the indicator lights will blink and the gamepad will be unable to be used until it is charged.
  - If the gamepad is not in use, the charging time will be around 3.5 to 4.5 hours. When the battery is full, the charging indicator light will turn off. While using the gamepad, the LED will flash slowly to indicate charging, and when the battery is full, the LEDs will be a solid color to indicate power.

## Operating conditions

1. **Operating temperature:** -25°C to 65°C + 10°C
2. **Storage temperature:** -40°C to 70°C ± 10°C
3. **Operating humidity:** 10 – 90% rh
4. **Storage humidity:** 5-95% rh

## Documents / Resources



[FANTECH WGP12 10 Button Pc Wireless Gamepad](#) [pdf] Instruction Manual  
WGP12, 10 Button Pc Wireless Gamepad, Pc Wireless Gamepad, 10 Button Wireless Gamepad, Wireless Gamepad, Gamepad