

FAQs How to power ON the speaker? User Manual

Home » FAQs » FAQs How to power ON the speaker? User Manual



Contents

- 1 FAQs How to power ON the speaker?
- 2 ZEB SOUND FEAST 50 FAQ
- 3 Documents / Resources
- **4 Related Posts**



FAQs How to power ON the speaker?



ZEB SOUND FEAST 50 FAQ

- Q: How to power ON the speaker?
 - A: Make use of the power switch at the rear side of the speaker to power ON or OFF the speaker.
- Q: What are the different connectivity modes available?

- A: Wireless BT, USB, AUX, mSD card, and FM radio support
- · Q: How to change the mode or access different modes in the speaker?
 - A: Use the M button on the speaker to change or toggle between modes.
- Q: How to connect the speaker in BT mode?
- A: Turn ON the speaker and make sure that the speaker is in BT mode. You can open the Bluetooth setting in your smartphone/laptop device to scan for nearby devices.
 - The name ZEB SOUND FEAST 50 can be selected for connection.
- Q: How to connect the speaker in AUX / USB / mSD card mode?
 - **A:** Connect the AUX / USB / mSD card directly to the port and the speaker would detect the input automatically.

• Q: How to control volume?

• A: Single press + button to increase the volume Single press button to reduce the volume

· Q: How to control the media?

A: Press and hold the + button to move to the next song. Press and hold the – button to move to the
previous song.

Q: How to control the voice calling function while in Bluetooth mode?

 A: Single press > button to receive and hang up on incoming calls. Press and hold > button to reject incoming calls. Double press > button to redial the previous contacted number.

• Q: How to scan FM channels in FM radio mode?

• A: Switch the speaker to FM radio mode using the M button. Attach the charging cable in the charging port of the speaker and leave it as such (for best results). Press and hold the > button for 3 seconds and the speaker starts to scan the nearby FM channels. Wait for some time till scanning stops automatically once the scanning is completed, long-press the + and – button to change the saved channels. Short press the + and – buttons to increase/decrease volume respectively.

· Q: How to activate voice assistance through the speaker?

 A: Connect the speaker via Bluetooth, press and hold the > to activate the smartphone's voice assistance through the speaker

• Q: How to use the TWS function?

A: TWS function requires two such ZEB – SOUND FEAST 50 speakers. Power ON both the speakers and make sure they are in Bluetooth mode. Press and hold the M button for 2 seconds as the speaker enters TWS mode. An audio tone will be heard from both the speakers indicating a TWS connection between them. Now open the phone Bluetooth menu and scan to connect with ZEB – SOUND FEAST 50. You can now experience TWS mode.

· Q: What are the various LED indications in the speaker?

A: Red LED glows: Charging in process Red LED turns OFF: Charging 100% complete

Q: How to charge the speaker?

A: Make use of a DC 5V charger with a USB cable provided to charge the speaker.

Documents / Resources

TO BOUND FLAST 59

TO COMMENT OF THE STATE O

FAQs How to power ON the speaker? [pdf] User Manual How to power ON the speaker

Manuals+,