

**FARBERWARE
5165022
Hands-Free
Automatic
Can Opener**



Farberware 5165022 Hands-Free Automatic Can Opener User Manual

[Home](#) » [Support](#) » Farberware 5165022 Hands-Free Automatic Can Opener User Manual 

Contents

- [1 Farberware 5165022 Hands-Free Automatic Can Opener](#)
- [2 Introduction](#)
- [3 Specifications](#)
- [4 Package Contents](#)
- [5 Features](#)
- [6 Dimension](#)
- [7 Usage](#)
- [8 Care and Maintenance](#)
- [9 Troubleshooting](#)
- [10 Pros and Cons](#)
- [11 Contact Information](#)
- [12 Warranty](#)
- [13 FAQs](#)
- [14 Video-Farberware 5165022 Hands-Free Automatic Can Opener](#)
- [15 References](#)
- [16 Related Posts](#)

FARBERWARE®

Farberware 5165022 Hands-Free Automatic Can Opener



Launch Date: January 20, 2017

Price: \$27.19

Introduction

The Farberware 5165022 Hands-Free Automatic Can Opener is an important kitchen tool that will make your cooking easier and faster. This can opener lets you open cans of different sizes without using your hands. This lets you focus on making meals instead of struggling with traditional openers. Its small size and easy-to-use features make it great for people who want to save time and effort in the kitchen. The magnetic lid lifter makes taking off the lid safe and easy, and the stainless steel blade makes sure every cut is clean. The Farberware Hands-Free Automatic Can Opener is a useful cooking tool that you should have if you have trouble opening cans or just want to save time.

Specifications

- **Model:** Farberware 5165022
- **Dimensions:** 9.06 x 2.56 x 2.17 inches
- **Product Dimensions:** 2.6"W x 9"H
- **Weight:** 8 ounces
- **Power Source:** 2 AA batteries (not included)
- **Material:** Plastic with stainless steel cutting blade
- **Operation Type:** Hands-free, automatic
- **Suitable Can Size:** Compatible with most standard-size cans
- **Color:** Red
- **Safety Features:** Built-in safety mechanisms to prevent accidental activation
- **Certifications:** CE certified
- **Brand:** Farberware
- **Blade Material:** Stainless Steel
- **Size:** 9.06 x 2.56 x 2.17 inches
- **Global Trade Identification Number:** 00024131362721
- **Manufacturer:** Lifetime Brands Inc.

- **Number of Items:** 1
- **UPC:** 024131362721
- **Department:** Unisex-Adult
- **Country of Origin:** China

Package Contents

- 1 x Farberware 5165022 Hands-Free Automatic Can Opener
- 1 x User Manual
- 1 x Warranty Card

Features



1. **Hands-Free Operation:** The Farberware 5165022 opens cans automatically with just the press of a button. This convenient hands-free feature makes it an ideal tool for users of all ages, eliminating the need for manual effort.
2. **One-Touch Activation:** With a simple one-touch button, opening cans is made easy. The can opener starts working instantly with a single press, making it user-friendly even for those who are not tech-savvy.
3. **Compact Design:** Slim and lightweight, the Farberware 5165022 is designed for easy storage and portability. It easily fits into drawers or cabinets and can be carried around for outdoor activities like picnics and camping.
4. **Stainless Steel Blade:** Equipped with a durable stainless steel blade, this can opener cuts smoothly through various can types, ensuring a clean and even cut every time.
5. **Safe to Use:** Built-in safety features prevent accidental activation, making the Farberware 5165022 a safe kitchen tool. The opener will only operate when properly positioned on the can, minimizing the risk of injury.
6. **Magnetic Lid Lifter:** The magnetic lid lifter feature keeps the lid in place after cutting, making it easy to lift and dispose of the lid without touching sharp edges.
7. **Universal Fit:** The Farberware 5165022 is compatible with most standard-size cans, making it versatile and

suitable for a wide range of can sizes, from small soup cans to large vegetable cans.

8. **Battery Operated:** Powered by 2 AA batteries, this can opener is cordless, making it convenient for use anywhere in the kitchen without worrying about power outlets or tangled cords.
9. **Smooth Edge Cutting:** The stainless steel blade leaves smooth edges on cans after opening, preventing accidental cuts and ensuring a safer user experience.
10. **Ergonomic Shape:** The ergonomic design of the Farberware 5165022 allows for comfortable handling and easy use, even for extended periods.
11. **Easy Cleaning:** The detachable blade allows for quick and efficient cleaning. Simply remove the blade, wash it with warm soapy water, and dry thoroughly before reattaching.
12. **Energy-Efficient:** Designed to conserve battery life, the Farberware 5165022 ensures extended use without frequent battery replacements, making it cost-effective and reliable.
13. **Non-Slip Base:** The non-slip base keeps the can opener stable during operation, providing added safety and preventing spills or accidents.
14. **Quiet Operation:** The Farberware 5165022 operates with minimal noise, making it ideal for use in any home kitchen without causing a disturbance.
15. **Multi-Color Option:** Available in different colors, the Farberware 5165022 can match your kitchen decor. This model is offered in a stylish red color that adds a pop of color to your kitchen tools.

Dimension



Usage

1. Insert 2 AA batteries into the battery compartment.
2. Place the can on a flat surface.
3. Position the can opener on top of the can, aligning the blade with the can lid.
4. Press the button to initiate the opening process.
5. The can opener will rotate automatically around the can until the lid is completely cut.
6. Once the lid is cut, the opener will stop automatically.

7. Use the magnetic lid lifter to safely remove the can lid.

Care and Maintenance

- 1. **Battery Replacement:** Replace the batteries when the opener slows down or struggles to cut.
- 2. **Blade Cleaning:** Detach the blade and wash with warm soapy water. Dry thoroughly before reattaching.
- 3. **Wipe Exterior:** Use a damp cloth to wipe the exterior. Avoid submerging in water.
- 4. **Storage:** Store in a cool, dry place. Keep out of reach of children.
- 5. **Avoid Overuse:** Allow the opener to cool down after extended use to avoid overheating.
- 6. **Do Not Force:** If the can opener struggles, stop and reposition the opener to avoid damaging the blade.
- 7. **Battery Compartment:** Keep the battery compartment clean and dry.
- 8. **Lubrication:** Occasionally lubricate the blade with a small amount of cooking oil for smoother operation.
- 9. **Avoid Corrosive Materials:** Do not use on cans containing highly corrosive materials.
- 10. **Regular Inspection:** Check the blade regularly for wear and tear, and replace if necessary.

Troubleshooting

Issue	Possible Cause	Solution
Can Opener Not Starting	Batteries not installed correctly or insufficient charge	Ensure batteries are installed correctly and have sufficient charge
Incomplete Cut	Improper alignment with can lid	Reposition the can opener and ensure proper alignment with the can lid
Blade Not Moving	Obstruction or food particles around the blade	Check for obstructions or food particles and clean if necessary
Opener Stops Midway	Low battery power	Replace the batteries if the opener stops before completing the cut
Lid Not Lifting	Magnet is dirty	Ensure the magnet is clean and free of debris for effective lid lifting
Battery Issues	Corrosion in battery compartment	Check for signs of corrosion in the battery compartment and clean as needed
Noisy Operation	Improper can placement	Ensure the can is placed on a flat surface and the opener is aligned correctly
Blade Jammed	Food particles causing obstruction	Remove the blade and clean thoroughly before reattaching
Can Slipping	Improper positioning of can opener	Make sure the can opener is positioned securely on top of the can
Opener Not Turning Off	Malfunction in stopping mechanism	Press the button again to manually stop the operation if it continues after the lid is cut

Pros and Cons

Pros:

- Effortless hands-free operation.
- Safe design minimizes risk of cuts from sharp edges.
- Compact and easy to store.

Cons:

- Requires batteries which may need frequent replacement.
- May struggle with oversized or irregularly shaped cans.

Contact Information

For customer support or inquiries, please reach out to:

- Email: customerservice@farberware.com
- Phone: 1-[800-432-5437](tel:800-432-5437)

Warranty

The Farberware Hands-Free Automatic Can Opener typically comes with a limited warranty covering manufacturing defects. Please refer to your product documentation for specific warranty details and conditions.

FAQs

How do I install the batteries in the Farberware 5165022?

To install the batteries in the Farberware 5165022, open the battery compartment located on the back of the can opener and insert 2 AA batteries, ensuring they are aligned correctly as indicated.

Can the Farberware 5165022 Hands-Free Automatic Can Opener handle large cans?

The Farberware 5165022 is designed to handle most standard-size cans, but it may struggle with very large or irregularly shaped cans.

Why is my Farberware 5165022 not cutting all the way through the lid?

If your Farberware 5165022 is not cutting all the way through, ensure the can is properly aligned and that the batteries have sufficient power.

How do I clean the blade on my Farberware 5165022?

To clean the blade on the Farberware 5165022, detach the blade carefully and wash it with warm soapy water. Dry thoroughly before reattaching.

What should I do if the Farberware 5165022 stops midway through opening a can?

If the Farberware 5165022 stops midway, replace the batteries as they may be running low on power.

How do I use the magnetic lid lifter on the Farberware 5165022?

After cutting the lid with the Farberware 5165022, the magnetic lid lifter will hold the lid in place for easy removal.

Can I use the Farberware 5165022 on cans with pull tabs?

The Farberware 5165022 can be used on cans with pull tabs, but it is recommended to remove the tab first to avoid obstruction.

Why is my Farberware 5165022 making a loud noise?

If your Farberware 5165022 is making a loud noise, ensure the can is placed on a flat surface and that the opener is properly aligned.

What type of batteries does the Farberware 5165022 require?

The Farberware 5165022 requires 2 AA batteries, which are not included in the package.

How do I know when the batteries need replacing in my Farberware 5165022?

You may need to replace the batteries in the Farberware 5165022 when it starts to operate more slowly

or struggles to cut through lids.

 
What is the warranty period for the Farberware 5165022 Hands-Free Automatic Can Opener?

The Farberware 5165022 comes with a limited warranty, and details can be found on the included warranty card.

How do I prevent the blade of the Farberware 5165022 from jamming?

To prevent the blade of the Farberware 5165022 from jamming, regularly clean it and ensure no food particles are obstructing its movement.

Video-Farberware 5165022 Hands-Free Automatic Can Opener



<https://www.references.plus/wp-content/uploads/2024/10/Farberware-5165022-Hands-Free-Automatic-Can-Opener.mp4>

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.