



Farenhyt ECS-RVM Remote Voice Module User Manual

[Home](#) » [Farenhyt](#) » Farenhyt ECS-RVM Remote Voice Module User Manual 

Farenhyt ECS-RVM Remote Voice Module



Contents

- [1 Remote Voice Module Product Installation Document](#)
- [2 Customer Support](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Remote Voice Module Product Installation Document

Description

The ECS-RVM Remote Voice Module is contained within the ECS-LOC or ECS-2100LOC Local Operator Console. It provides a supervised microphone for live communication and an interface for the Emergency Communication System.



NOTE: Installation and wiring of this device must be done in accordance with NFPA 72 and local ordinances.

Compatibility

The ECS-RVM is compatible with the following Honeywell Farenhyt Series FACPs:

- IFP-2100ECS
- IFP-2000ECS
- IFP-1000ECS
- IFP-300ECS
- IFP-100ECS



NOTE: For programming and DIP switch settings, refer to the FACP Manual.

Specifications

- Standby Current: 60mA
- Alarm Current: 80mA

Board Layout and Mounting

1. Open the cabinet door and the dead front panel.
2. Remove AC power and disconnect the backup batteries from the main control panel.
3. Mount the ECS-RVM in the middle section of the dead front on the six mounting studs. See Figure 1 for hole locations and Figure 4 for board mounting location.


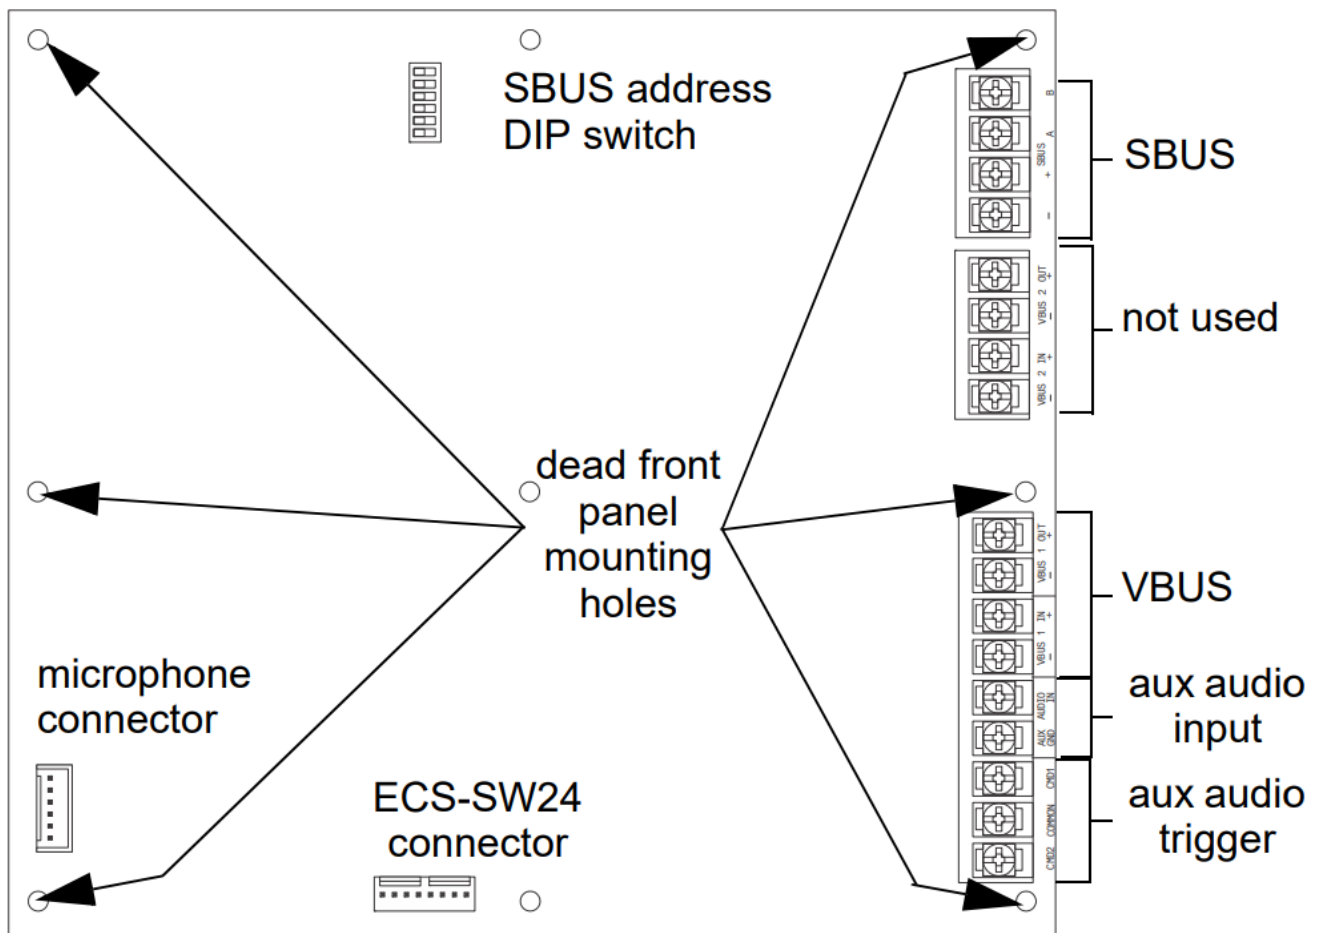


Figure 1 Back View of ECS-RVM

Figure 2 belows shows how to properly wire the ECS-RVM to the FACP SBUS.


Figure 2 Wiring the ECS-RVM to the FACP

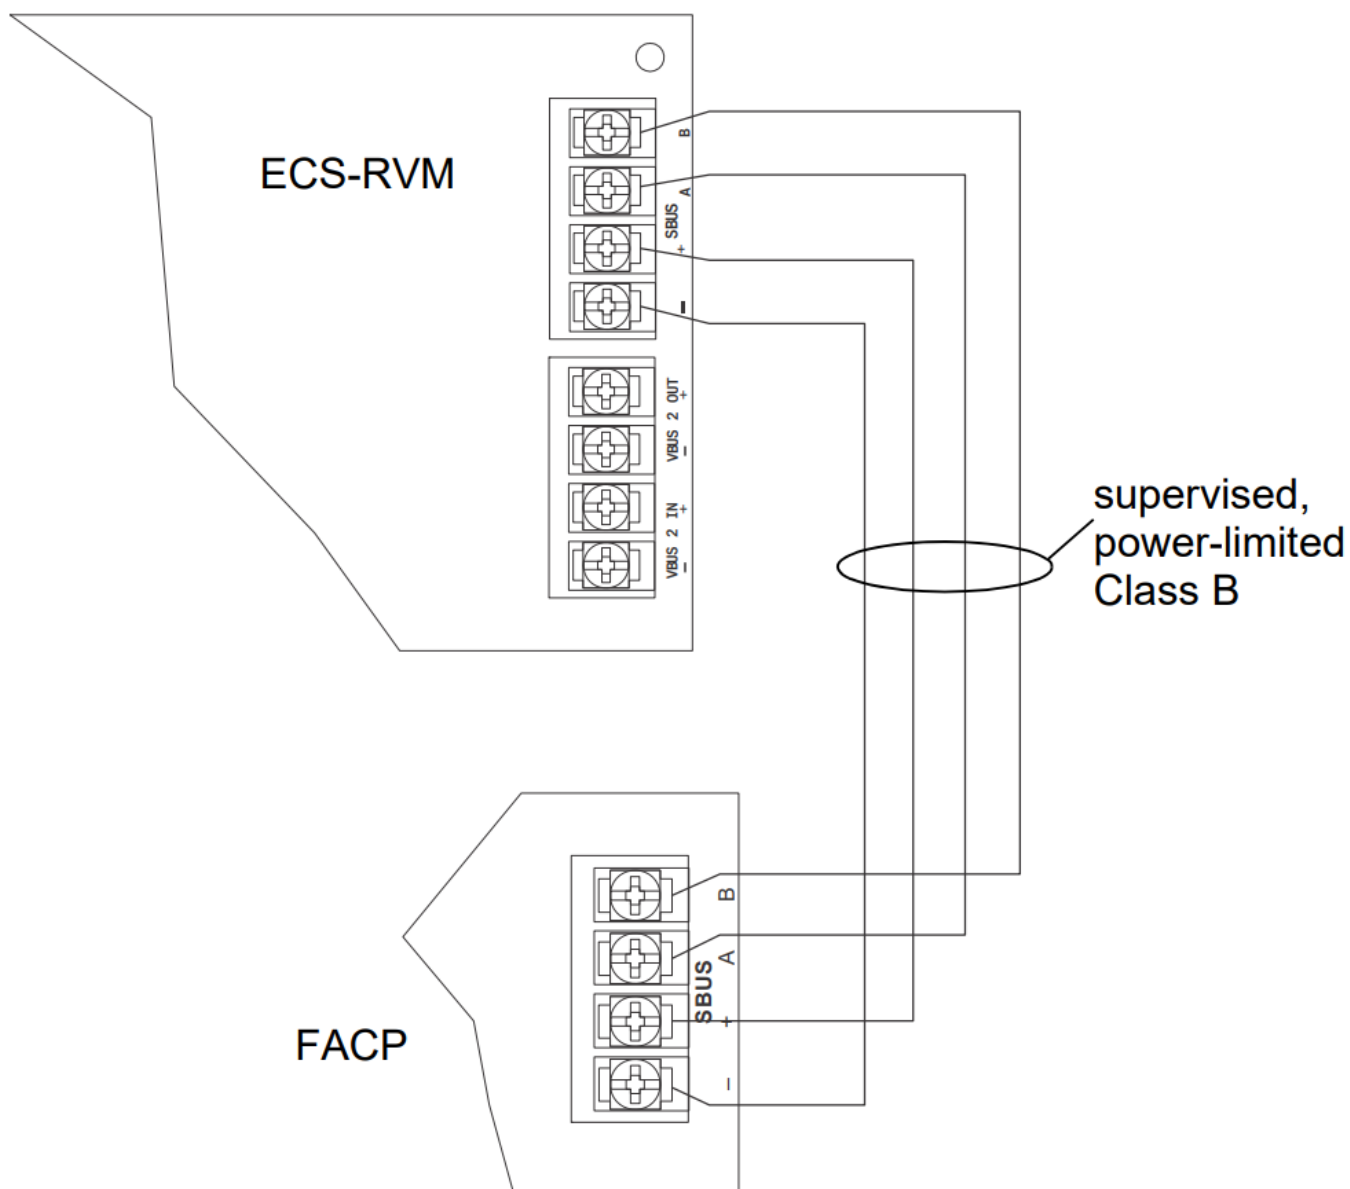


Installing the Microphone

1. Clip the microphone onto the microphone clip.

figure 4 Microphone Cord Inserted Through Dead Front Panel Hole

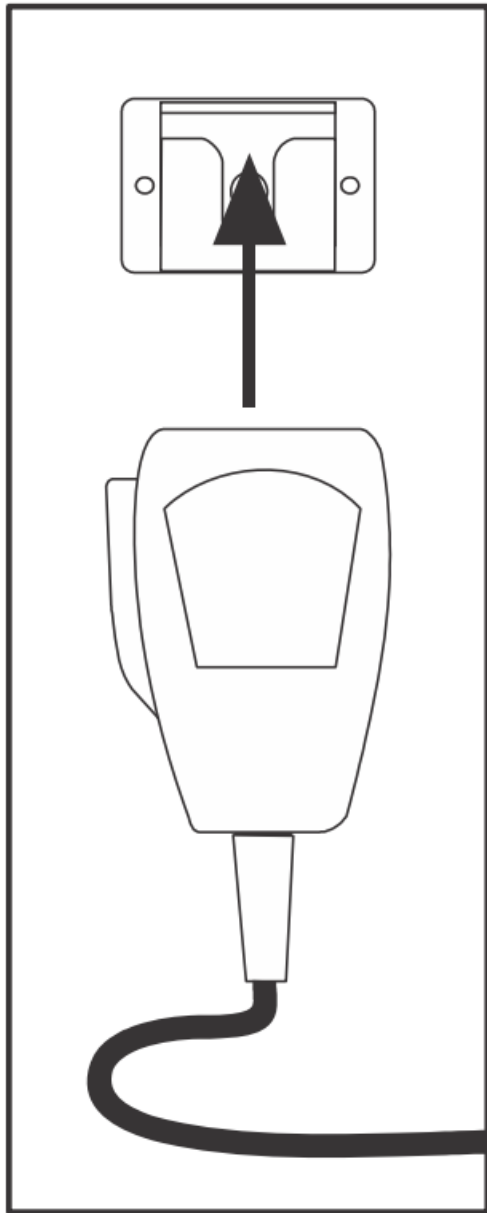


2. Insert microphone cord through hole at the bottom of the dead front panel.

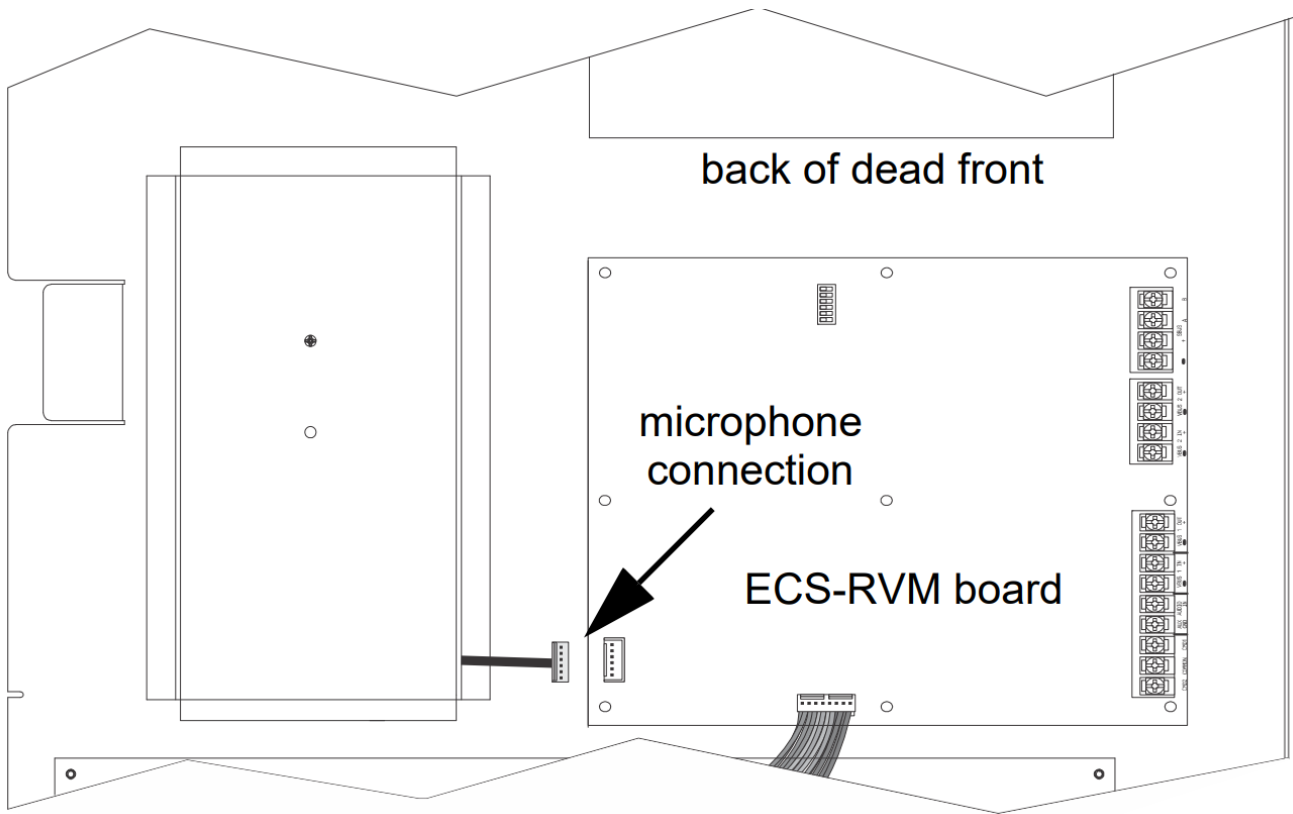

3. Attach strain relief clip to microphone cord. The strain relief clip should have about 2.75" of microphone cord through it.

Figure 5 Installing Strain Relief Clip

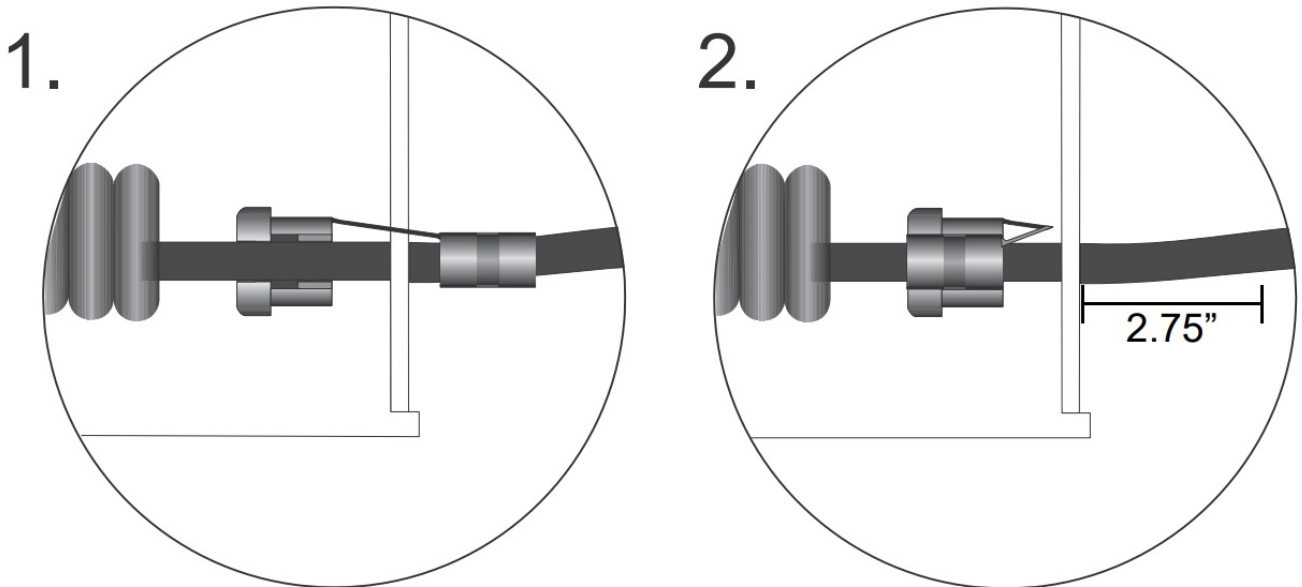


4. Push the strain into the hole in the dead front panel.
5. Attach connector to the ECS-RVM board.
6. Restore AC power and reconnect the backup batteries.

Customer Support

Honeywell Security & Fire
 12 Clintonville Road
 Northford, CT 06472-1610
 203.484.7161
www.farenhyt.com



Documents / Resources

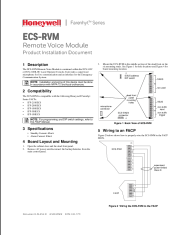	Farenhyt ECS-RVM Remote Voice Module [pdf] User Manual ECS-RVM Remote Voice Module, ECS-RVM, Remote Voice Module, Voice Module
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.