



# FAST TECH 9735647 Alarm Clock Smart Bluetooth Speaker Instruction Manual

[Home](#) » [FAST TECH](#) » FAST TECH 9735647 Alarm Clock Smart Bluetooth Speaker Instruction Manual 

*FAST TECH 9735647 Alarm Clock Smart Bluetooth  
Speaker Instruction Manual*

## Alarm Clock Smart Bluetooth Speaker Instruction Manual

Before using the product, please read the manual carefully and operate the product according to the instructions. Please keep the manual properly for reference .

 
### Contents

- [1 Warm Tips](#)
- [2 Bluetooth speaker function introduction](#)
- [3 Bluetooth speaker function introduction](#)
- [4 Instructions for using](#)
- [5 Time setting](#)
- [6 Alarm clock setting](#)
- [7 Troubleshooting](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

### Warm Tips

- \* We always devoted to improve product quality and functions, design is subject to change without notice.
- \* The manual has been carefully checked and strived to be accurate. If there' re any errors, the company will not bear the consequences.
- \* The drawing only for reference, please refer to the actual product when purchasing. We reserve all the right for the final explanation of the manual & related detail.
- \* Non professionals are not allowed to dismantle the machine by themselves, so as to avoid unnecessary damage to the machine, and should not be placed in the hot and humid environment.
- \* When the machine is not used for a long time, please charge the machine once a month to ensure that the battery is sufficient and the machine can be used normally when it is needed.

## Bluetooth speaker function introduction

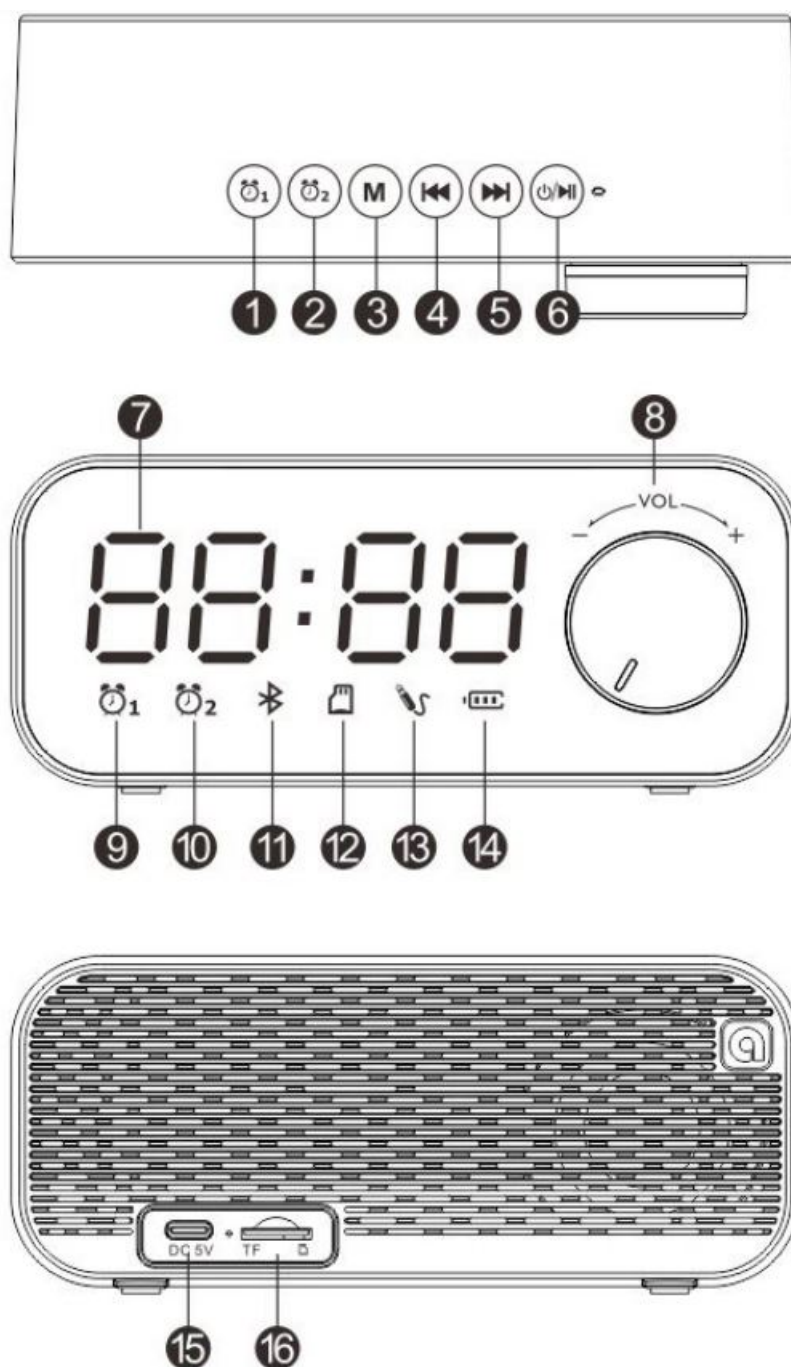


## Bluetooth speaker function introduction

1. Short press to turn on/off alarm 1, long press to set clock/alarm
2. Short press to turn on/off alarm 2, long press to set clock/alarm

3. Mode switch
4. Previous
5. Next
6. Long press-turn on/off  
Short press-play/pause  
Double click-knob light on/off
7. Time display
8. Volume control
9. Alarm clock 1
10. Alarm clock 2
11. Bluetooth mode
12. TF card mode
13. Audio input mode
14. Charging indication mode
15. Type-C SV charging
16. TF card slot

## Instructions for using

### \* Mobile Bluetooth connection method

1. Long press button  to turn on and enter the Bluetooth mode.
2. Turn on the mobile phone Bluetooth, search and, select B 126 to connect and pair.

### \* AUX (external audio input)


 
 
(some models don't have this function, please refer to the actual product) Use 3.5mm audio cable to connect to mobile phones, DVR drives, MP3/4 players and other equipment.

### \* Play with card


1. Insert the TF card with music files into the speaker to play.
2. Support M P3/WMA format, support maximum 32G capacity.

### \* FM radio playback

(some models don't have this function, please refer to the actual product)

1. Search for radio stations (need to connect the charging cable) Short press button **M** to switch to FM mode, long press button  to search station automatically, and save the searched station automatically.
2. Play the radio station  
In FM mode, short press button  to listen to the previous station, short press button  to listen to the next station.

## Time setting

1. In any mode, long press button  to enter the clock setting, the <Clock> number on the display screen will

start to flash, press button **⏮ / ⏭** to adjust the time of <Clock> (as shown below)



### Adjust clock time

2. Short press the button **⌚<sub>1</sub>** again, the <minute> number on the display start to flash, press button **⏮ / ⏭** to adjust the time of <clock> (as shown below)



### Adjust minutes

Long press button **⌚<sub>1</sub>** again, to save the settings (or automatically save the settings after 6 seconds)

### Alarm clock setting

In the mode without alarm clock, short press button **⌚<sub>1</sub>** to enter the alarm clock 1 setting Long press button **⌚<sub>1</sub>** again, the number of <Clock> on the display will start to flash, press button **⏮ / ⏭** to adjust the time of <Clock> on the display



Short press button **⌚<sub>1</sub>** again, the number of <Minute> on the display will start to flash, press button **⏮ / ⏭** to adjust the time of <Minute> on the display

Short press the button **⌚<sub>1</sub>** again to enter the selection of ring music. The speaker have 5 kinds of music as options. (Press button **⏮ / ⏭** to select music ringtone)

Long press button **⌚<sub>1</sub>** again, to save the setting of Alarm clock 1 ( or automatically save the settings after 6 seconds)

The setting method of Alarm 2 is the same as Alarm 1 ( Note: Short press button **⌚<sub>1</sub>** to set Alarm Clock 1, Short press button **⌚<sub>2</sub>** to set Alarm Clock 2)

Tip: when the alarm rings, pressing any key will stop or end the alarm, and the next cycle will ring again.

Steps to turn off the alarm clock: in the alarm mode, short press button  to turn off the alarm clock 1, short press button  to turn off the alarms clocks 2 .

(When the alarm light is on, it means the alarm clock is working, and when the alarm Light is off, it means the alarm is turned off).

## Troubleshooting

Problem points	Causes and Solutions
Bluetooth pairing failed	Reboot pairing There are too many Bluetooth devices around, which makes it difficult to search. Turn off other Bluetooth devices and search again
Low or distorted sound	Low battery Adjust the volume to a suitable level
Interruption of Bluetooth music	Whether it exceeds the effective connection distance of the speaker (10 meters effective distance) There are obstacles to the sound of speakers and mobile phones

Note: If the above method fails to eliminate the fault, please contact the dealer, do not disassemble and repair the machine by yourself, otherwise the warranty will not be provided

## Charging instructions

- \* Please use standard or equivalent power adapter.
- \* When the power of the product is low or insufficient, the speaker will emit a low-battery tone and then turn off automatically. At this time, charge the speaker as soon as possible. Charging until the indicator light is off, means the battery is fully charged.
- \* When not in use for a long time, it is recommended to charge the machine once a month.

## Documents / Resources

<p>Alarm Clock Smart Bluetooth Speaker</p> <p><b>Instruction Manual</b></p> <p>Before using the product, please read the manual carefully and operate the product according to the instructions. Please keep the manual properly for reference.</p> <p><b>Warm Tip</b></p> <ul style="list-style-type: none"><li>* The speaker is dedicated to improve product quality and function, design is subject to change without notice.</li><li>* The manual has been carefully checked and proved to be accurate. If there is any error, the company will not bear the consequences.</li><li>* The disclaimer of the instruction manual refers to the actual product when purchasing the speaker, all the rights for the final explanation of the manual belong to the company.</li><li>* Non-professionals are not allowed to dismantle the machine by themselves, or to avoid unnecessary damage to the machine, and should not be placed in the humid and corrosive environment.</li><li>* When the machine is not used for a long time, please charge the machine once a month to ensure that the battery is sufficient and the machine can be used normally when it is needed.</li></ul>	<p><a href="#">FAST TECH 9735647 Alarm Clock Smart Bluetooth Speaker</a> [pdf] Instruction Manual 9735647, Alarm Clock Smart Bluetooth Speaker, Smart Bluetooth Speaker, Alarm Clock Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
---	--