



FEIT Electric T848-850-B High Output Ballast Bypass Instruction Manual

[Home](#) » [Feit Electric](#) » FEIT Electric T848-850-B High Output Ballast Bypass Instruction Manual 

FEIT Electric T848-850-B High Output Ballast Bypass Instruction Manual



Contents

- [1 INSTALLATION & OPERATING INSTRUCTIONS](#)
- [2 HARDWARE INCLUDED](#)
- [3 Bypass Assembly Instructions](#)
- [4 Supplier's Declaration Of Conformity](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

INSTALLATION & OPERATING INSTRUCTIONS

PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION WHEN BYPASSING A BALLAST ALWAYS HAVE A QUALIFIED ELECTRICIAN DO YOUR ELECTRICAL WORK This LED tube is intended to replace fluorescent tube lamps with ANSI designation 32W/48T8.

WARNINGS

- Risk of fire / electrical shock

- LED Tube bypass ballast installation requires knowledge of luminaire electrical systems. (If you are not a qualified electrician, please do not attempt bypass ballast installation.)
- Risk of electric shock — disconnect power at source before installation.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during installation.
- If lamp or luminaire exhibits abnormal operation (buzzing, flickering, minimal light, etc.) turn off power, remove lamp and contact us.

For more information please visit www.feit.com.

- Do not install this lamp in a pre-heat luminaire.
- This lamp only operates on 120-277V. If lamp does not light when the luminaire is energized, remove lamp from luminaire and contact lamp manufacturer or qualified electrician.


CAUTIONS

- Do not use with dimmers.
- Do not look directly at the operating LED Tube.
- Do not touch this product with wet hands.
- Do not disassemble, repair or alter lamp.
- Suitable for damp locations.
- The luminaires shall be grounded.
- Be careful not to touch the lamp pins to the metal housing when installing.
- This device is not intended for use with emergency exits or emergency lights.

HARDWARE INCLUDED

NOTE: Hardware not show to actual size.

Part	Description	Quantity
AA	LED Tubes	16

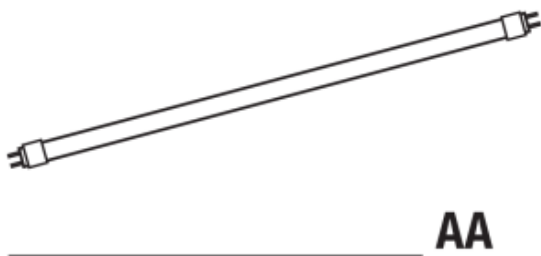

Bypass Assembly Instructions


BYPASSING MAGNETIC/ELECTRONIC BALLAST

1. Turn off the power at the switch and fuse box or circuit breaker.

2. Remove the existing ballast and existing starter (if present) from the fixture.
3. After removing the existing ballast, connect the live wire (L) to the wire coming from the lamp holder terminal. Next, connect the neutral wire (N) to the wire coming from the lamp holder terminal on the other side/end.


FOR BYPASS INSTALLATION ONLY

(PROFESSIONAL INSTALLATION IS RECOMMENDED.)

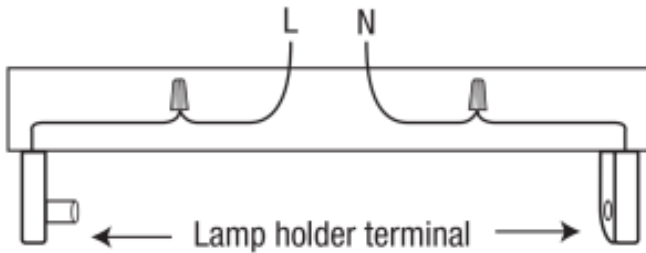

NOTE: Installers should not disconnect existing wires from lamp holder terminals to make new connections at lamp holder terminals. Instead, installers should cut existing lamp holder leads away from the lamp holder and make new electrical connections to lamp holder lead wires by employing applicable connectors.

4. Install the Feit T848 LED tube.

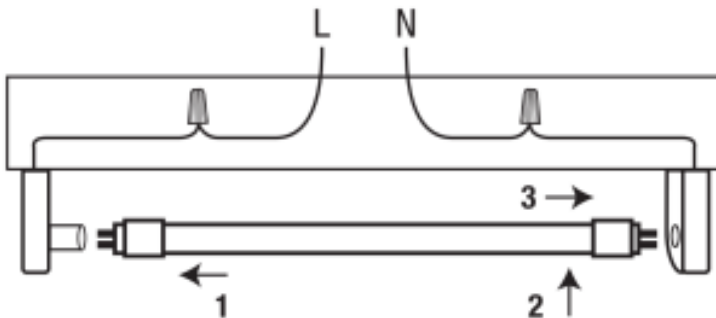

5. Turn-on the power and enjoy your Feit **T848** LED Tube.
6. After wiring modification is completed, attach the replacement cautionary label onto a visible place on the fixture that is kept visible after the installation of tubes.
Remove any pre-existing labels.



WARNING

USE LED LAMPS ONLY. THIS LUMINAIRE HAS BEEN MODIFIED TO USE LED LAMPS AND CAN NO LONGER OPERATE THE ORIGINALLY INTENDED FLUORESCENT LAMPS SAFELY. FLUORESCENT LAMPS COULD BREAK AND CAUSE PERSONAL INJURY IF USED IN THIS FIXTURE.

Supplier's Declaration Of Conformity

47 CFR / 2.1077 Compliance Information

Unique Identifier: T848/850/B/LED/16
Responsible Party – U.S Contact Information
FEIT ELECTRIC Co.
4901 GREGG RD. PICO RIVERA, CA, USA 90660-2108
TEL: (562) 463-2852, www.feit.com


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. CAN ICES-005 (B)



Documents / Resources

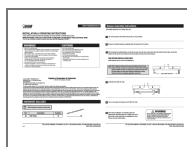

[FEIT Electric T848-850-B High Output Ballast Bypass](#) [pdf] Instruction Manual
T848-850-B, High Output Ballast Bypass