



FELCO 2 Pruner with FREE Sharpener Owner's Manual

[Home](#) » [FELCO](#) » FELCO 2 Pruner with FREE Sharpener Owner's Manual 

Contents

- 1 FELCO 2 Pruner with FREE Sharpener
- 2 How to maintain your FELCO tool
 - 2.1 Sharpening
 - 2.2 Adjusting
 - 2.3 Cleaning & Oiling
- 3 How to maintain your FELCO tool
 - 3.1 Complete Cleaning
- 4 Documents / Resources
- 5 Related Posts



FELCO 2 Pruner with FREE Sharpener




How to maintain your FELCO tool

Sharpening

Sharpen your tool in the course of the day or when it becomes dull. Use of a FELCO 903 sharpener

1. Sharpen the edge.

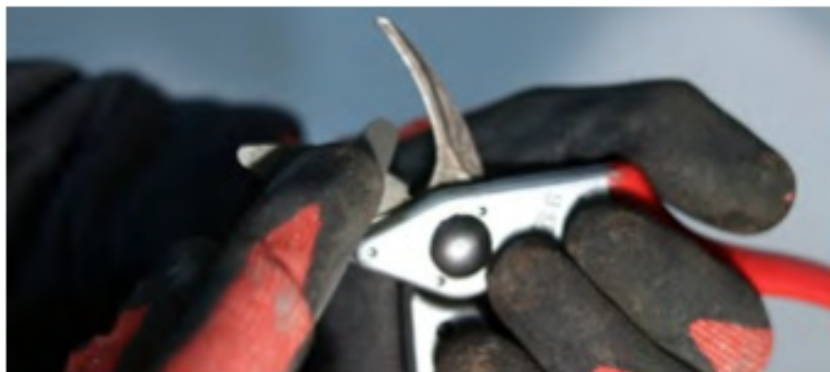

2. Pressure on the edge.



3. Remove the burr.



Adjusting

Adjust your tool in the course of the day or when required. Use of a FELCO 2/30 adjustment key:

1. Remove the spring.



2. Free locking segment.



3. Adjust the tightness.



4. . Block locking segment.



5. Fully open and release.



6. Blade crossing should be between $1/2$ & $2/3$.



7. Spring is back in place.



Cleaning & Oiling

Clean and oil your FELCO tool at the end of the day. Use of FELCO 980 oil and FELCO 981 cleaner:

1. If wet, dry with cloth



2. Spray the cutting head with cleaning spray.



3. Use adjustment key to scrape sap off the blade.




4. ...off the sap groove...



5. ...and off the anvil blade edge.



6. Spray oil.

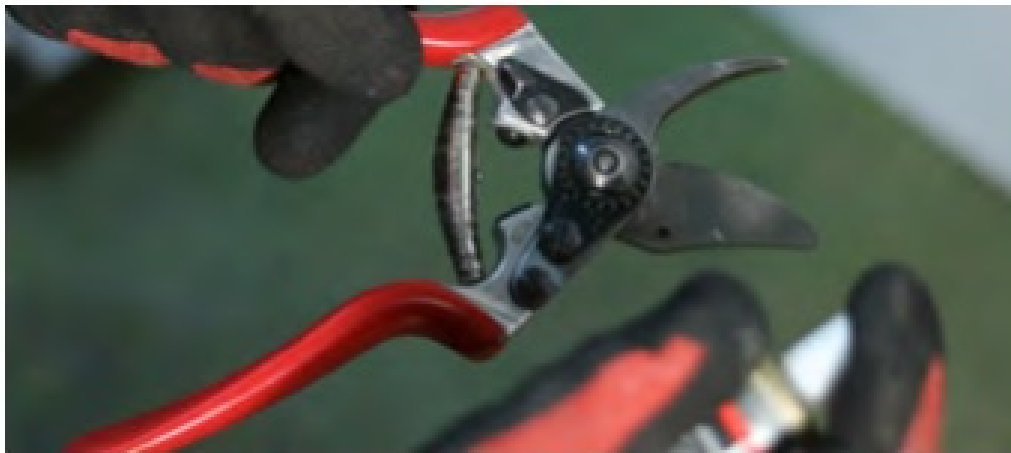

How to maintain your FELCO tool

Complete Cleaning

A complete cleaning of your FELCO tool, including dismantling and greasing, should be done at least once each season:

1. Use a metal brush to remove dirt & rust from the cutting head.



2. Remove the spring.



3. Unlock the locking segment.



4. Unscrew and remove the nut.




5. Remove the blade.




6. Brush all metallic surfaces to remove dirt & rust.



7. Use cleaning spray on the blade & anvil blade.

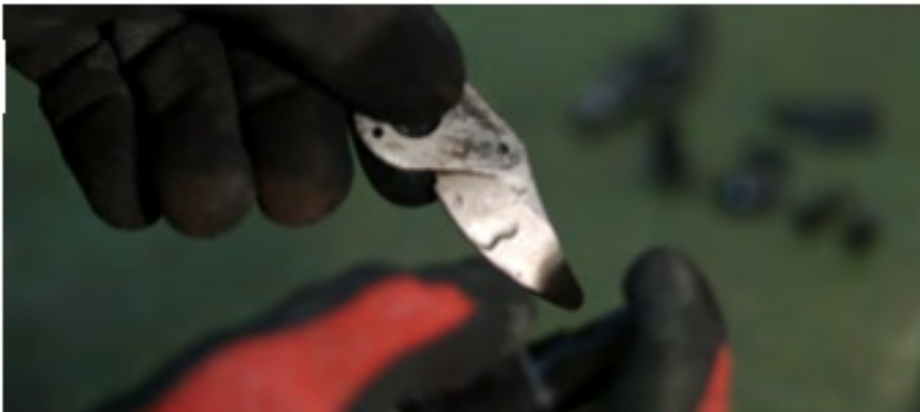

8. Use an adjustment key to scrape dirt and rust from the blade and anvil blade.

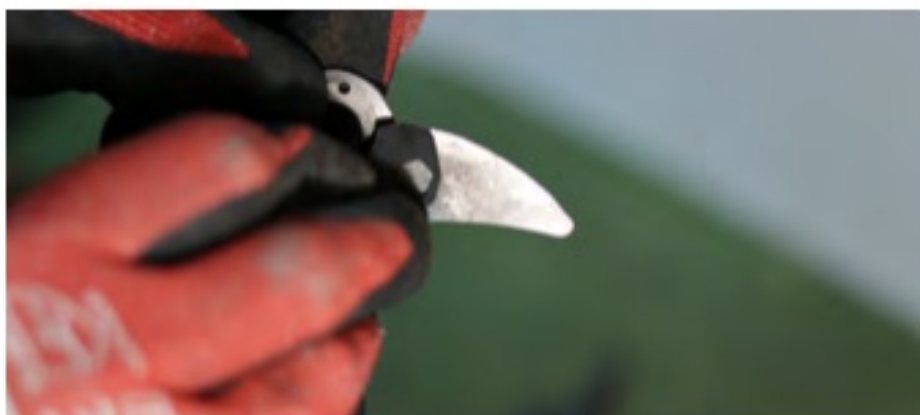


9. Finish cleaning the blade and anvil blade with an abrasive sponge.



10. All components are clean and ready to be reassembled.



11. Fix the anvil blade then grease the external surface.

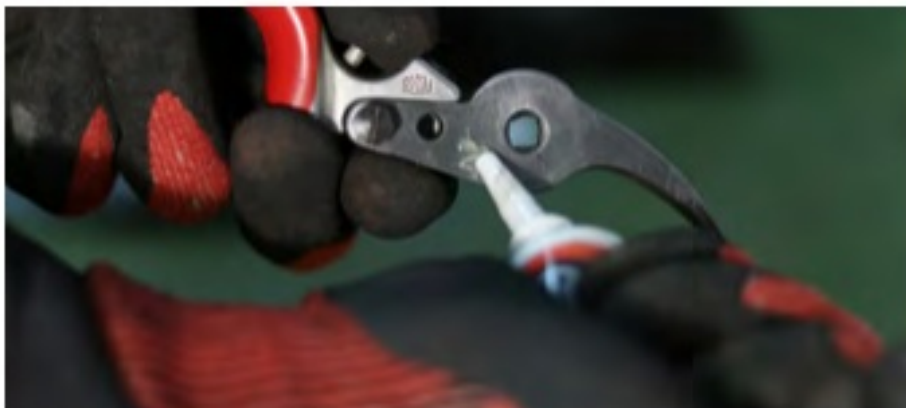

12. Load the grease pocket.



13. Grease the external side of the blade before assembly.



14. Place the bolt and load it with grease.



15. Finish cutting head assembly.



16. Adjust the cutting head and then place the spring.



17. Oil cutting head and spring.




18. Complete!



felco.com

Documents / Resources

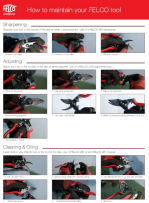	<p>FELCO 2 Pruner with FREE Sharpener [pdf] Owner's Manual 2 Pruner with FREE Sharpener</p>
---	---

[Manuals+](#)