



[Home](#) » [Fenshine](#) » **Fenshine ZERO9 USB Rechargeable Mini Fan User Manual** 

Contents [[hide](#)]

- [1 Fenshine ZERO9 USB Rechargeable Mini Fan](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)

FENSHINE

Fenshine ZERO9 USB Rechargeable Mini Fan



INTRODUCTION

A stylish and portable cooling solution designed specifically for eyelash technicians and other mobile beauty professionals is the Fenshine ZERO9 USB Rechargeable Mini Fan. This bladeless fan, which was released by Fenshine and is reasonably priced at **\$9.99**, combines performance, safety, and style in a stylish design. It is perfect for usage at the salon, at home, or on the go because it is small enough to carry easily in your hand or purse (2.3" x 2.3" x 6.3"). It runs on a 2000mAh lithium battery that provides up to 8 hours of operation on a single charge and is constructed from premium ABS and PC components. A whisper-quiet 5 dB noise level, a detachable base, and three adjustable settings allow it to produce calming airflow without disturbing your surroundings. It is ideal for drying eyelash extensions or just cooling off on hot days because of its bladeless design, which guarantees safe operation around clients, children, or pets. The ZERO9 is a USB-rechargeable, lightweight, and effective beauty essential that combines simplicity and innovation.

SPECIFICATIONS

Brand	Fenshine
Model Name	Mini Fan ZERO9
Price	\$9.99
Color	White 02
Style	Minimalist
Product Type	USB Rechargeable Mini Bladeless Fan / Eyelash Fan Dryer
Electric Fan Design	Blower
Power Source	Battery Powered (Cordless)
Battery Capacity	2000mAh Lithium Battery
Charging Time	2–3 Hours
Runtime	Up to 8 Hours (Low Speed)
Speed Levels	3 Adjustable Speeds (Low / Medium / High)
Control Method	Push Button / Touch
Noise Level	5 dB (Extremely Quiet)
Material	ABS + PC Plastic
Blades	Bladeless Design – Safe for Children and Pets
Dimensions	8.6in(22cm)” H 2.4in(6cm)” W
Weight	6 oz / 0.17 kg
Wattage	5 Watts
Voltage	5V

Mounting Type	Clip-On + Base Stand (Included)
Included Components	Fan, Detachable Base, USB Charging Cable
Connector Type	USB Type-A
Reusability	Rechargeable
Cordless	Yes
Finish Type	Painted
Room Type	Bedroom
Recommended Uses	Eyelash Extensions, Eye Soothing, Makeup, Travel, Outdoor Sports, Cooling
Theme	Beauty & Personal Care
Indoor/Outdoor Use	Both
Special Features	Portable, Bladeless, Lightweight, Safe, Low Noise, Easy to Clean
Manufacturer	Fenshine
UPC	711731089898
Size	1 Count (Pack of 1)



WHAT'S IN THE BOX

- Fan
- User Manual

FEATURES

- **Bladeless & Safe:** The fan uses bladeless airflow technology, offering a breeze without spinning blades—safe for both kids and pets.
- **Lightweight Design:** Weighing only about 6 ounces, it's compact and super easy to carry in your purse, pocket, or travel kit.
- **Ultra Quiet Operation:** With a noise level as low as 5 dB, this fan operates almost silently, making it perfect for quiet environments.
- **3 Speed Settings:** Switch between low, medium, and high airflow depending on your comfort using the easy-touch button.



- **Built-In 2000mAh Battery:** Fully charge in just 2 to 3 hours, and enjoy up to 8 hours of use on the lowest setting.
- **USB Rechargeable:** You can charge it with any USB port—whether that’s a laptop, car charger, or power bank.



- **Perfect for Eyelash Extension Work:** It's designed for professional lash technicians to dry adhesives and provide comfort to clients.



- **Detachable Base Stand:** Comes with a small base that allows you to set the fan down and use it hands-free.
- **Strong Yet Gentle Breeze:** Offers effective airflow without being too harsh, making it ideal for close-up uses like face cooling.
- **Travel-Friendly:** Great for outdoor activities, shopping, or gym sessions—just drop it in your bag and go.
- **Touch Control:** Operated by a single button that makes switching between speeds simple and intuitive.
- **Smooth Finish:** Made from durable ABS and PC plastic with a sleek design that looks great in any setting.
- **Battery-Powered & Cordless:** No need for replacement batteries—just recharge and go.
- **Multi-Purpose Use:** Not just for beauty work—use it during walks, commutes, workouts, or even while applying makeup.
- **Great Gift Idea:** Stylish, functional, and affordable, making it a thoughtful gift for friends or beauty professionals.



SETUP GUIDE

- **Unbox Carefully:** Take the fan, USB cable, and base stand out of the packaging.
- **Inspect the Fan:** Make sure everything looks intact and ready to use.
- **Charge Before First Use:** Connect the USB cable to the fan and plug it into a charger or power source.
- **Allow Full Charging:** Let the battery charge fully for 2–3 hours before using it for the first time.
- **Attach the Base (if needed):** Place the fan into the detachable base if you want to use it without holding.
- **Turn It On:** Press the button once to activate the fan on low speed.
- **Switch Speeds:** Press the button again to move to medium or high speed as desired.
- **Position Comfortably:** Hold in hand or place on a flat surface at your workspace or beauty table.
- **Use for Lash Work:** Hold near your client's eyes to gently dry the adhesive and keep them comfortable.
- **Power with USB Devices:** Can be charged using a laptop, wall adapter, car USB port, or power bank.
- **Avoid Obstruction:** Make sure not to block the air intake or outlet while the fan is

running.

- **Pack for Travel:** When traveling, simply place the fan and cable in a pouch or bag.
- **Handle With Care:** Though durable, the fan should not be dropped or roughly handled.
- **Test All Functions:** Run through all speed settings to ensure it's working properly.
- **Keep Charger Handy:** Store the USB cable in a convenient place so you always have it ready when needed.

CARE & MAINTENANCE

- **Turn Off Before Cleaning:** Always power down and unplug the fan before cleaning.
- **Use a Dry Cloth:** Gently wipe the surface with a clean, dry cloth.
- **Avoid Water Exposure:** Never submerge the fan or splash it with water.
- **Clean the Air Vents:** Remove any dust or particles from the intake/outlet areas to maintain airflow.
- **Don't Use Harsh Cleaners:** Avoid strong chemicals or alcohol-based products when cleaning.
- **Wipe After Lash Work:** Clean gently if used around glue or products during lash sessions.
- **Keep Charging Port Clean:** Use a dry cotton swab if dust accumulates in the charging port.
- **Recharge Regularly:** Don't let the battery sit empty for long—charge it every few weeks if not in use.
- **Store in a Dry Place:** Keep the fan somewhere away from moisture or heat sources.
- **Check the Cable:** Make sure the charging cable remains in good condition and doesn't fray.
- **Detach the Base Before Travel:** Remove the stand to avoid damage during transport.
- **Avoid Direct Sunlight:** Don't leave the fan in very hot environments like a parked car.
- **Handle Gently:** The bladeless design is sturdy but should be treated with care.
- **Inspect for Damage:** If it vibrates unusually or the airflow drops, check for clogs or internal issues.
- **Use Only USB-A Chargers:** Stick to 5V standard USB ports to avoid overcharging or battery strain.

TROUBLESHOOTING

Issue	Possible Cause	Solution
The fan is not turning on	The battery is drained	Fully charge for 2–3 hours before use
Weak airflow	The fan speed is set too low	Press the button to cycle to the medium or high setting
Fan stops mid-use	Overuse or overheating	Let the fan cool down for 10 minutes before restarting
Not charging	Faulty cable or port	Try a different USB cable or charging source
Blinking power light	Low battery	Plug in immediately to recharge
Button unresponsive	Dirt or debris under the button	Clean around the button with a soft cloth
The base feels unstable	Improperly attached base	Reattach the base securely or use it on a flat surface
No airflow despite power on	Air vent blockage	Ensure vents are clear and free of debris
The fan is noisy or vibrating	Internal dust or a dropped fan	Gently tap to dislodge dust or inspect for damage
USB port not connecting	Loose connection	Reinsert the USB firmly or switch to another port

PROS & CONS

PROS

- Bladeless design ensures safety and easy cleaning

- Up to 8 hours of use on a full charge
- Ultra-quiet operation with only 5 dB noise level
- Compact and travel-friendly with included base support
- Rechargeable via any USB-enabled device

CONS

- Not waterproof or suitable for wet environments
- Fixed battery—cannot be replaced
- No digital display or battery level indicator
- May not offer strong airflow for outdoor heat relief
- Limited to three preset speeds without fine-tuning

WARRANTY

The Fenshine ZERO9 Mini Fan comes with a 6-month limited warranty from the date of purchase. This warranty covers manufacturer defects, including battery issues, motor failure, or button malfunction. It does not cover damage from misuse, liquid exposure, or unauthorized repairs. To make a claim, customers should retain their original purchase receipt and contact Fenshine's customer support.

FREQUENTLY ASKED QUESTIONS

What is the main purpose of the Fenshine ZERO9 USB Rechargeable Mini Fan?

The Fenshine ZERO9 Mini Fan is specially designed for eyelash extension drying, providing safe, bladeless airflow to soothe and cool sensitive eyes during or after the procedure.

What type of battery does the Fenshine ZERO9 Mini Fan use?

The fan is powered by a 2000mAh rechargeable lithium battery, offering high performance and energy efficiency.

Is the Fenshine ZERO9 Fan safe for use around children and pets?

It features a bladeless design, making it safe for kids and pets while eliminating the risk of injury or accidents.

Can the Fenshine ZERO9 USB Fan be used hands-free?

It comes with a detachable base that allows the fan to stand upright for hands-free use during eyelash procedures or personal cooling.

How do I charge the Fenshine ZERO9 Mini Fan?

The fan can be recharged using any USB-A enabled device, such as laptops, power banks, or car chargers.

Why is not my Fenshine ZERO9 Mini Fan turning on after charging?

Ensure it is fully charged, then press and hold the power button for 2 to 3 seconds. If it still does not turn on, try using a different charging cable or power source.

The Fenshine ZERO9 Fan is not charging properly what could be the problem?

Check for a loose USB connection or damaged cable. Try plugging into a different USB-A port or wall adapter and ensure the fans indicator light turns on during charging.

VIDEO – PRODUCT OVERVIEW

<https://manuals.plus/wp-content/uploads/2025/07/Fenshine-ZERO9-USB-Rechargeable-Mini-Fan-User-Manual.mp4>

References

- [User Manual](#)

🔍 B08LGX55WJ, Fenshine, Fenshine ZERO9, USB Rechargeable Mini Fan, user manual,

📁 Fenshine ZERO9

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.