



FENTON RP165 Series Record Player Set Instruction Manual

[Home](#) » [FENTON](#) » FENTON RP165 Series Record Player Set Instruction Manual 



Congratulations to the purchase of this Fenton product. Please read this manual thoroughly prior to using the unit in order to benefit fully from all features.

Read the manual prior to using the unit. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock.

Keep the manual for future reference.

- Prior to using the unit, please ask for advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage-carrying parts. Therefore do NOT open the housing.

- Do not place metal objects or pour liquids into the unit This may cause electrical shock and malfunction.
- Do not place the unit near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The unit is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the unit from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the unit is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet, and DO NOT switch the unit on. Contact your dealer. Do NOT connect the unit to a rheostat or dimmer.
- To avoid fire and shock hazards, do not expose the unit to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the unit to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the unit will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the unit has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the unit in humid rooms or outdoors.
- To prevent accidents in companies, you must follow the application guidelines and follow the instructions.
- Do not repeatedly switch the fixture on and off. This shortens the lifetime.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Do not force the controls.
- This unit is with a speaker inside which can cause a magnetic field. Keep this unit at least 60cm away from the computer or TV.
- If this product has a built-in lead-acid rechargeable battery. Please recharge the battery every 3 months if you are not going to use the product for a long period of time. Otherwise, the battery may be permanently damaged.
- If the battery is damaged please replace it with a battery of the same specifications. And dispose of the damaged battery environment friendly.
- If the unit has fallen, always have it checked by a qualified technician before you switch the unit on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the unit with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the unit off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the unit.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if the power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this unit.
- Keep the original packing material so that you can transport the unit in safe conditions.



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The unit has been certified CE. It is prohibited to make any changes to the unit. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling center. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalidate your warranty. Do not make any changes to the unit. This would also invalidate your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Fenton cannot be held responsible for personal injuries caused by the disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

Contents

1 UNPACKING INSTRUCTION

2 OVERVIEW

3 OPERATION

4 CONNECT BT-DEVICE

5 OVERVIEW

6 TECHNICAL SPECIFICATION

7 Documents / Resources

7.1 References

8 Related Posts

UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain the packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. In the event that the product must be returned to the factory, it is important that the product be returned to the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

OVERVIEW

1. Tonearm Lever

The fixed tonearm can be raised and lowered pressing the raise / lower lever.

2. Tone-arm Stand

3. 33 / 45 / 78 RPM Switch

This switch controls the RPM of the turntable platter.

4. Autostop Switch ON/OFF

This switch turns auto stop on or off. When the automatic stop is enabled, the platform will start rotating as

soon as the tonearm is placed over the record and will stop rotating when it has reached the end of the record. Some vinyl records stop before the end or do not stop when the end is reached. In this case, set Auto-stop to OFF.

5. **Tonearm Clip**

This specially designed arm clip secures the tonearm while at rest or when not in use.

6. **Cartridge with needle**

When the turntable is not in use, it is recommendable to place the removable protection cover on the stylus.

7. **Volume control**

Adjust the volume for the speakers.

8. **LED Indicator**

The indicator lights up when the power is turned on.

9. **Function Mode**

Select the BT or phono play function.

10. **Platter**

Place your record here.

11. **45RPM Platter**

12. **DC IN port**


Connecting the 12Volt/DC power adaptor.

13. **Line output**

The audio from a playing vinyl record is sent to this line-level coaxial audio output. This must not be connected to phono-level devices.

OPERATION

1. Switch the function mode (9) to PH. Turn on the power switch at the rear of the turntable player. The indicator will become red color.
2. Place a record on the turntable platter and select the desired speed (33/45/78RPM) according to the record.
NOTE: when playing a 45RPM record, use the included 45RPM adapter located inside the accessories bag.
3. Remove the stylus protector. Open the tone-arm clip to release the tone-arm. Push the lift lever backward to raise the tone-arm and gently move the tone-arm to the desired position over the record. The turntable will begin to spin when the arm is moved toward the record. Push the lift lever forward to lower the tone-arm slowly onto the desired position on the record to begin playing the record.

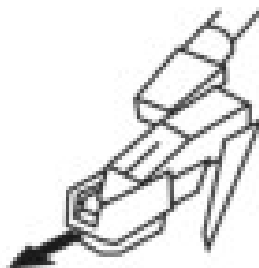

NOTE: -The record will begin to spin only when the tone-arm is moved toward the record if the Auto Stop is turned on.

– If the AUTO STOP ON/OFF Switch is turned ON, the record will stop automatically when finished (For some few vinyl records, it will stop when it does not come to the end OR it will not stop when it comes to the end.). If Auto Stop Control is turned OFF, the record will NOT stop automatically when finished.


4. Turn the Volume Control Knob to adjust the volume.

CONNECT BT-DEVICE



1. Switch the function mode (9) to BT. The LED indicator will flash in blue color.
2. Turn on the BT function of your mobile phone, tablet, or other BT device and search the turntable player with its name Fenton record player.
3. After pairing and connection, the LED indicator will stop flashing. You can play your music from your BT device.
4. Turn the volume control knob to adjust the volume.

OVERVIEW

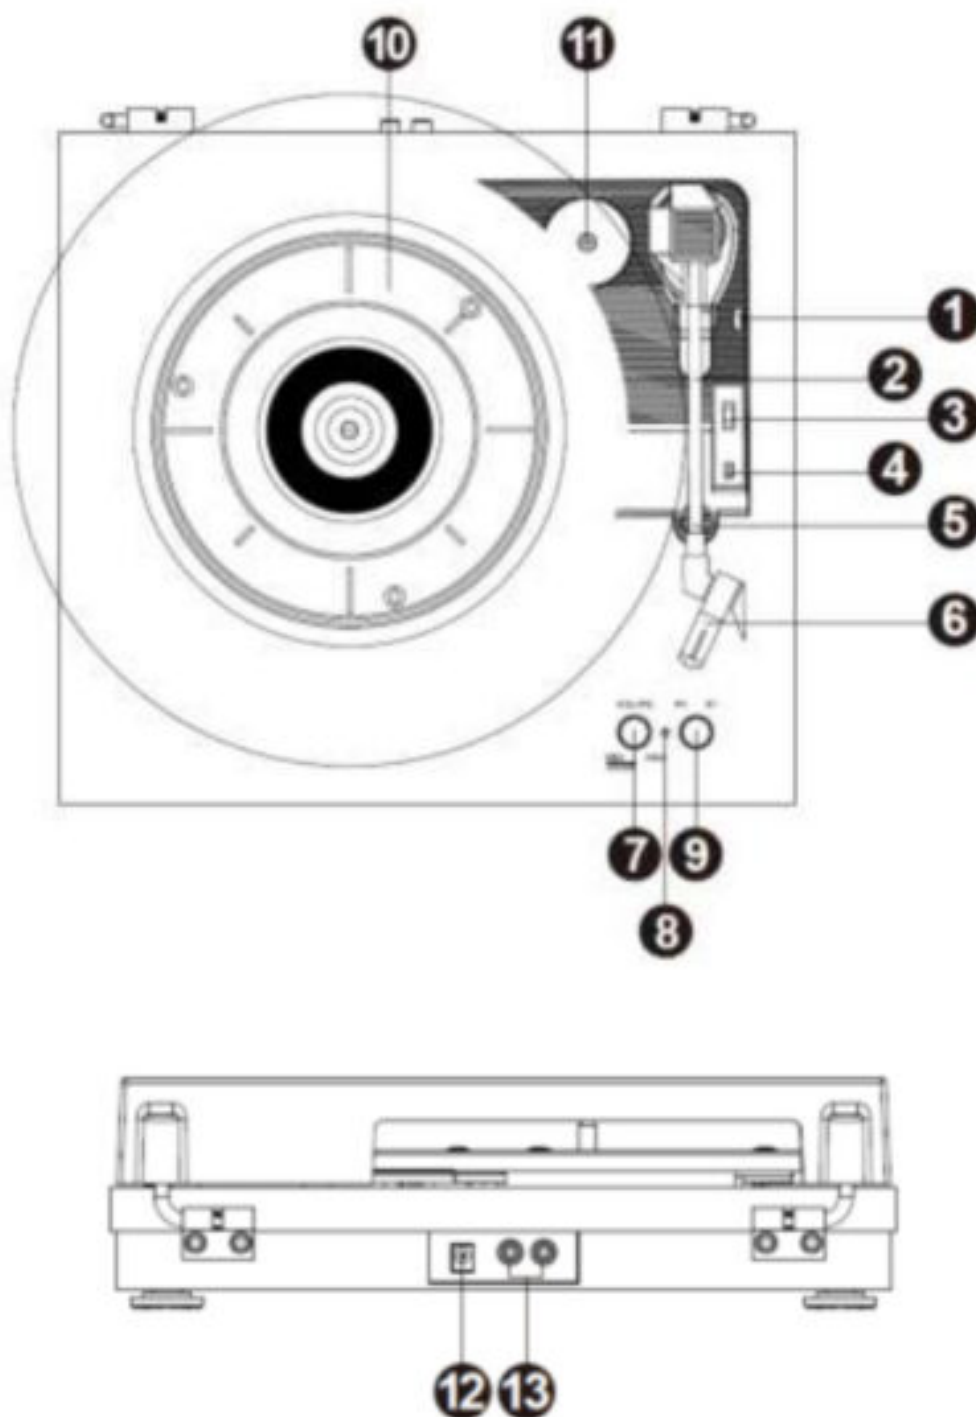


TECHNICAL SPECIFICATION

	RP165L	RP165	RP165D
Ref.nr.	102.153	102.154	102.155
Output connections	RCA		
Speed settings (RPM)	33, 45, 78		
Output power	100W		
Power supply	100-240VAC 50/60Hz (12V Adapter)		
Dimensions (L x W x H)	361 x 262 x 465mm		
Weight (kg)	5,40		

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:



-  • Low Voltage (LVD) 2014/35/EU
- Electromagnetic Compatibility (EMC) 2014/30/EU
- Restriction of Hazardous Substances (RoHS) 2011/65/EU







Specifications and design are subject to change without prior notice.

www.tronios.com

Copyright © 2021 by Tronios The Netherlands

Documents / Resources

 <small>RP165 Series Record Player Set 100W 33, 45, 78 RPM</small>  <small>INSTRUCTION MANUAL GEBRUIKSAANWIJZING INSTRUCCIONES DE USO MANUAL DE INSTRUCCIONES MANUAL D'ISTRUTTORI INSTRUCȚIA DE UTILIZARE</small>	FENTON RP165 Series Record Player Set [pdf] Instruction Manual RP165 Series Record Player Set, RP165 Series, Record Player Set
--	---

 <p>RP165 Series Record Player Set Part # 165 001 165 002 165 003 165 004 165 005</p> <p>INSTRUCTION MANUAL GEBRUCHSANWEISUNG BEDIENUNGSANLEITUNG MANUAL DE INSTRUCCIONES MANUEL D'INSTRUCTIONS INSTRUCCJA OBSŁUGI</p>	<p>FENTON RP165 Series Record Player Set [pdf] Instruction Manual RP165 Series Record Player Set, RP165 Series, Record Player Set</p>
 <p>RP165 Series Record Player Set Part # 165 001 165 002 165 003 165 004 165 005</p> <p>INSTRUCTION MANUAL GEBRUCHSANWEISUNG BEDIENUNGSANLEITUNG MANUAL DE INSTRUCCIONES MANUEL D'INSTRUCTIONS INSTRUCCJA OBSŁUGI</p>	<p>Fenton RP165 Series Record Player Set [pdf] Instruction Manual RP165 Series Record Player Set, Series Record Player Set, Record Player Set, Player Set</p>
 <p>RP165 Series Record Player Set Part # 165 001 165 002 165 003 165 004 165 005</p> <p>INSTRUCTION MANUAL GEBRUCHSANWEISUNG BEDIENUNGSANLEITUNG MANUAL DE INSTRUCCIONES MANUEL D'INSTRUCTIONS INSTRUCCJA OBSŁUGI</p>	<p>FENTON RP165 Series Record Player Set [pdf] Instruction Manual RP165 Series, Record Player Set, Record Player, Player Set</p>
 <p>RP165 Series Record Player Set Part # 165 001 165 002 165 003 165 004 165 005</p> <p>INSTRUCTION MANUAL GEBRUCHSANWEISUNG BEDIENUNGSANLEITUNG MANUAL DE INSTRUCCIONES MANUEL D'INSTRUCTIONS INSTRUCCJA OBSŁUGI</p>	<p>FENTON RP165 Series Record Player Set [pdf] Instruction Manual RP165 Series, Record Player Set, RP165 Series Record Player Set</p>
 <p>RP165 Series Record Player Set Part # 165 001 165 002 165 003 165 004 165 005</p> <p>INSTRUCTION MANUAL GEBRUCHSANWEISUNG BEDIENUNGSANLEITUNG MANUAL DE INSTRUCCIONES MANUEL D'INSTRUCTIONS INSTRUCCJA OBSŁUGI</p>	<p>FENTON RP165 Series Record Player Set [pdf] Instruction Manual RP165 Series Record Player Set, RP165 Series, Record Player Set, Player Set</p>
 <p>RP165 Series Record Player Set Part # 165 001 165 002 165 003 165 004 165 005</p> <p>INSTRUCTION MANUAL GEBRUCHSANWEISUNG BEDIENUNGSANLEITUNG MANUAL DE INSTRUCCIONES MANUEL D'INSTRUCTIONS INSTRUCCJA OBSŁUGI</p>	<p>FENTON RP165 Series Record Player Set [pdf] Instruction Manual RP165 Series Record Player Set, Record Player Set, RP165 Series, Record Player, Player Set , Player, RP165 Series</p>

References

-  [Stibat](#)
-  [Stibat](#)

-  [Sound & Light distributor - Tronios.com](#)
-  [Inleveren is terugkrijgen - Wecycle](#)
-  [Inleveren is terugkrijgen - Wecycle](#)

Manuals+.