



FENTON RP170 Series Record Player Instruction Manual

[Home](#) » [FENTON](#) » FENTON RP170 Series Record Player Instruction Manual



RP170 Series Record Player
Ref. nr.: 102.165; 102.166



INSTRUCTION MANUAL

Congratulations on the purchase of this Fenton product. Please read this manual thoroughly prior to using the unit in order to benefit fully from all features.

Read the manual prior to using the unit. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock.

Keep the manual for future reference.

- Prior to using the unit, please ask for advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage-carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the unit This may cause electrical shock and malfunction.
- Do not place the unit near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The unit is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the unit from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the unit is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the unit on. Contact your dealer. Do NOT connect the unit to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the unit to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the unit to an earthed mains outlet (220/240Vac/50Hz) protected by a 10-16A use.
- During a thunderstorm or if the unit will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the unit has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the unit in humid rooms or outdoors.
- To prevent accidents in companies, you must follow the application guidelines and follow the instructions.
- Do not repeatedly switch the fixture on and off. This shortens the lifetime.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Do not force the controls.
- This unit is with a speaker inside which can cause a magnetic field. Keep this unit at least 60cm away from the computer or TV.
- If this unit has a built-in lead-acid rechargeable battery. Please recharge the battery every 3 months if you are not going to use the unit for a long period of time. Or the battery may be damaged.
- If the battery is damaged please replace it with same specifications battery. And dispose the damaged battery environment friendly.
- If the unit has fallen, always have it checked by a qualified technician before you switch the unit on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the unit with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the unit off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the unit.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!

- The mains voltage is 220-240Vac/50Hz. Check if the power outlet matches. If you travel, make sure that the mains voltage of the country is suitable for this unit.
- Keep the original packing material so that you can transport the unit in safe conditions.



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The unit has been certified CE. It is prohibited to make any changes to the unit. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling center. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other.
Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalidate your warranty. Do not make any changes to the unit. This would also invalidate your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Fenton cannot be held responsible for personal injuries caused by the disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

Contents [[hide](#)]

[1 OVERVIEW](#)

[2 OPERATION](#)

 
[3 TECHNICAL SPECIFICATION](#)

[4 Documents / Resources](#)

[4.1 References](#)

[5 Related Posts](#)

OVERVIEW

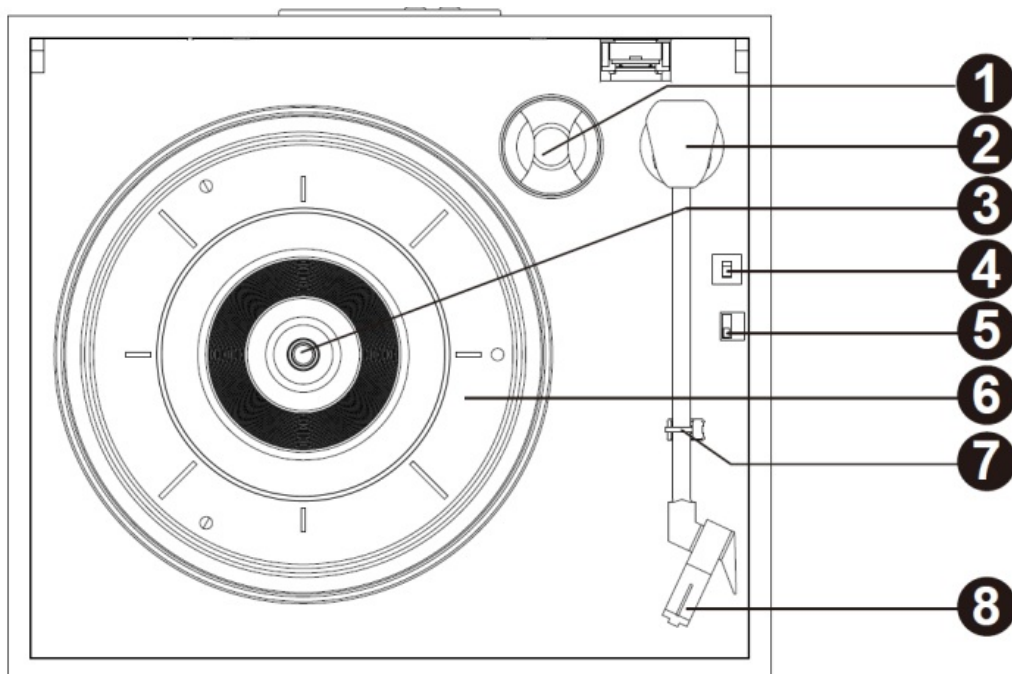

1. 45RPM Adaptor

This adaptor allows you to play 45RPM records.

2. Tonearm

3. Platter shaft

4. Autostop Switch ON/OFF

This switch turns auto stop on or off. When the automatic stop is enabled, the platform will start rotating as soon as the tonearm is placed over the record and will stop rotating when it has reached the end of the record. Some vinyl records stop before the end or do not stop when the end is reached. In this case, set Auto-stop to OFF.

5. 33 / 45 / 78 RPM Switch

This switch controls the RPM of the turntable platter.

6. Platter

 
Place your record here..

7. Arm Clip

This specially designed arm clip secures the tonearm while at rest or when not in use. The arm clip has been designed to remain in the up position while unlocked.

8. Cartridge with needle

When the turntable is not in use, it is recommendable to place the removable protection cover over the stylus.

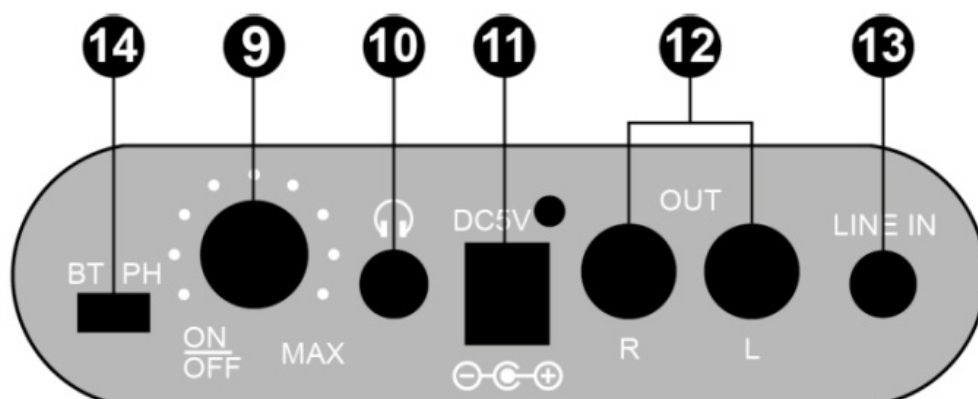

9. **Power & volume control knob**

To power on the record player, turn this knob clockwise until it clicks. When powered on, use this knob to adjust the output volume. To turn off the record player, turn this knob counterclockwise until it clicks.

10. **Headphone connector**

Connect your headphone with this 3.5mm(1/8) jack connector.

11. **DC IN port**

Connecting the 5Volt/DC power adaptor.

12. **RCA Line output**

The audio from a playing vinyl record is sent to this line-level coaxial audio output. This must not be connected to phono-level devices.

 
13. **AUX input**

3.5mm(1/8) jack connector for auxiliary input.

14. **Function switch knob**

Knob to select phono or BT input.

OPERATION

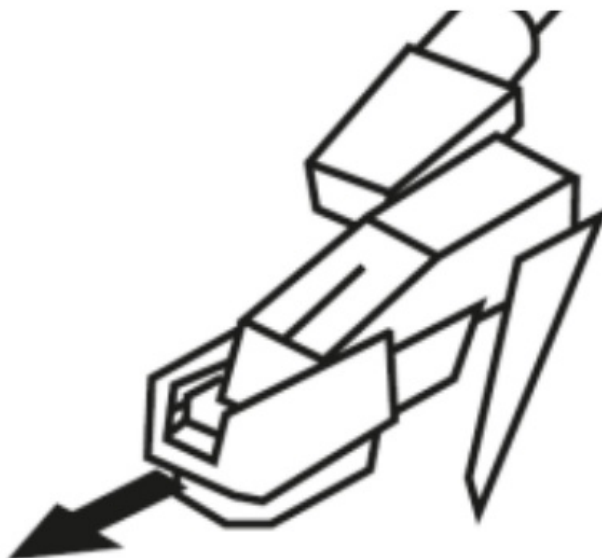

1. Connect the record player with the power adapter and plug the other end into a wall power outlet.
2. Remove the white protective needle cover by gently pulling towards the front of the unit.
3. Place a vinyl record on the turntable platter and select the desired speed (33/45/78RPM) according to the record.
4. Open the tone arm clip to release the tonearm. Gently move the tonearm and put the cartridge onto the desired position of the record and the turntable player starts to play.
5. Turn the volume control knob clockwise to adjust the volume.

Noted: If the AUTO STOP ON/OFF Switch is turned ON, the record will stop automatically when finished. If Auto Stop Control is turned OFF, the record will NOT stop automatically when finished.

BT CONNECTION

Select BT mode with function switch knob. The LED indicator will flash in blue color.

Turn on the BT function on your mobile phone or tablet PC and then search the turntable player (Fenton record player). After pairing and connection, the LED will light up continuously in blue color and you can play your music

on your mobile phone or tablet PC on this turntable player.

Turn the volume control to adjust the volume. (The volume control of the mobile phone, tablet, or PC can also affect the total volume.)

TECHNICAL SPECIFICATION

Input Connections:	3.5mm jack
Output Connections:	3.5mm jack, RCA
Speed Settings (RPM):	33, 45, 78
Power Supply:	100-240VAC 50/60Hz (5V Adapter)
Dimensions Record Player (L x W x H):Dim	310 x 270 x 75mm
ensions Case (L x W x H):	341 x 154 x 356mm
Weight:	4,49kg

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:

- Low Voltage (LVD) 2014/35/EU
- Electromagnetic Compatibility (EMC) 2014/30/EU
- Restriction of Hazardous Substances (RoHS) 2011/65/EU





Specifications and design are to change without prior notice.

www.tronios.com

Copyright © 2020 by TRONIOS the Netherlands

Documents / Resources

	<p>FENTON RP170 Series Record Player [pdf] Instruction Manual RP170 Series, Record Player, RP170 Series Record Player</p>
	<p>FENTON RP170 Series Record Player [pdf] Instruction Manual RP170 Series, Record Player, RP170 Series Record Player, 102.165, 102.166</p>

References

-  [Stibat](#)
-  [Stibat](#)
-  [Sound & Light distributor - Tronios.com](#)
-  [Inleveren is terugkrijgen - Wecycle](#)
-  [Inleveren is terugkrijgen - Wecycle](#)