



Contents [[hide](#)]

- [1 Festive JLLIT210 Artificial Christmas Tree with Instant Light](#)
- [2 Product Usage Instructions](#)
- [3 ASSEMBLY](#)
- [4 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Festive JLLIT210 Artificial Christmas Tree with Instant Light



Specifications

- Product Type: Artificial Christmas Tree
- Model Number: JLLIT210 QSF1003

- Product Item Number: P051014
- Indoor Use Only
- Height: Variable (based on assembly)

Product Usage Instructions

Assembly

1. Carefully remove all contents from the carton. Retain the carton for future storage.
2. Locate the tree stand. Rotate the legs to form an X shape and insert screws but leave space for the tree pole.
3. Place the stand on a level surface indoors, avoiding wobbly areas.
4. Connect the power plug of the bottom section to a power outlet to illuminate it.
5. Ensure proper alignment and connection of tree sections for consistent lighting.

Shaping

1. Plug in the lights while shaping the tree for better visibility.
2. Bend and separate branches to restore fullness, removing any packing material.
3. Shape section by section, starting from the bottom and working your way up.
4. Fan out branch tips to achieve a realistic appearance, adjusting for tree height.
5. Step back and adjust branches as needed to fill gaps and achieve the desired look.

Cleaning & Care

To maintain the tree's condition for yearly use:

- Dust the tree regularly with a soft cloth or duster.
- Avoid placing heavy decorations that may bend branches excessively.
- Store the tree in a cool, dry place when not in use to prevent damage.

INSTRUCTION MANUAL

- Artificial Christmas Tree with Instant Light® Technology.
- IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

Product item number. P051014

PARTS LIST

- Dependent upon the tree style and size, there could be 1 – 5 Tree Sections. The Tree Sections are coded by an alphabetical letter. The first section that goes into the Tree Stand is “A” Section, then “B” Section next, then “C” Section, and so on.
- 1 EA. Tree Stand (with 3 screws)

ASSEMBLY

CAREFULLY REMOVE THE CONTENTS FROM THE CARTON. KEEP THE CARTON FOR FUTURE STORAGE. DO NOT FORCIBLY REMOVE CONTENTS.

Step 1: Locate the TREE STAND. Rotate the legs until the three (3) holes on the inner and outer walls of the hub align, and the stand forms an “X” shape (see Fig. 1).



Fig. 1

1. There are three (3) screws with the stand. Insert the screws into the holes, but do not turn all the way in. Leave space inside the hub for the tree pole to slide down. Place the stand where you are going to set up the tree. THIS PRODUCT IS SUITABLE FOR INDOOR USE ONLY. IMPORTANT: DO NOT PLACE THE TREE WHERE IT IS LIKELY TO WOBBLE DUE TO UNEVEN FLOORS OR THICK CARPETING. PLACE THE TREE ON A LEVEL SURFACE.

Step 2: Find TREE SECTION A, tagged with the letter “A”. Remove the green pole cap (see Fig. 2) that is covering the bottom of the pole. It is a protective cover only and can be kept for storage if desired. Insert TREE SECTION A into the TREE STAND. Do not force the pole. It will slide down to its correct position. Make sure the pole is seated firmly in the stand. Turn all three screws evenly until they touch the pole. If TREE SECTION A is not sitting straight, then simply loosen the screws, adjust the tree pole, and retighten the screws. Allow the branches to fall into place.



Fig. 2

Step 3: Go to the bottom section of the tree and find the power plug. Connect the plug to a power outlet in your home. Your bottom section should now be lit.

Step 4:

- All trees will have a minimum of two (2) Tree Sections. Locate TREE SECTION B, tagged with the letter “B”. This tree has Instant Light® technology which means that you simply insert the ytree section into the next section for a quick lighting setup. It is a collar to collar fit with a lock in feature. Make sure SECTION B is seated securely into the top of TREE SECTION A. If the section is seated properly, then it will light up.
- If you have three (3) Tree Sections, then the next Section will be Section “C”; and it will be placed on top of Section “B”. If you have four (4) Tree Sections, then the next Section will be Section “D”; and it will be placed on top of Section “C”. Note: Each Tree Section should be tagged with an alphabetical letter, and “A” is always the Bottom Section that goes into the Tree Stand, then B, C, D. CAUTION: Two people may be needed to balance and assemble the tree’s upper sections. Please use a ladder, if needed, and follow all ladder safety instructions.
- As you place an additional section on the tree, you should see the newly placed section light up. If you do not see it light up, then double-check that you have placed the sections together correctly. The top and bottom arrows on the Instant Light collars should be aligned, and the collars should be flushed and locked in.
- The tree should now be lit. If the tree is not lighting, please go to the TROUBLESHOOTING GUIDE FOR LIGHTS.

SHAPING

1. Plug in the lights as you are shaping the tree. It is easier to see the shape this way.
2. The branches were condensed to fit into the box and can be reshaped to their original

fullness by bending and separating each of the branches in a more realistic manner.

3. Remove any packing strap or other packing material that is around the tree section(s) and allow the branches to fall into place. The branches are connected to the tree pole by metal hinges (see Fig. 3).



Fig. 3

NOTE: SOME BRANCHES MAY CATCH ON ONE ANOTHER. IF THAT OCCURS, SLOWLY PRESS DOWN ON EACH BRANCH UNTIL IT FALLS INTO PLACE.

4. Shape by section and layer, starting at the bottom of the tree and working your way up to ensure coverage of the whole tree.
5. If the tree is tall, shape the top section(s) before placing on the tree to avoid shaping from a chair or ladder.
6. On each branch, begin with the tips closest to the pole and work your way to the end of the branch by fanning out the left and right tips from the center tips to resemble a peacock's fanned tail. NOTE: Some trees have a downswept appearance, so instead of fanning up, the branches will be fanned down. Offset the tip from the tip before to hide the tree's pole and fill spaces. Continue spreading the tips until they resemble that of a real tree.
7. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Your tree is now ready to decorate and enjoy!

CLEANING & CARE

AS YOU WILL BE USING THE TREE EVERY YEAR, FOLLOWING ARE TIPS TO KEEP IT IN GOOD CONDITION AND

MAINTAINED:

- Handle the light sets gently. Do NOT pull or tug light sets as this may inadvertently loosen the wiring.
- Dust gently using a soft cloth or fabric duster. Do NOT use any chemicals or solvents to clean.
- Follow all Storage and Safety Instructions.

STORAGE

PROPER TREE HANDLING AND STORAGE WILL HELP YOU GET THE MOST OUT OF YOUR TREE FOR MANY YEARS TO COME.

1. Remove any ornaments and decorations that were added by you and did not come with the tree.
2. Unplug the tree from the power source in your home.
3. Starting with the top, separate each tree section and stand gently, being sure not to roughly handle as it could cause damage to the parts.
4. Compress each tree section by turning it upside down and squeezing the branches together so that it will fit more easily into the storage box or container. You can also tie a ribbon or cord around the sections to secure the branches closer together for storage.
5. Place all the parts gently back into the storage box. The box will help prevent the tree from being damaged should it get bumped in your garage, basement, or other storage location. Tape the box shut to keep out any dust or insects. When packing up the tree, please ensure that there is no stress or strain to the tree.
6. Be sure to store the tree in a cool, dry area free of water and moisture to prevent mold and mildew from accumulating and a musty odor from developing. Exposing your tree to excessive heat or humidity may damage your tree. **DO NOT STORE THE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F. STORE THE CARTON FLAT AND NOT UPRIGHT ON ITS SHORT END.**

IMPORTANT SAFETY

- THIS TREE IS SAFE FOR INDOOR USE ONLY.
- PLEASE READ AND FOLLOW ALL INSTRUCTIONS AND WARNING TAGS THAT ARE ON THE TREE AND PROVIDED WITH THE TREE.
- SAVE THESE INSTRUCTIONS – THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS.
- WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE PRACTICED

INCLUDING THE FOLLOWING:

1. **WARNING:** Risk of Fire. Electrical installation in homes involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
2. **CAUTION:** This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, the tree should not be played with or placed where small children can reach it.
3. Do not use an extension cord.
4. Do not install or use within ten feet of a pool.
5. Do not use this product if the lights are damaged. Always inspect light sets and electrical cords for signs of damage or wear.
6. Be careful not to overload electrical circuits by plugging too many lights and decorations into a single outlet. Overloaded outlets can overheat and cause a fire.
7. This seasonal use product is not intended for permanent installation or use.
8. Do not secure the wiring of this product with staples or nails.
9. Do not alter the construction of the wiring in anyway.
10. Unplug the product when leaving the house, retiring for the night, or if left unattended.
11. Do not use this product for anything other than its intended use.
12. Do not hang ornaments or other objects from the cord, wire, or light string.
13. Do not close doors or windows on the product or its light set cords as this may damage the wire insulation.'
14. Do not cover the tree with cloth, paper, or any material not part of the tree when in use.
15. Do not mount or support strings in a manner that can cut or damage the wire insulation.
16. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
17. Do not place tree where it is likely to wobble due to uneven floors or thick carpeting. Place tree on a level, hard, flat surface.

TROUBLESHOOTING GUIDE FOR LIGHTS

IF YOUR LIGHTS ARE NOT WORKING, FOLLOWING ARE TROUBLESHOOTING STEPS TO TRY:

1. Check that the light set plugs are properly connected to your home wall outlet or other

power source.

2. Check that there is power to the wall outlet or power source.
3. Check that the Instant Light collars between each tree section are properly connected.
Check that all the plugs within the tree are securely connected and positioned correctly.

ELECTRICAL RATINGS

- Input 230-240V ~ 50HZ
- THIS SET OPERATES ON – 31v DC 7.7w
- TRANSFORMER RATING – 31v DC 9 w
- LED BULB RATING – 3.1v 0.0045a 0.014w

Festive Productions Limited NP44 7EZ otters brook, Ty coch way, Cwmbran UK

- AB Alrik Hedlund 412 21 Gothenburg, Sweden

Having difficulty with this product?

- Then contact us on our support email.
- Made in China
- www.festive.co.uk

Please retain these instructions for future reference, QSF1003

Festive Technical Support

- support@festive.co.uk



FAQS

Q: My tree is not lighting up properly, what should I do?

A: Check the alignment and connection of tree sections, ensuring the Instant Light collars are securely locked. Refer to the Troubleshooting Guide for Lights if issues persist.


Q: How should I store the artificial tree after the holiday season?

A: Clean the tree, disassemble it carefully, and store it in its original carton in a cool, dry place to prevent damage and maintain its shape.

Q: Can I use this tree outdoors?

A: No, this product is suitable for indoor use only. Avoid exposure to outdoor elements to prolong its lifespan.

Documents / Resources

	<p>Festive JLLIT210 Artificial Christmas Tree with Instant Light [pdf] Instruction Manual</p> <p>JLLIT210, QSF1003, JLLIT210 Artificial Christmas Tree with Instant Light, JLLIT210, Artificial Christmas Tree with Instant Light, Christmas Tree with Instant Light, Instant Light</p>
---	---

References

- [User Manual](#)

📁 Festive

🔍 Artificial Christmas Tree with Instant Light, Christmas Tree with Instant Light, Festive, Instant Light, JLLIT210, JLLIT210 Artificial Christmas Tree with Instant Light, QSF1003

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.