



ffe TalentumTT2 Diffuser Replacement Instructions

[Home](#) » [ffe](#) » ffe TalentumTT2 Diffuser Replacement Instructions 

Contents

- [1 ffe TalentumTT2 Diffuser Replacement](#)
- [2 Product Information: TalentumTT2 Diffuser Replacement](#)
- [3 Product Usage Instructions](#)
- [4 Procedure](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



ffe TalentumTT2 Diffuser Replacement



Product Information: TalentumTT2 Diffuser Replacement

The TalentumTT2 Diffuser Replacement is a component used in the Calibration Shroud of the TalentumTT2 flame detector. It is a light diffuser that can be replaced easily by following the instructions provided below. The diffuser assembly is held in place with magnets and can be removed using a screwdriver or similar tool. The replacement diffuser is designed to fit securely to the magnetic mounting points.

Product Usage Instructions

Before replacing the TalentumTT2 Diffuser, ensure that the device is disconnected from the power source and that it has cooled down completely.

Follow the steps below to replace the diffuser:

1. Using a 2mm Allen key, remove the Calibration Shroud from the TalentumTT2 flame detector.
2. Insert a screwdriver or similar tool into the front of the Calibration Shroud and release the diffuser assembly.
3. Carefully remove the old diffuser from the Shroud.
4. Insert the new diffuser into the Shroud, making sure it is placed correctly and fits securely to the magnetic mounting points.
5. Adjust the position of the new diffuser if necessary.
6. Reattach the Calibration Shroud to the TalentumTT2 flame detector using the 2mm Allen key.

Once you have completed these steps, you can reconnect the device to the power source and resume normal use.


Procedure


The Calibration Shroud has a light diffuser fitted. The diffuser can be replaced simply by following the instructions below.

1. The diffuser assembly is held in the Shroud with magnets.
2. Insert a screwdriver (or similar) in the front of the Calibration Shroud and release the diffuser.
3. Remove the old diffuser from the Shroud.

4. Insert the new diffuser into the Shroud.
5. Ensure the new diffuser is placed correctly within the Shroud and, if necessary, adjust its position until it fits securely to the magnetic mounting points.

You will need: 1x2mm Allen key

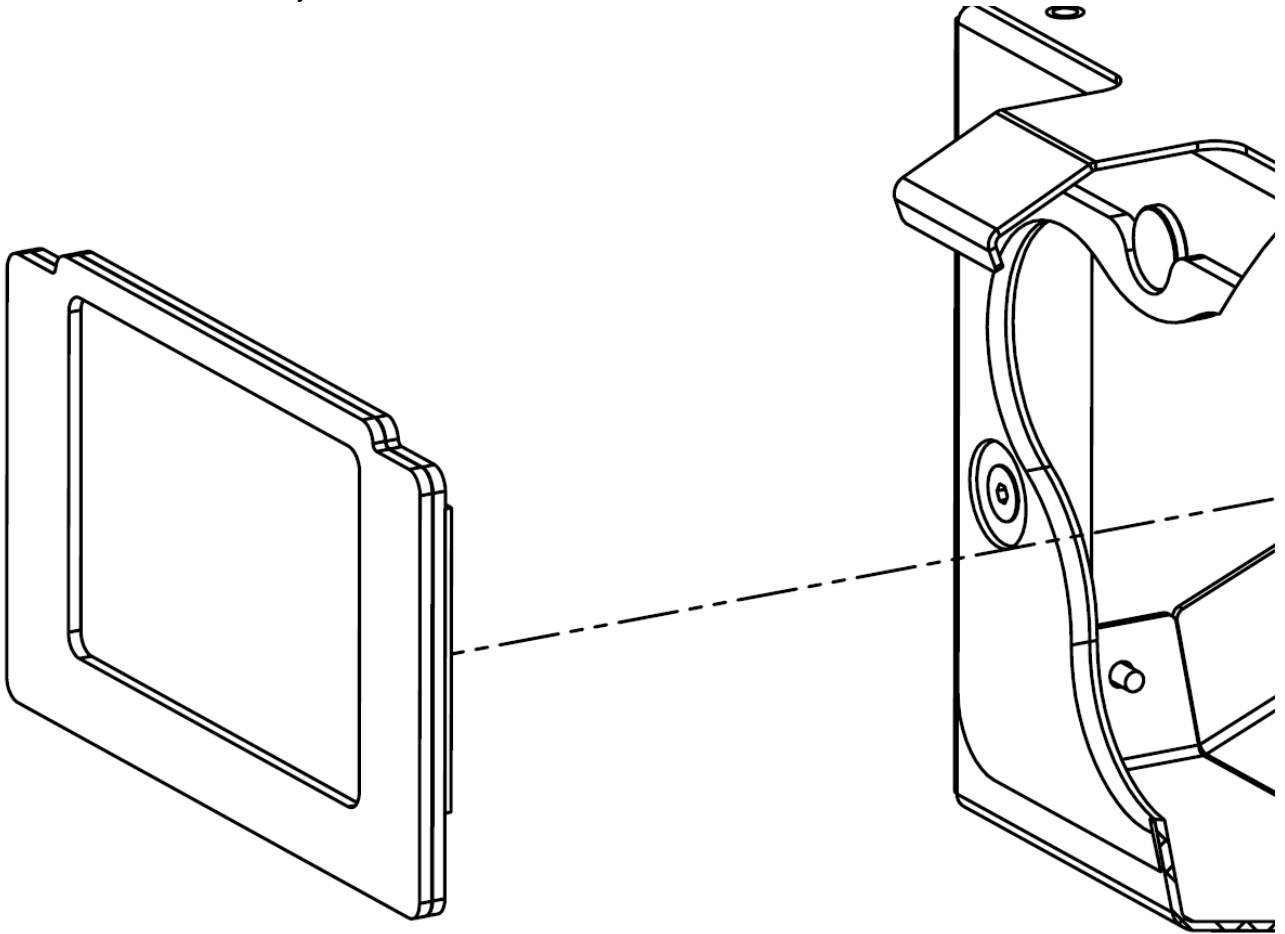

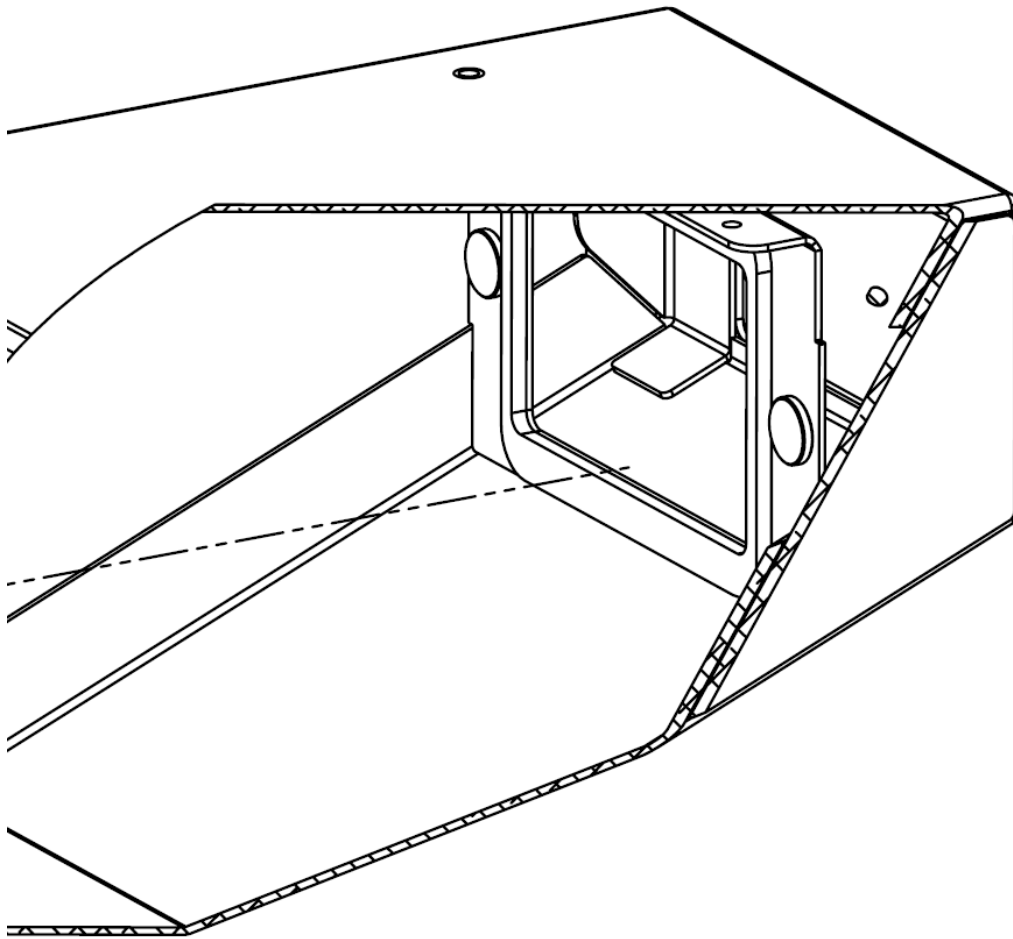


Document No: 0044119

www.ffeuk.com

Documents / Resources

	<p>ffe TalentumTT2 Diffuser Replacement [pdf] Instructions 0044119, TalentumTT2 Diffuser Replacement, TalentumTT2, Diffuser Replacement</p>
---	---

References

- [Home - FFE UK](#)