



# FIDDLERMAN AV10 Digital Tuner User Manual

[Home](#) » [FIDDLERMAN](#) » FIDDLERMAN AV10 Digital Tuner User Manual 



AV10 Digital Tuner  
User Manual




AV10USER MANUAL

## Contents

- [1 Product Illustration](#)
- [2 Button functions and operations](#)
- [3 Specification](#)
- [4 Documents / Resources](#)

## Product Illustration

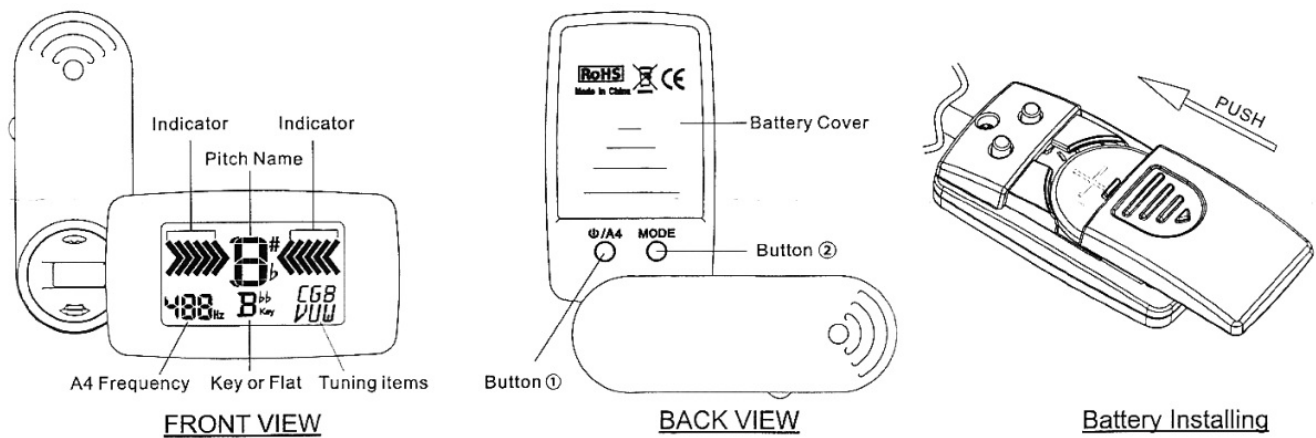

## Button functions and operations

### 1. Installing

After installing the battery, it will be on automatically. If not, please press button CD for three seconds to power on the unit.

### 2. Setting the tuning mode

Press button slightly, you could choose different tuning mode including C(Chromatic), G(Guitar), B(Bass), V(Violin), U(Ukulele) and W(Wind instrument).

### 3. Setting the key

Under the W mode tuning mode, press button ) to select the note including C, F, Bb, Eb four different key.

### 4. Flat tuning mode

Under the guitar tuning mode, press button © to select flat b or bb.

### 5. Setting the A4 frequency

Press button 0) could set A4 frequency, 430Hz-450Hz adjustable.

### 6. How to tune

(1). After setting the tuner well, please clip the tuner on the part of instrument which vibrates distinctly, adjusting the tuner until you could see the screen clearly.

(2). Flat: Indicator is on the left, the backlight is orange; Sharp: Indicator is on the right, the backlight is orange; In tune: No indicator is showed on the screen, the backlight is green.

### 7. Turn off

The tuner will be off automatically, if there is no button operation or signal inputting within 3 minutes.

### 8. Replace battery

When the display gets dim, please replace a new battery in time.

## Specification

Items of tuning :C(Chromatic),G(Guitar),B(Bass),V(Violin),U(Ukulele),W(Wind instrument) A4 frequency:430Hz-450Hz Flat: b, bb Key: C,F,Bb,Eb Tuning range:A0(27.5Hz)-C8(4186Hz) Battery:CR2032 Size:89\*53\*18.5mm

## Notice


1. Long time exposure to the following places will lead to the damage of the machine:

- a. Exposure under the sunlight
  - b. high temperature or humid situation
  - c. erosive circumstance
  - d. close to the magnetic place
2. Avoid rough handling and heavy operation.
  3. Please use clean and soft fiber to maintain the machine, no use of water or chemical liquid.
  4. If the machine is in abnormal status during the operation, get out off the battery for 30seconds, afterwards install it again.
  5. When the display is not clear, change the battery with a new one.
  6. Please take the battery out when not use for a long time.



---

## Documents / Resources

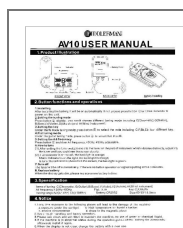

[FIDDLERMAN AV10 Digital Tuner](#) [pdf] User Manual  
AV10 Digital Tuner, AV10, Digital, Tuner