



PL03 HDD SSD Docking



FIDECO PL03 HDD SSD Docking User Manual

[Home](#) » [FIDECO](#) » FIDECO PL03 HDD SSD Docking User Manual 

Contents

 
- [1 FIDECO PL03 HDD SSD Docking](#)
- [2 Contents](#)
- [3 Introduction](#)
- [4 Specification](#)
- [5 Hard Disk Initialization](#)
- [6 How to Operate](#)
- [7 Jumper Setting](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



FIDECO PL03 HDD SSD Docking




Contents

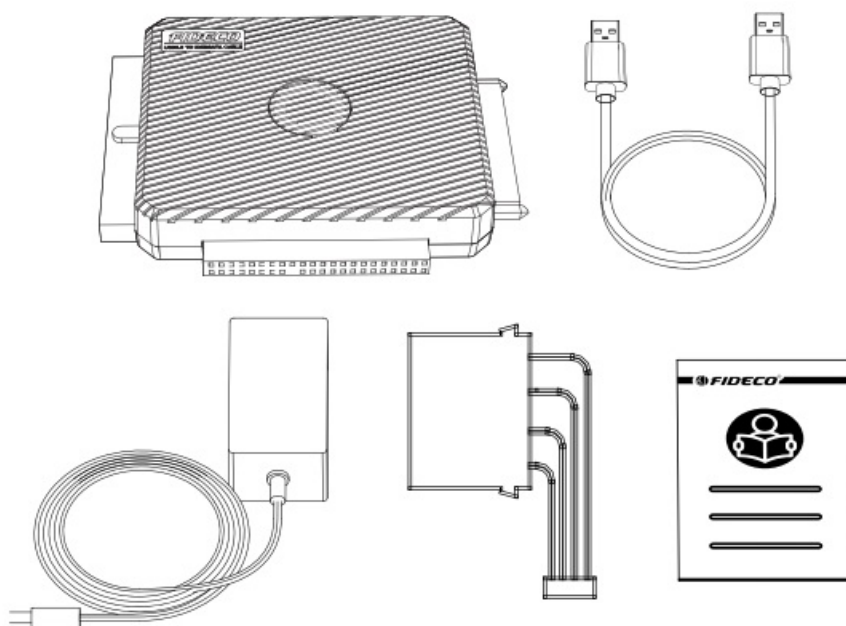

- SATA or IDE Adapter
- USB A to USB A Cable
- Power Adaptor
- 4-Pin Power Cable
- User Manual

 Introduction

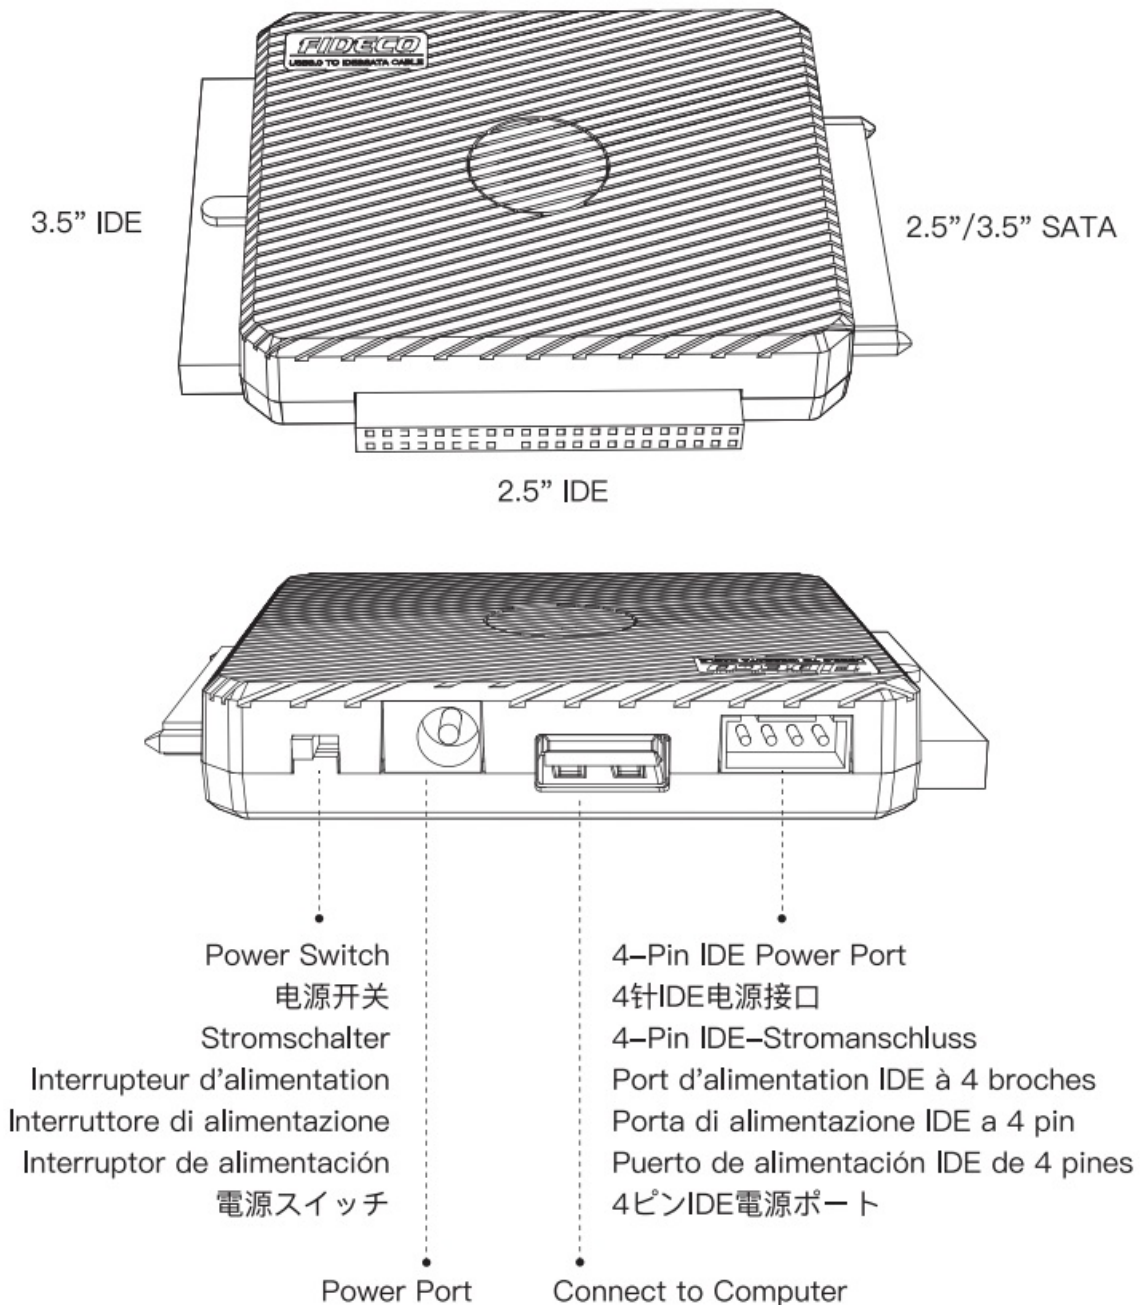

- **Manufacturer**

- Shenzhen HuiDeGui Science & Technology Development Company Ltd.

- **Manufacturer Address**

- 4th Floor, Building 1, Hongchangfa Industrial Park, Longxi Community, Longgang District, Shenzhen, Guangdong

- **After-sale Email**

- support@fideco.cn

FIDECO® is a registered trademark of Shenzhen HuiDeGui Science & Technology Development Co., Ltd. All other trademarks are property of their respective owners. Product specifications are subject to change without prior notice. For the most up-to-date specifications, please visit www.fideco-it.com. Picture is for reference only. For color please refer to the actual product.



Specification

- Material: ABS
- Output Voltage: DC 12V
- Max Speed: 5Gbps
- Supported HDD: 2.5"/3.5" SATA/IDE
- Compatible System: Windows, Mac OS, and Linux
- Support USB 3.0 and backwards compatible with USB 2.0

 
Warm Note

- For a new hard drive, please go to "Disk Management" to initialise it.
- For Mac OS, please set the hard drive format to "exFat"
- For 3.5" IDE, please plug a 4-pin power cable.


Hard Disk Initialization

- Right-click "Computer", and choose "Manage" → "Disk Management"
- Find your unallocated disk, right-click "Unallocated", and choose "Initialize Disk"
- For HDD capacity less than 2TB, choose MBR partition; for HDD capacity over 2TB, choose GPT partition.
- Please choose "New Simple Volume Wizard" to finish hard disk initialization.


How to Operate

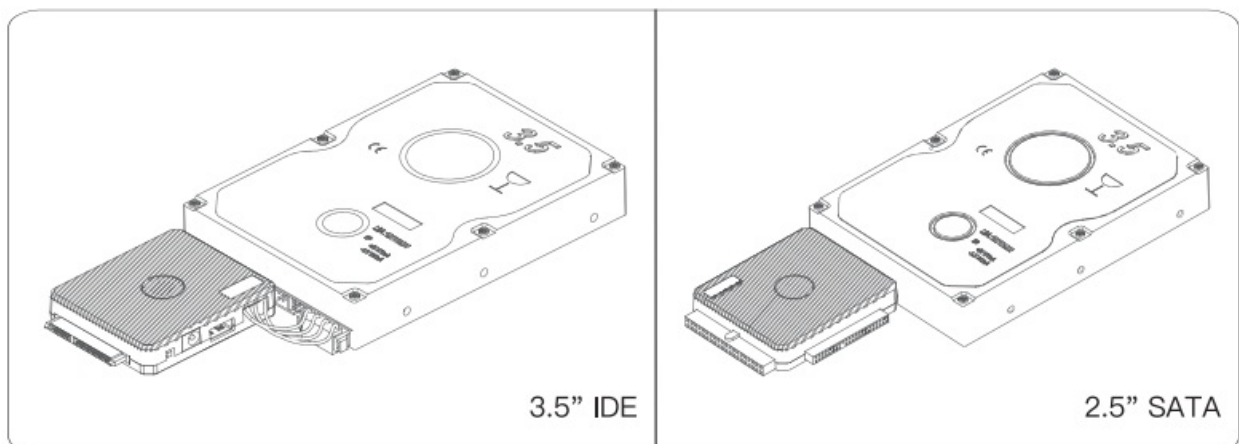

 1. Insert 2 hard drives into the respective IDE/SATA port.

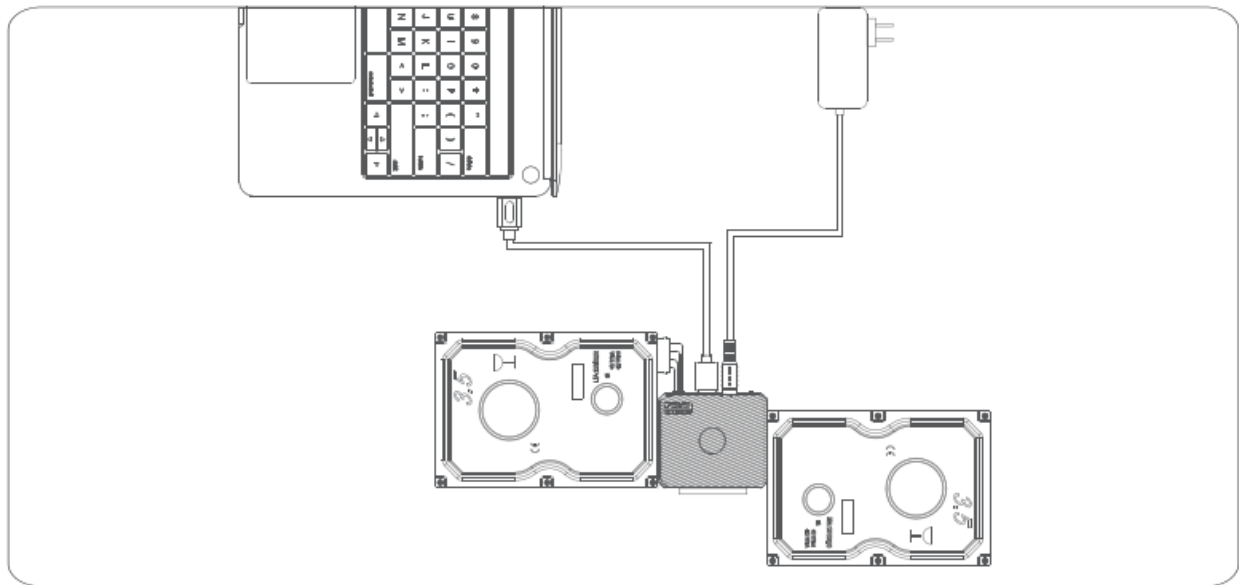

 
2. Connect the USB cable and power adapter (Note: for 3.5"DE, it needs connecting 4-pin power cable).

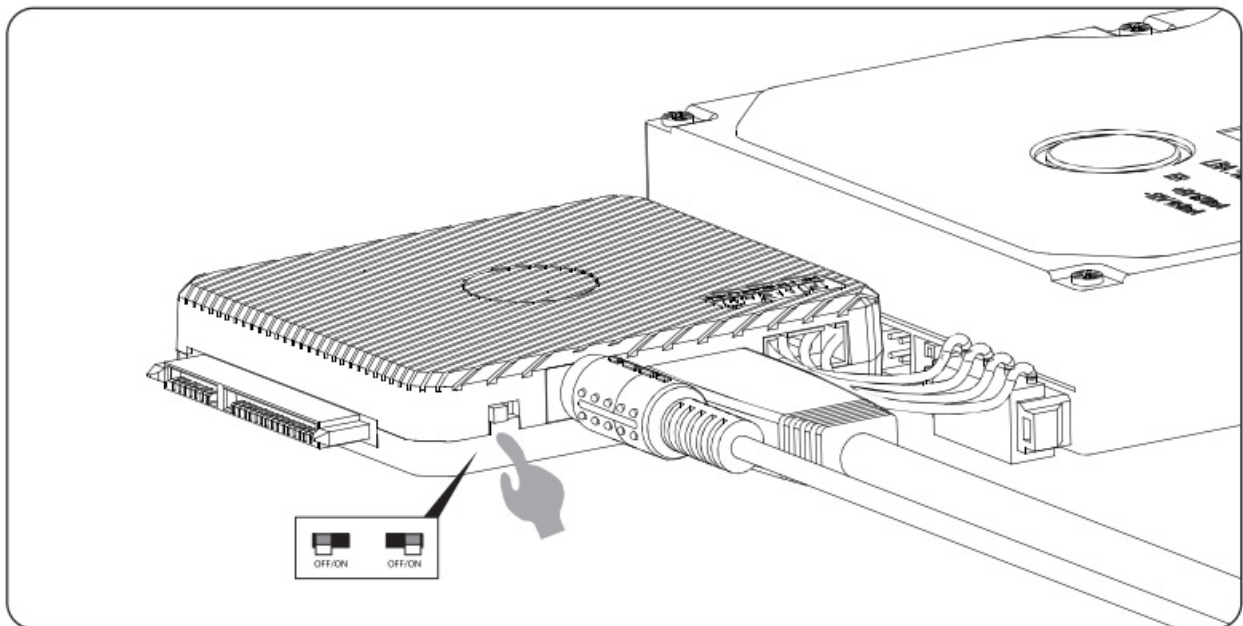


3. Turn on the device by pressing the power switch.

Jumper Setting

 Generally, the hard drive doesn't need to be set jumper. If 2.5" and 3.5" IDE hard drives are connected simultaneously, you need to set jumper for 3.5" IDE hard drive and set it to slave. For jumper setting, please operate according to the table on your hard drive. We take Seagate hard drive as an example.

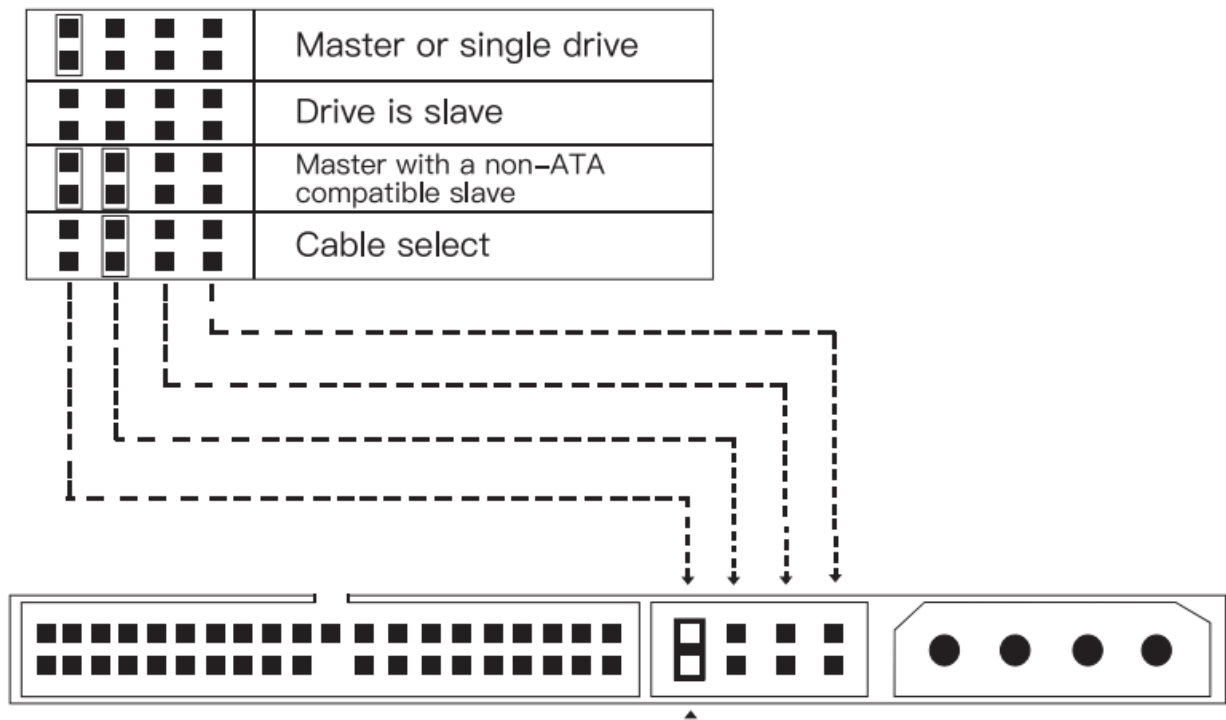

Documents / Resources

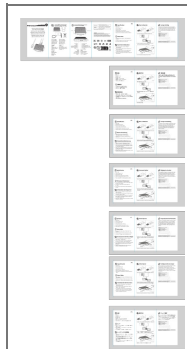 

[FIDECO PL03 HDD SSD Docking](#) [pdf] User Manual
 PL03, PL03 HDD SSD Docking, PL03, HDD SSD Docking, SSD Docking, Docking

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.