



Fieldpiece JL3KM2 Link System Dual Port Manometer Probe Kit Instruction Manual

[Home](#) » [Fieldpiece](#) » Fieldpiece JL3KM2 Link System Dual Port Manometer Probe Kit Instruction Manual 

Fieldpiece

Contents

1	Fieldpiece JL3KM2 Link System Dual Port Manometer Probe Kit Instruction Manual
1.1	JL3KM2
2	Quick Start
3	Description
4	Maintenance
5	Specifications
6	Operation
7	Certifications and Module IDs
8	FCC Statement
9	Limited Warranty
10	Documents / Resources
10.1	References


Fieldpiece JL3KM2 Link System Dual Port Manometer Probe Kit Instruction Manual



JL3KM2

www.fieldpiecejoblink.com

Quick Start

1. Install the Fieldpiece Job Link® System app on your mobile device and sign up for an account if you're a new user.
2. Remove the single screw of the yellow battery cover and install 2 x AAA batteries.
3. Press for 1 second to power on.
4. Open Measurements in the Job Link app and favorite the probe in the tool manager.
5. Tap  to zero.

6. View live measurements on your mobile device up to 1000 feet (305 meters) away.

What's Included

- Job Link® System Manometer Probe
- 2 x AAA Batteries
- Tubing with brass fitting
- Bulk tubing
- Gas adapter
- Static pressure tip
- Operator's manual
- 1 Year limited warranty

Description

The JL3MN Job Link® System Manometer Probe sends static pressure or gas pressure measurements directly to the Fieldpiece Job Link app up to 1000 feet (305 meters) away. Use two JL3MN probes to do even more.

Because they are untethered, you don't need long hoses to measure differential pressures.

Measure and view real-time return static, supply static, and total external static pressure all at once. Use your static pressure tip with short tubing for accurate static pressure measurements. Measure real-time inlet and manifold pressures with 2 Job Link manometers. Mount your manometer to equipment for hands free use in tight spaces. The powerful rotating magnet holds tight even when the hose is tugged or the equipment shakes. Slide the switch and the app immediately knows which side of the system you're going to place your manometer probe.

Maintenance

CLEANING: Clean the exterior with a damp cloth. Do not use detergents or solvents. Do not apply pressurized air into the connection port.

BATTERIES: When the LED slow-blinks Red, the batteries must be replaced. Ensure the power is OFF. Remove the single screw from the yellow battery cover. Install 2 x AAA batteries.

You can also monitor battery life in the Job Link app tool manager.

SENSOR CARE: Store JL3MN in a protective cover when not in use to prevent debris or foreign contaminants from entering the barb tip. Do not pressurize the probe above its max specification.

WARNING

Prevent damage, do not drill holes blindly into a plenum that houses the evaporator or heat exchanger.

Do not place any part of the manometer on hot surfaces such as exhaust fumes. Doing so can cause personal injury, damage equipment, and void warranty.

Do not apply more than 11.6 psi.

Specifications

Minimum Device Requirement:

BLE 4.0 devices running iOS® 7.0 or Android™ 5.0
(Latest compatibility at www.fieldpiece.com)

Compatible Media: Dry, non-corrosive gas

Pressure Port: Tube connector for flexible tubing (4.5 to 8mm ID)

Units of Measure: inWC, mmWC, mbar, psi, Pa

Accuracy and Ranges:

inWC: $\pm(1.5\% + 0.02)$ 0.00 to ± 60.00 ;

mmWC: $\pm(1.5\% + 0.5)$ 0.0 to ± 1500.0 ;

mbar: $\pm(1.5\% + 0.05)$ 0.00 to ± 150.00 ;

psi: $\pm(1.5\% + 0.001)$ 0.000 to ± 2.165 ;

Pa: $\pm(1.5\% + 5)$ 0 to ± 14930

Maximum Overload Pressure: 321.08 inWC (11.6 psi; 80.0 kPa)

Battery Type: 2 x AAA, NEDA 24A, IEC LR03

Battery Life: 150 hours typical alkaline. LED slow-blinks red when battery replacement is needed.

Auto Power Off: 2 hours (APO can be disabled)

Wireless Range: 1000 feet (305 meters) line of sight.

Obstructions affect distance.

Radio Frequency: 2.4 GHz

Operating Environment: -10°F to 122°F (-23°C to 50°C) at <75% RH

Storage Temperature: -10°F to 140°F (-23°C to 60°C) at <80% RH
(with batteries removed)

Temperature Coefficient: 0.1 x (specified accuracy) per 1.8°F
(-10°F to 64°F, 82°F to 122°F), per 1°C (-23°C to 18°C, 28°C to 50°C)

Weight: 0.30 lbs (137 g)

US Patent: www.fieldpiece.com/patents

Operation



Press for 1 second to power ON/OFF.
Tap to zero measurements.

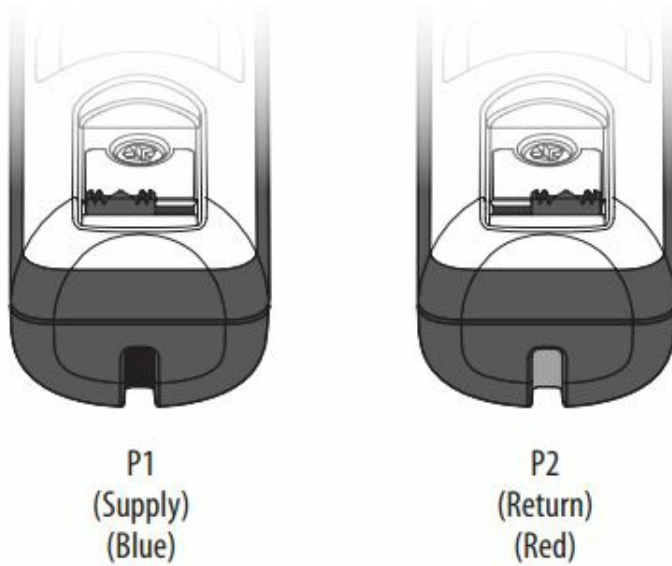
LED Color Indications

Green slow blink: normal operation

Red slow blink: batteries need to be replaced

Supply or Return Side Switch

The Job Link® System app knows which side you have selected for each probe. Select P1 or P2 and place it on the system appropriately.

**Static Pressure**

Static pressure testing ensures if the equipment is operating within factory specifications.

1 Zero your JL3MN while in ambient pressure with any tubing/probes attached before taking measurements. For measurements less than 2 inWC, take reading within 1 minute after zeroing for best accuracy.

2 Use the included static pressure tip when checking static pressure in an airflow stream.

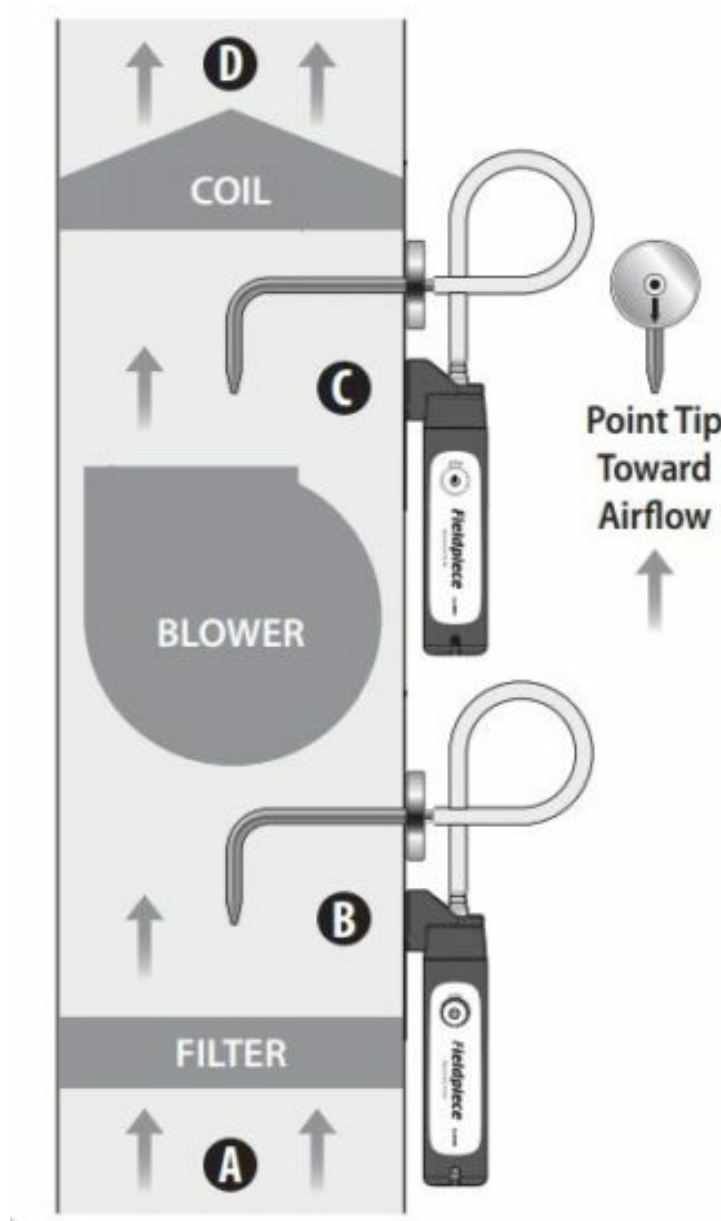
NOTE: The red arrow on the static probes should point toward the airflow of the stream.

3 Place a JL3MN before and after the filter to measure your filter pressure drop (**B A**).

4 Place a JL3MN before and after the coil to measure your coil pressure drop (**D C**).

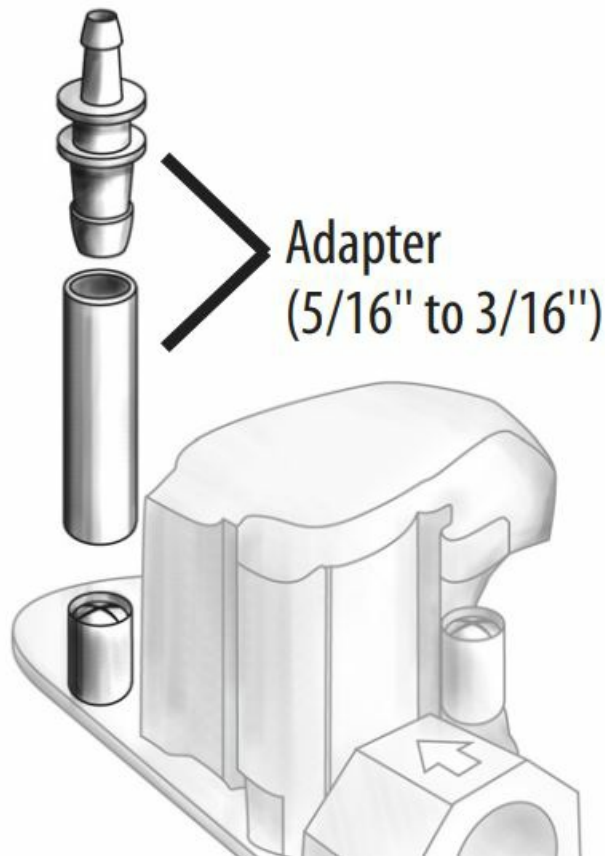
5 Place a JL3MN in the inlet and outlet air of the equipment to measure your total external static pressure (**C B**). Check with manufacturer to determine TESP test locations.

NOTE: If you are in an environment where the temperature is noticeably changing while you are taking your reading, it is advised that you disconnect the probe from the tubing and ZERO it relative to the ambient air before each reading.





Gas Pressure

Prevent symptoms like rough starts or overheating your heat exchanger by checking your gas pressure.



1. See manufacturer's specification for target inlet and outlet fuel or gas pressures.
 2. Shut off main gas supply power to furnace.
 3. Zero your JL3MN while at ambient pressure with tubing attached before taking measurements.
 4. Remove outlet pressure tap screw and insert the brass screw fitting of the hose into the outlet pressure tap of the gas regulator.
- NOTE: Some pressure taps have a 5/16" boss instead of an insert screw. In this case, use the included 5/16" adapter tube. Loosen the tap screw about 1 revolution and slide the tube over the boss.
5. If you suspect high or low inlet pressure to the regulator, connect the JL3MN to the inlet tap.
 6. Put furnace into operation and begin to take measurements.

Auto Power Off (APO)

The probe will automatically power off after 2 hours. To disable APO until powered off, while power is on tap  twice. The LED will briefly blink red. To enable APO, while power is on tap  twice. The LED will briefly shine red.

Certifications and Module IDs



Regulatory Compliance Mark



Waste Electrical and
Electronic Equipment



RoHS
Restriction of Hazardous
Substances Compliant

IC: Industry Canada
22518-BT003

IFETEL: Federal Telecom Institute
RCPFI2A18-0235

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example – use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada licence-exempt RSS-247 standard. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

IC Radiation Exposure Statement: This equipment complies with IC RSS-102 radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0.5 cm between the radiator and your body. Fieldpiece Instruments 1636 West Collins Avenue, Orange, CA 92867

IFETEL Statement

The operation of this equipment is subject to the following two conditions: (1) this device or device may not cause harmful interference, and (2) this device or device must accept any interference, including interference that may cause undesired operation.

Limited Warranty

This probe is warranted against defects in material and workmanship for one year from date of purchase from an authorized Fieldpiece dealer.

Fieldpiece will replace or repair the defective unit, at its option, subject to verification of the defect.

This warranty does not apply to defects resulting from abuse, neglect, accident, unauthorized repair, alteration, or unreasonable use of the instrument.

Any implied warranties arising from the sale of a Fieldpiece product, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the above. Fieldpiece shall not be liable for loss of use of the instrument or other incidental or consequential damages, expenses, or economic loss, or for any claim of such damage, expenses, or economic loss.

State laws vary. The above limitations or exclusions may not apply to you.

Obtaining Service


For international customers, warranty for products purchased outside of the U.S. should be handled through local distributors. Visit our website to find your local distributor.

Fieldpiece

© Fieldpiece Instruments, Inc 2024; v17.5

Read More About This Manual & Download PDF:

Documents / Resources

	Fieldpiece JL3KM2 Link System Dual Port Manometer Probe Kit [pdf] Instruction Manual JL3KM2 Link System Dual Port Manometer Probe Kit, JL3KM2, Link System Dual Port Manometer Probe Kit, Dual Port Manometer Probe Kit, Manometer Probe Kit, Probe Kit
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.