



[Home](#) » [fig](#) » **FIG-F31tx Folding Mobile Phone User Manual** 


F31tx Folding
Mobile Phone



Contents [[hide](#)]

- [1 FIG-F31tx Folding Mobile Phone](#)
- [2 Your phone](#)
- [3 LED notification light instructions](#)
- [4 Keypad instructions](#)
- [5 Charge the Battery](#)
- [6 Input Method](#)
- [7 Settings](#)
- [8 Shortcut Key Usage](#)
- [9 Care and Maintenance](#)
- [10 Accessories](#)
- [11 Technical Information](#)
- [12 Frequently Asked Questions](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)



FIG-F31tx Folding Mobile Phone



Specifications

- Dimensions: 109.50 mm
- Model: F31tx
- Type: Smartphone
- Features: Flash Camera, Sub screen, LED notification light, Type-c port, T9 Numeric keypad, etc.

Warnings

Please follow these simple guidelines to avoid some untoward incidents. Failure to do these may be dangerous or illegal.

• **TURN ON SAFELY**

Do not turn on the phone in areas where it is prohibited or when it may cause interference and danger.

• **ROAD SAFETY**

Obey all road safety laws. Avoid using phone and concentrate on driving instead.

• **INTERFERENCE**

All wireless phones may be sensitive to interference, which may affect its performance.

• **TURN OFF IN HOSPITALS**

Follow all restrictions. Turn off the phone near medical equipment.

- **TURN OFF ON AIRCRAFTS**

Put off the phone before boarding. Wireless devices can cause interference on aircrafts.

- **TURN OFF WHEN REFUELING**

Do not use the phone near refueling stations or combustible chemicals.

- **USE SENSIBLY**

Only qualified personnel may install or repair this product.

- **ENHANCEMENTS AND BATTERIES**

Use only appropriate battery, Do not use non-authorized batteries as it may damage the phone.

- **WATER-RESISTANCE**

Your phone is not water-resistant. Keep it dry.

- **BACKUP COPIES**

 
It is advisable for you to back-up copies or keep a written record of all important information stored in your phone.

 
- **CONNECTING TO OTHER DEVICES**

When connecting to any external device, read its user's guide for detailed and safety instructions. Do not connect with incompatible products.

Your phone

Your phone description:

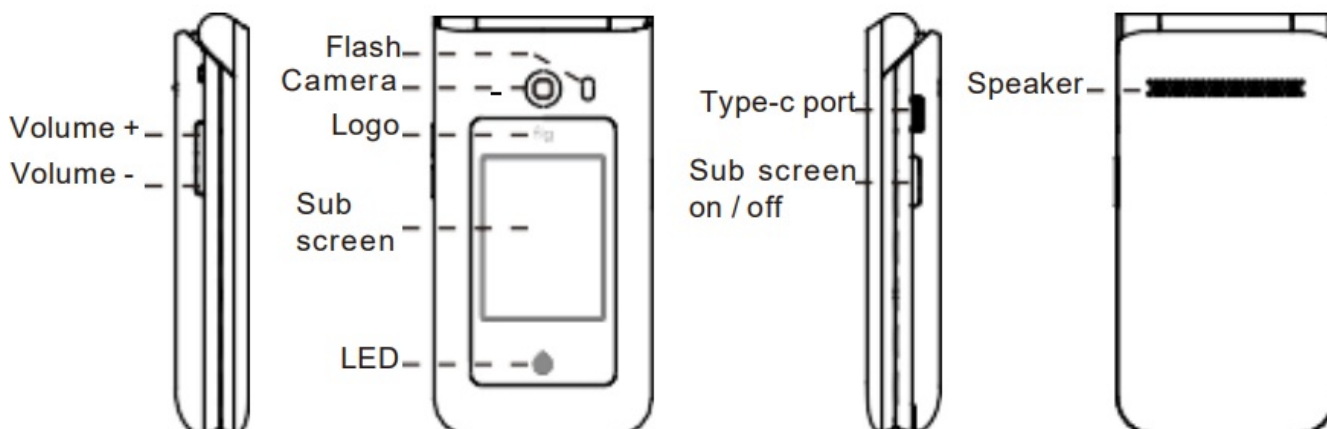

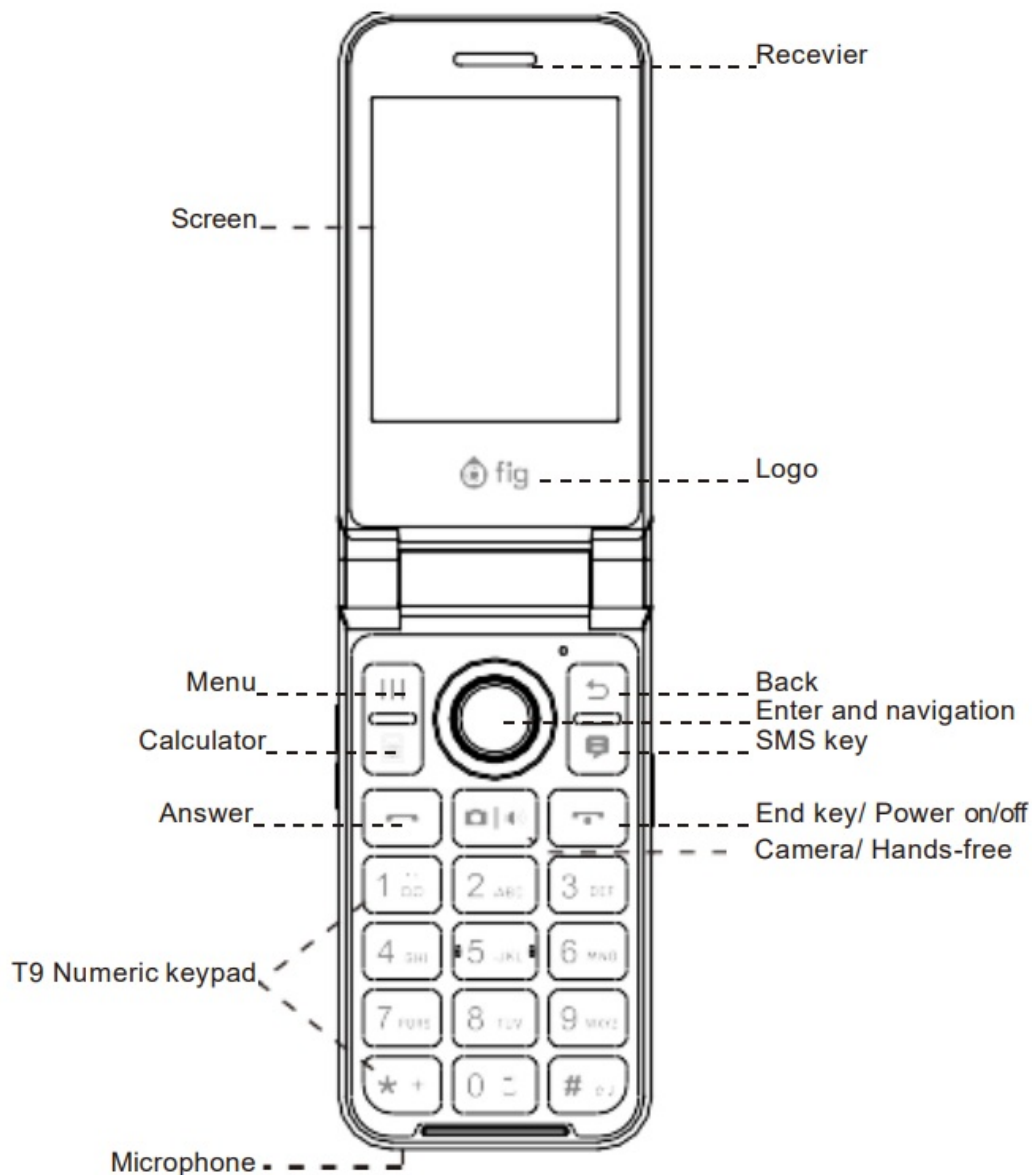

LED notification light instructions

Status	Instructions
Blue light flashing	Your phone is charging.
Green light always on	Your phone charging completed.
Red light flashing	Your phone has missed calls.


Note: You can turn on/off the light reminder in Settings – Display – LED notification light.

Keypad instructions

--	--

Power Key	Long press the key to power on the phone. In the power on status, press the key to wake up the screen or hang up the phone; Long press the key to power off or Restart.
Sub screen on / off	When the top cover of the phone is closed, the button can wake up / turn off the sub screen
Volume Keys	To adjust incoming call ring tone volume. During a call, playing music press the keys to adjust volume.
Menu Key	In the main interface, you can enter the Apps menu.
Enter Key	When you have selected a program or an option, press it to enter the program or open the option.
Navigation Key	Move the cursor up, down, left and right.
Back Key	Return to the previous menu or directory.
Calculator Key	Calculator app shortcut key
Answer Key	Enter the call history, and answer a call.
End Key	Hang up the calling.
SMS Key	SMS app shortcut key
Camera / Hands-free	In the editing interface, you can delete characters. On the main page, you can enter the camera app Turn off and turn on speaker during call
T9 Numeric keypad	1-9 numeric keypad and * key and # keys

 Start to Use

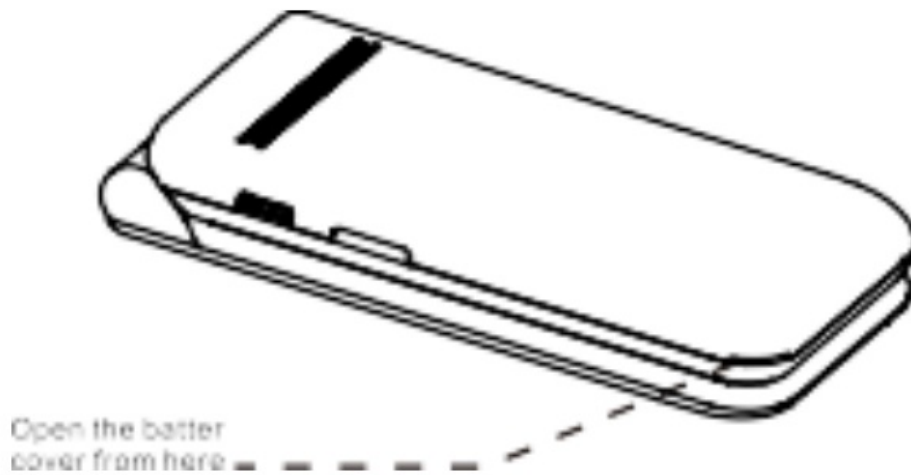

Install SIM Card and Battery

When you apply for a network phone line, you will be given a SIM card. SIM (Subscriber Identity Module) card contains phone number, service menu and can be used to store phone numbers and some personal information.

Note

Do not bend or scratch SIM card and do not let it having contact with static electricity, dust or water.

 
Keep all SIM cards where children cannot reach or touch.

Keep the SIM card chip contacts face downward. Make the SIM card fits in the card slot.

Remove SIM Card and Battery

If the phone is turned on, long press Power Key about 3 seconds until it displays phone options and select Power off and, then, press OK to turn off the phone. Then, remove the battery and SIM card.

Charge the Battery

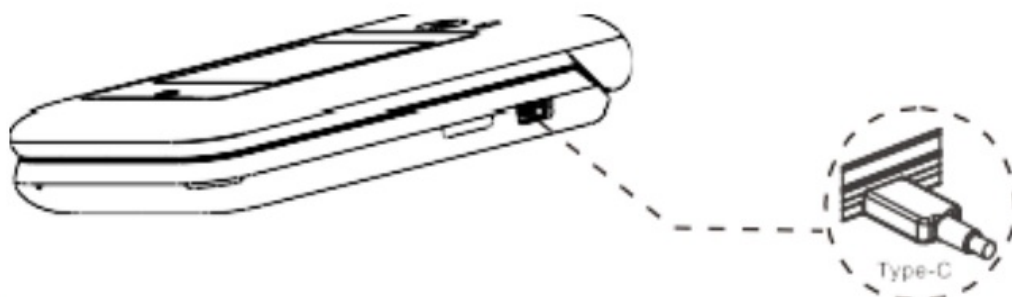

- Before charging, check the battery slot to ensure the battery has been installed correctly.
- Plug one end of the charger into phone.
- Connect another end of the charger to the socket.
- Start charging. The phone charges both in power-on or power-off state.
- In the power-on state, when the battery icon on screen starts scrolling it means phone is charging. When the battery icon became full and stopped it means charging is completed.
- In the power-off state, when the battery icon on screen starts scrolling it means phone is charging. When the icon became full and stopped it means charging is completed.
- Unplug the charger from the socket.
- Disconnect the charger and phone, Do not plug-in the charge for much longer time other than standard. Else, it may harm the battery.

Make a Call

- In standby mode or in main menu, press numeric keypad. Then dial the desired phone number.
- Press dialing key to dial the number.
- Press End key to cancel the call.
- You can make calls through call log, contacts.
- During a call, press Volume Keys to adjust the volume.
- Your phone supports intelligent dial. When inputting numbers, the phone will search the corresponding contact in phonebook or call log.

Answer a Call

When there is an incoming call, you can:

- Press Answer key to answer the call.
- Press End key to reject the call.

Emergency Service

You can call emergency service number directly without SIM card. Different countries use different emergency number, please inquire from your service network operator.

Contacts

In the Contacts, press option key to search contact ,add new contact or enter into settings.

- **Select contacts**

Press navigation and enter key to select contact.

- **Edit , delete or set ringtone for contacts**

After enter in contact, press option key to edit, delete or set ringtone for contacts.

- **Contacts to Display**

Enter in settings, you can choose to display all contacts or customize contacts.

- **Contacts sort by**

In settings, press enter in sort by, you can select contacts sort by First name or Last name.

- **Name format of contacts**

Choose first name first or last name first in name format option.

- **Phonetic name**

Select from always show or hide if empty.

- **Import/Export**

Copy the contacts from SIM cards, phone storage. Then, select location to copy.

- **Block numbers**

Under settings, enter in block number, set your pattern to block numbers.

Input Method

Your phone has the built-in input method, in edit mode.

- Press the keyboard to input characters using the T9 keyboard. And press # to switch between different input methods.

Calculator

The calculator can execute simple and science calculations. By pressing the number on the keyboard, you can enter the and calculate the result.

Calendar

In the calendar, you can check schedules for current month. it has alarm for the date

with schedule. Select a date to check all schedules for that day. You can edit or delete the schedules.

Clock

In the clock interface, you can check time and date. Press the alarm icon. You can change or add new alarm or turn on/off existing alarm clocks.

In the clock interface, you can also press the key to enter count down function, stop watch, choose city, night mode, and settings.

Call History

In the call history interface, you can view outgoing calls, incoming calls, and missed calls.

Settings

- **Networks & internet**

In this menu, you can select and set SIM management, Wi-Fi, Airplane mode, VPN, Mobile networks.

- **Bluetooth**

In this menu, you can set Bluetooth, pair with new device, send or receive files like contact list or images from other device.

- **Battery**

In this menu, you can check the battery usage, set the power saving mode and display the power percentage.

- **Sound**

In this menu, you can adjust the media playback volume, call volume, ringing tone and notification volume, alarm volume, vibration mode, Do Not Disturb mode, mobile phone ringing tone and other alert tones.

- **Display**

In this menu, you can set the brightness, theme color, eye protection mode, automatic backlight brightness switch, wallpaper, screen off time, screen rotation, and font size of the phone screen.

- **Schedule power on & off**

In this menu, you can set up a schedule for power on & off.

- **Accessibility**

The accessibility menu is the place to control device features like Text and display, extra dim, dark theme etc., on specifically made to interact with people to get the most out of their phone.

- **Security**

In this menu, you can set screen lock, device admin apps, SIM card lock, encryption and credentials, etc.

- **Passwords & accounts**

This menu is for set up and manage your accounts.

- **System**

In this menu, you can set language, input method, gesture operation, date and time, backup, reset phone and other functions.

- **About phone**

In this menu, you can set the device name, check the phone's SIM card, IMEI number, IP address. software version and other information, and upgrade the firmware through software updates.

Camera

By using the camera application, you can take photos or record videos. Press the Camera icon in the main menu. Press the shutter icon or video icon to take photos or record videos. Press the icons on screen or Option Key to set parameters of the camera or recorder.

Application Switcher

To activate app switcher hold the back key for one second. In the application switcher, you can press menu key to clear all programs running inthe background.

Shortcut Key Usage

- **Turn the flashlight on/off**

Long press the “0” key in the keyboard to quickly turn on/off the flashlight.

- **Vibrate/ring switch**

Long press the “#” key in the keyboard to quickly turn vibration mode or Silent mode on/off.

Care and Maintenance

Battery Care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, consume first the power before recharging.
- When not in-use for longer time, take out the battery from the phone.
- Do not leave your phone charging for longer period other than specified. Overcharging may shorten its lifespan and may damage the battery.
- Extreme temperatures can affect the performance of the battery.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged.
- Do not short-circuit the battery. Accidental short-circuiting occurs when a metallic object such as coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.
- Battery performance is particularly limited in temperatures below freezing.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cell phones are not considered household waste.

Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquid intrusions or moisture may contain minerals that will corrode the electronic circuits. If your device is wet, remove the battery and allow the device to dry completely before using it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components may be damaged.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage its electronic circuits.
- Do not attempt to open the device other than as instructed in this guide. Only

authorized technician can open and repair the device.

- Do not drop, knock or shake the device. Rough handling can break internal circuit and mechanism
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or approved antenna. Unauthorized antenna, modifications, or attachments may damage the device and violates regulations governing radio devices.
- We advise you to follow above instructions and precautionary measures. Please take your phone to the nearest authorized service center when it does not operate normally.

Caution: The manufacturer assumes no responsibility for the consequences as a result of the users non compliance of the above instructions, Phone misuse voids its warranty.

Accessories

Please use accessories in the package or those which are authorized by the Company. Else. using non-authorized accessories voids the warranty of unit.

- Mobile phone*1
- Lithium Battery * 1
- Data cable * 1
- User manual * 1

Technical Information

- Weight: 142g
- Size: 108*56*19.9mm
- Battery capacity: 1600mAh
- Main Screen size:2.8 inch.480*640 Pixels
- Sub Screen size:2.0 inch.240*320 Pixels
- Memory size:3GB+32GB

- Networks:
 - GSM: B2/B3/B5/B8
 - WCDMA: B1/B2/B4/B5
 - 4G: B1/B2/B3/B4/B5/B7/B8/B12/B13/B17/B20/B28AB/B66/B71
- The actual situation of the phone usage is related to local environment, SIM card and way of use.

Note

- The company reserves the right to revise the content of this User Manual without prior.
- The company has the final interpretation of the user manual.
- The pictures in this User's Manual serves only as reference, please use your actual phone as the standard .

Frequently Asked Questions


- **Q: Is the phone water-resistant?**

A: No, the phone is not water-resistant. Please keep it dry to avoid damage.

- **Q: How do I adjust the ringtone volume?**

A: Use the Volume Keys to adjust the incoming call ringtone volume during calls or music playback.

Documents / Resources

	fig FIG-F31tx Folding Mobile Phone [pdf] User Manual 2A6B4-F31TX, 2A6B4F31TX, f31tx, FIG-F31tx Folding Mobile Phone, FI G-F31tx, Folding Mobile Phone, Mobile Phone, Phone
---	--

References

- [CTIA - Home](#)
- [User Manual](#)

Related Posts



[alcatel 1 Mobile Phone User Guide](#)

alcatel 1 Mobile Phone OVERVIEW Power key Back
Home Recent apps PLEASE CONSIDER THE
ENVIRONMENT BEFORE PRINTING

www.alcatelmobile.com



[DigiDragon S999 Mobile Phone User Manual](#)

S999 Mobile Phone 3.9 FCC Warning



[Kyocera EB1055 Mobile Phone User Manual](#)

Kyocera EB1055 Mobile Phone FCC ID: JOYEB1055
Attestation for User Manual We declare that the product
of KYOCERA...



[UNIWA Elder Mobile Phone User Manual](#)

UNIWA Elder Mobile Phone User Manual External
Features Install Sim Card Install The Battery Turn On/Off
the Phone...

fig

2A6B4-F31TX, 2A6B4F31TX, f31tx, FIG, FIG-F31tx, FIG-F31tx Folding Mobile Phone, Folding Mobile Phone, Mobile Phone, phone

—Previous Post

[fig FP143 MP3 Beat Music Player User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Manuals+, Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.