finder 12.A1 Time Astro Switch





finder 12.A1 Time Astro Switch User Guide

Home » finder » finder 12.A1 Time Astro Switch User Guide 🖫



Contents

- 1 finder 12.A1 Time Astro Switch
- **2 DIGITAL ASTRO TIME SWITCH**
- **3 DISPLAY INDICATORS**
- 4 SETTINGS (examples)
- **5 PROGRAMMING (examples)**
- **6 MANUAL MODE**
- 7 DELETION of all program
- **8 DELETION of single program**
- 9 Specifications
- **10 Frequently Asked Questions** (FAQ)
- 11 Documents / Resources
 - 11.1 References




finder 12.A1 Time Astro Switch



DIGITAL ASTRO TIME SWITCH

Programmable with NFC technology with the App FINDER TOOLBOX downloaded from Google Play $^{\text{TM}}$ – Apple Store.


DISPLAY INDICATORS

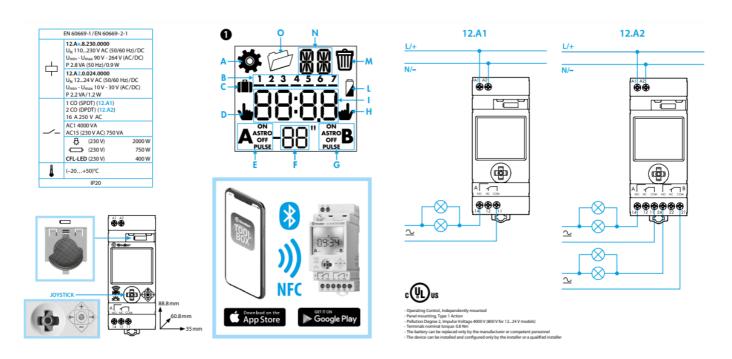

- A Setting Menu
- B Days of the week (1=Mon...7=Sun)
- · C Holiday program
- D Permanent Manual over-ride activated channel A
- E Channel A functions (ON, OFF, Astro ON, Astro OFF, Pulse)
- F Day Advanced/Retarded seconds/minutes


- G Channel B functions (ON, OFF, Astro ON, Astro OFF, Pulse)
- H Permanent Manual over-ride activated channel B (12.A2 only)
- ITime-CP (postcode), year, day, month, hours, minutes, daylight saving ON/OFF, holiday program (Start: day/month. Finish: day/month) PIN ON/OFF, End
- L Time switch without power supply (powered by battery) Low battery (with power supply) MCancel
- N Program number (max 50) IT (country), CP (leading two characters of CP), Coor (geographic coordinates in degrees), N(North)/ S(South), E(East)/W(West), TZ(Time zone), Y(year), D(day), M(month), H(hour), M(minutes), Daylight saving ON/OFF (EU=Europe BR=Brazil AU=Australia) Holiday program (Start: day/month. Finish: day/month)
- O Programming

SETTINGS (examples)

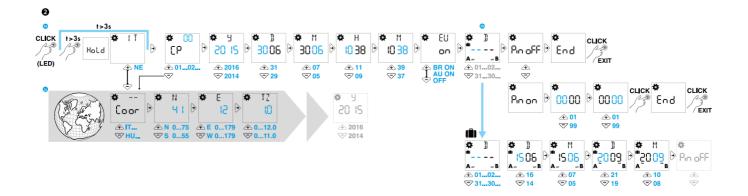


- Setting: Country, CP (leading two characters of CP), year, day, month, hour, minutes, EU (daylight saving)
- Holiday program (Start: day/month. Finish: day/month), PIN, END
- Setup by geographic coordinates. Start at 2a, but at the select Country or select CP stage, scroll down to enter the Coor setting. Continue by setting the coordinates and time zone. Latitude: North-South. Longitude: East-West. Time zone(TZ)

PROGRAMMING (examples)

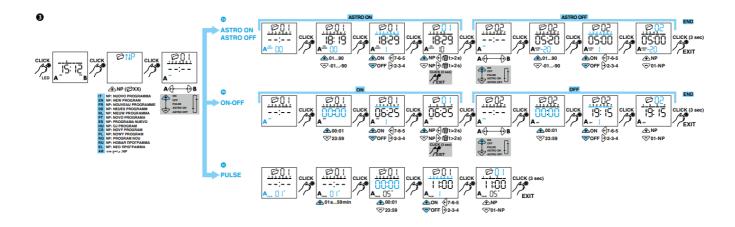

- 3a ASTRO ON ASTRO OFF Function (18:19 Astro ON + retarded 10 min 05:20 Astro OFF + advanced 20 min); Day: Mon...Fri
- 3b ON OFF Function (6:25 ON 19:15 OFF, Mon, Wed, Fri, Sun)

MANUAL MODE

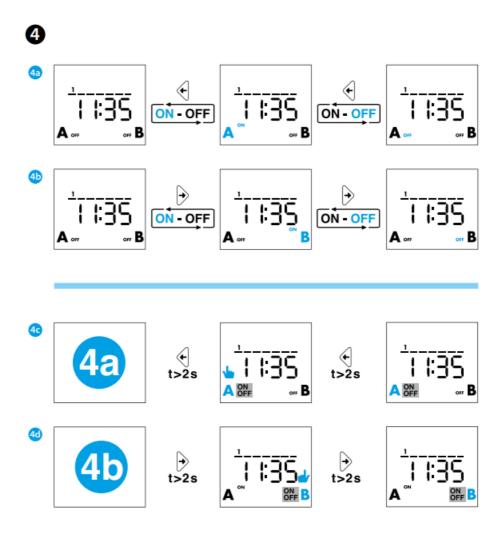

- Manual ON/OFF channel A
- Manual ON/OFF channel B (only 12.A2)
- Permanent Manual over-ride ON/OFF Channel A
- Permanent Manual over-ride ON/OFF Channel B (12.A2 only)

DELETION of all program



DELETION of single program



NOTE

- Battery replacement: BATTERY CR 2032 (LiMnO 2) 3V, 230mAh. Complies with Article 11, EU directive 2006/66/CE. Dispose of batteries according to local regulations
- Back-light display (only with power supply)
- Minimum switching interval: 1 second (pulse function)
- ASTRO times vary over the year, time switch times remain constant

Specifications

- Model: 12.A1/A2 Digital Astro Time Switch
- Technology: Programmable with NFC technology using the App FINDER TOOLBOX
- · Power Supply:
 - 12.A1: UN 110-230 V AC (50/60 Hz)/DC Umin Umax 90 V 264 V (AC/DC) P 2.8 VA (50 Hz)/0.9 W
 - 12.A2: UN 12-24 V AC (50/60 Hz)/DC Umin Umax 10 V 30 V (AC/DC) P 2.2 VA/1.2 W
- · Contact Rating:
 - 12.A1: 1 CO (SPDT) 16 A 250 V AC
 12.A2: 2 CO (DPDT) 16 A 250 V AC
- Operating Temperature: 0 to 75°C
- Protection Rating: IP20

Frequently Asked Questions (FAQ)

Q: Can the device be installed by anyone?

A: The device should only be installed and configured by a professional installer or qualified personnel to ensure proper setup and operation.

Q: What is the minimum switching interval for the pulse function?

A: The minimum switching interval is 1 second for the pulse function.

Q: How do I program the holiday schedule?

A: To set up the holiday program, enter the start and finish dates along with the required PIN code in the settings menu.

Documents / Resources



finder 12.A1 Time Astro Switch [pdf] User Guide 12.A1 Time Astro Switch, 12.A1, Time Astro Switch, Astro Switch

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.