

# finder 72.A1 Float Level Switch Instructions

Home » finder » finder 72.A1 Float Level Switch Instructions




### **Contents**

- 1 72.A1 Float Level Switch
- **2 TECHNICAL FEATURES**
- **3 TERMINAL**
- **CONNECTIONS**
- 4 Documents / Resources
- **5 Related Posts**

72.A1.1.000.xx01 = H05 RN-F 72.A1.1.000.xx02 = WRAS



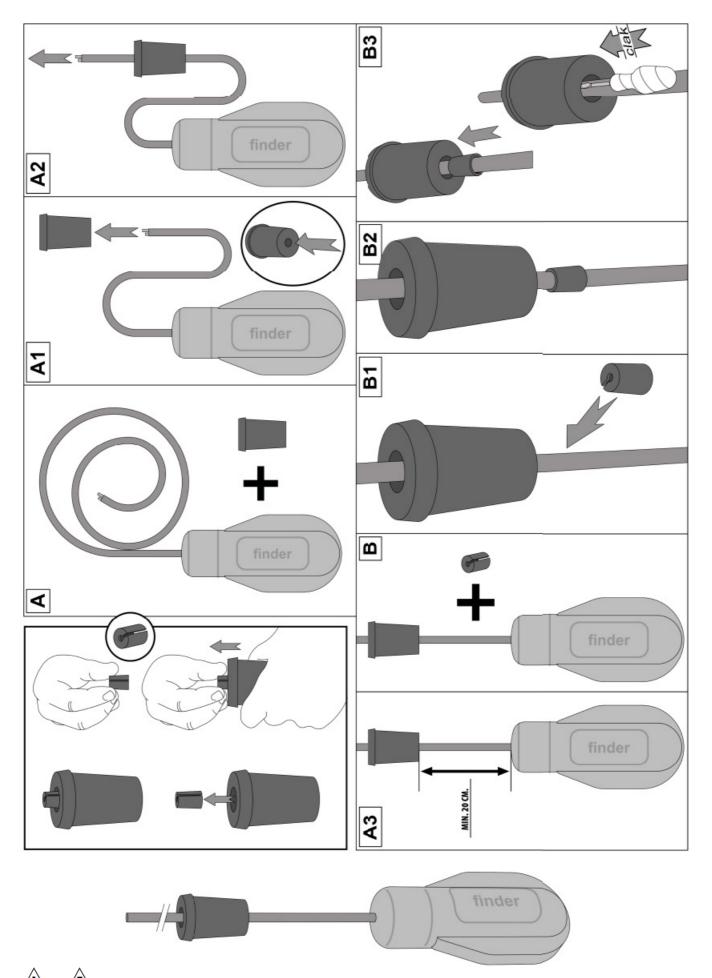

NOTES: DO NOT TAMPER WITH THE FLOAT SWITCH. THE NON RESPECT OF THE FOLLOWING POINTS WILL AUTOMATICALY CAUSE THE CANCELLATION OF THE WARANTY OF THE PRODUCT

Before any operation on the float remember to disconnect the power supply from the main power.

Check that the maximum load power does not exceed the float's electrical values.

In case of cable damage by the final user or installer, the float must be replaced.

Do not make any joint on the cable of the float switch, as immersion of such joints could cause short circuits or electrical shocks.


#### **TECHNICAL FEATURES**

AC: Max 10 A (250 V) resistive load - 8 A (250 V) inductive load

Operating temperature: max. +50°C (+40°C ACS)

Wire gauge: 7 mm

Max working pressure: 10 BAR Protection Grade: IP 68 **ACTIVATION ANGLE: 30°** 

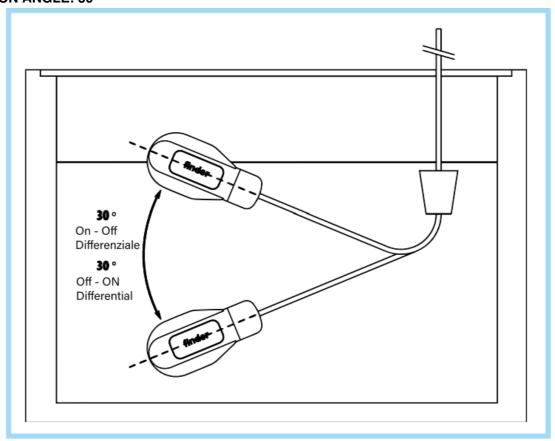

## **TERMINAL CONNECTIONS**

The upstream circuit must protect the electric wires from the overcurrent.

### **WARNING**

Lack of protection shall null and void the warrany in the event the float breaks.

• Emptying: (Fig.2) when black and brown wires are used, the circuit opens when float is down and closes when the float is up.

Note: the blue wire must be insulated

• Filling: (Fig.3) when brown and blue wires are used, the circuit closes when float is down and opens when the float is up.

Note: the black wire must be insulated

# Fig.2 EMPTYING


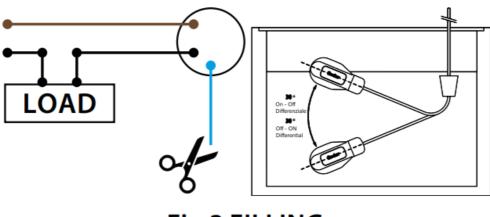


Fig.3 FILLING



IB72A1 - 01/23 - Finder S.p.A. con unico socio - 10040 ALMESE (TO) - ITALY

# **Documents / Resources**

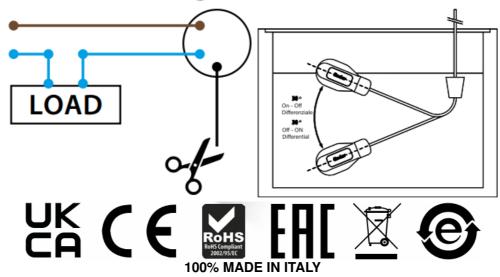

<u>finder 72.A1 Float Level Switch</u> [pdf] Instructions 72.A1, 72.A1 Float Level Switch, Float Level Switch, Level Switch

Manuals+,