



## fingers QuickScan W5 Wired Barcode Reader User Guide

[Home](#) » [fingers](#) » fingers QuickScan W5 Wired Barcode Reader User Guide 



**QuickScan W5 Wired Barcode Reader  
User Guide**



**Quick Start Guide  
QuickScan W5 Wired Barcode Reader**

## **Contents**

- 1 Important – Warnings and Safety Instructions**
- 2 In the box**
- 3 Care and Maintenance**
- 4 Connecting the Scanner**
- 5 Reading Techniques**
- 6 Documents / Resources**
- 7 Related Posts**

## **Important – Warnings and Safety Instructions**

1. Do not place the Barcode Scanners near the heat sources such as fire, radiators, stoves, light candles and other apparatus that produces heat.
2. Use only those accessories supplied by Fingers.
3. It is recommended to refer all servicing to qualified personnel. Servicing is required when the Barcode Scanner has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

## **In the box**

- 1 x QuickScan W5 Barcode Reader
- 1 x USB Cable
- 1 x Pin for Removing Cable
- 1 x Quick Start Guide
- 1 x Brand Note

## **Care and Maintenance**

1. Unplug the Barcode Scanner before cleaning it.
2. Use soft, damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

## **Connecting the Scanner**



## Reading Techniques

1. The viewfinder projects an aiming beam that should be centered over the barcode. However, it can be tilted at any angle and in any direction for an effective read.
2. Hand hold the scanner over the barcode, pull the trigger and position the aiming beam on the barcode.
3. The aiming beam is smaller when scanner is placed closer to the barcode and larger when it is farther from the code.
4. Hold the scanner close to the smaller barcodes, and farther away from bigger barcodes to get a good read.
5. If the barcode is highly reflective (ex. Laminated sheets, glossy), you might be required to position the scanner at an angle in such a way the barcode can be read and scanned clearly.

## Standard Product Defaults

The following barcode resets all standard product default settings.

**1 Factory Default**



Please note that the default interface is USB-IHD. Example: Scan the Factory Default, USB-IHD and add suffice "Enter" barcodes as below.

# 1 Factory Default



# 2 Enter



## Scan Mode


Manual



Continuous



## Automatic Flashing

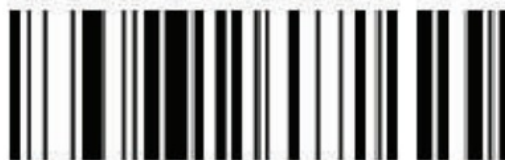

## Auto-Induction

ON



OFF



## Buzzer

ON



LOW



OFF



HIGH

Image Inverted



DIRECT



REVERSE

Keyboard Language

USA



UK



French



Suffix Setting

Enter



Enter & Line Feed



Cancel



USB-COM, RS 232 Baud Rate Setting

4800



19200

9600



38400

57600



115200

Barcode Setting



Enable  
Code 39



Disable  
EAN-8



Disable  
Code 39



Enable  
Code-93



Enable  
UPC-A



Disable  
Code-93



Disable  
UPC-A



Enable  
Code-128



Enable  
UPC-E



Disable  
Code-128



Disable  
UPC-E



Enable  
Codebar



Enable  
EAN-13



Disable  
Codebar



Disable  
EAN-13



Enable  
Interleaved  
2 of 5



Enable  
EAN-8



Disable  
Interleaved  
2 of 5



Enable  
Industrial  
25



Disable  
Industrial  
25



Enable  
MSI



Disable  
Postcode  
25



Disable  
MSI



Enable  
Aviation  
25



Enable  
Plessey



Disable  
Aviation  
25



Disable  
Plessey



Enable GS1  
Omni-  
directional



Enable  
Code-11



Disable GS1  
Omni-  
directional



Disable  
Code-11



Enable  
GS1  
Limited



Enable  
Matrix  
2 of 5



Disable  
GS1  
Limited



Disable  
Matrix  
2 of 5



Enable  
Postcode  
25



General	Type: Interface: Indicators: Operation Mode: Barcode Type Support:	Wired USB Beeper, LED Trigger All Standard 1D Barcodes
Optical	Light Source: Scan Rate: Resolution: Print Contrast Ratio: Depth of Field:	650 nm visible laser diode 300 scans/sec 4 mil 35% @ UPC/EAN, 100% 0-250 mm
Electrical	Input Voltage: Working Current: Standby Current: Sleep Mode:	5 V $\pm$ 1% 85 mA 36 mA
Physical	Housing Material: Cable Type: Dimensions: Weight: Colour:	ABS+PC USB (2 meters) 17.2 (H) x 8.3 (W) x 7 (L) cm 205 grams Black
Environment & Safety Conformance	Operating Temperature: Storage Temperature: Operating Humidity: Shock Resistance:	0°C — 50°C -26°C — 60°C 5% — 85% RH (Non-condensing) 3.0 m drops



[fingers.co.in](http://fingers.co.in)

Ver.: 1 .0.2

Images shown may vary from actual product.

Specifications, features and appearance are subject to change without notice.


All logos, brands, trademarks and product names are properties of their respective owners.

Product warranty is governed by warranty terms mentioned on [www.fingers.co.in](http://www.fingers.co.in)

This product falls under e-waste (Management & Handling) Rules, 2011.

For proper disposal method, visit our website [www.fingers.co.in](http://www.fingers.co.in)

## Documents / Resources

	<p><a href="#">fingers QuickScan W5 Wired Barcode Reader</a> [pdf] User Guide</p> <p>QuickScan W5 Wired Barcode Reader, QuickScan W5, Wired Barcode Reader, Barcode Reader, Reader</p>
---	--