


Fire-LiTe Alarms ANN-S-PG Serial Parallel Printer Interface Module Owner's Manual

[Home](#) » [Fire-LiTe Alarms](#) » Fire-LiTe Alarms ANN-S-PG Serial Parallel Printer Interface Module Owner's Manual

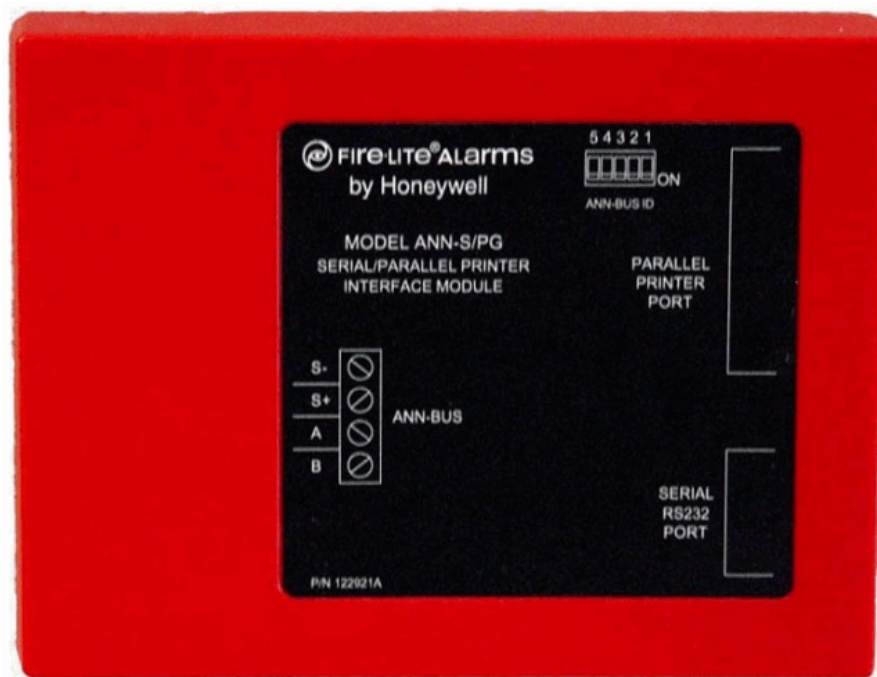

ACC-25-50 Voice Evacuation Control Panel
Owner's Manual



Contents [[hide](#)

[1 General](#)

[2 Features](#)

[3 Specifications](#)

[4 Documents / Resources](#)

[4.1 References](#)

[5 Related Posts](#)

General

The ANN-S/PG Interface module connects either a serial or parallel printer with a compatible Fire Alarm Control Panel (FACP) to print real-time logs of system events, detector status reports, and event histories.

The ANN-S/PG and the FACP communicate over a two-wire serial interface employing the ANN-Bus communication format. An additional two wires are used for 24-volt DC power. A single four-conductor unshielded cable may be used for both power and data communications.

Up to eight devices may be connected to the ANN-Bus of each FACP.

Features

- Listed to UL Standard 864, 9th edition
- Auto-configure menu selection allows programmer to bring all the devices attached to the ANN-Bus on-line quickly
- Surface mounts directly to wall
- Can be remotely located up to 6,000 feet (1,829 m) from the panel
- May be powered by 24 VDC from the host FACP or by remote power supply (requires 24 VDC)
- Connects a remote printer using a standard cable (DB-9 for a serial printer; DB-25 for a parallel printer)

Specifications

- Operating Voltage: 24 VDC
- Current (Alarm and Standby): 45mA
- Ambient Temperature: 32°F to 120°F (0°C to 49°C)
- Relative Humidity: 93% ± 2% RH (non-condensing) at 32°C ± 2°C (90°F ± 3°F)
- Maximum wiring distance from FACP: 6,000 ft. (1,829 m.)
- Dimensions: 6.00" (15.2 cm.) high x 7.76" (19.7 cm.) wide x 1.46" (3.7 cm.) deep
- For use indoors in a dry location
- Connections to FACP are power-limited and supervised

The ANN-Bus

POWERING THE DEVICES ON THE ANN-BUS FROM AUXILIARY POWER SUPPLY

ANN-Bus devices can be powered by an auxiliary power supply when available panel power is exceeded. See FACP manual for information.

ANN-BUS DEVICE ADDRESSING

Each ANN-Bus device requires a unique address (ID Number) in order to communicate with the FACP. A maximum of eight devices can be connected to the FACP ANN-Bus communication circuit. See the FACP manual for more information.

Agency Listings and Approvals

The listings and approvals below apply to the ANN-S/PG. In some cases, certain modules may not be listed by

certain approval agencies, or listing may be in process.
Consult factory for latest listing status.

- UL: S2424
- CSFM: 7120-0075:0213
- MEA: 442-06-E

FireLite® Alarms is a registered trademark of Honeywell International Inc. ©2018 by Honeywell International Inc.
All rights reserved. Unauthorized use of this document is strictly prohibited.



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice.




For more information, contact FireLite Alarms.

Phone: (800) 627-3473,

FAX: (877) 699-4105.


www.firelite.com

firealarmresources.com

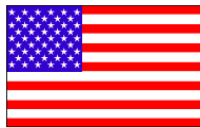

Made in the U.S. A.

Documents / Resources

	<p>Fire-Lite Alarms ANN-S-PG Serial Parallel Printer Interface Module [pdf] Owner's Manual ANN-S-PG Serial Parallel Printer Interface Module, ANN-S-PG, Serial Parallel Printer Interface Module, Parallel Printer Interface Module, Printer Interface Module, Interface Module, Module</p>
---	---

References

-  [Fire Alarm Resources | Download fire alarm documents](#)
-  [Fire-Lite | Honeywell Building Technologies](#)