



FIRE LITE I300 Fault Isolator Module Installation Guide

[Home](#) » [Fire-Lite](#) » **FIRE LITE I300 Fault Isolator Module Installation Guide**

FIRE LITE I300 Fault Isolator Module



This information is included as a quick reference installation guide. Refer to the appropriate Fire-Lite control panel installation manual for detailed system information. If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect power to the control panel before installing the modules.

NOTICE: This manual should be left with the owner/user of this equipment.

Contents

[1 GENERAL DESCRIPTION](#)

[2 COMPATIBILITY REQUIREMENTS](#)

[3 MOUNTING](#)

[4 WIRING](#)

[5 Documents / Resources](#)

[5.1 References](#)

[6 Related Posts](#)

GENERAL DESCRIPTION

I300 FAULT ISOLATOR MODULES enable part of the communications loop to continue operating when a short circuit occurs on it. An LED indicator blinks in the normal condition and turns on during a short circuit condition. The module will automatically restore the entire communications loop to the normal condition when the short circuit is removed. (The isolator module does not have decade switches.)

COMPATIBILITY REQUIREMENTS

To insure proper operation, these modules must be connected to addressable, listed compatible Fire-Lite control panels only.

MOUNTING


I300 modules mount directly to 4 inch square electrical boxes. The box must have a min. depth of 2 1/4 inch.

WIRING

NOTE: All wiring must conform to applicable local codes, ordinances, and regulations.

1. Install module wiring in accordance with the job drawings and the wiring diagram in Figure 1.
2. Secure module to electrical box (supplied by installer).

FIGURE 1. I300 FAULT ISOLATOR MODULE WIRING

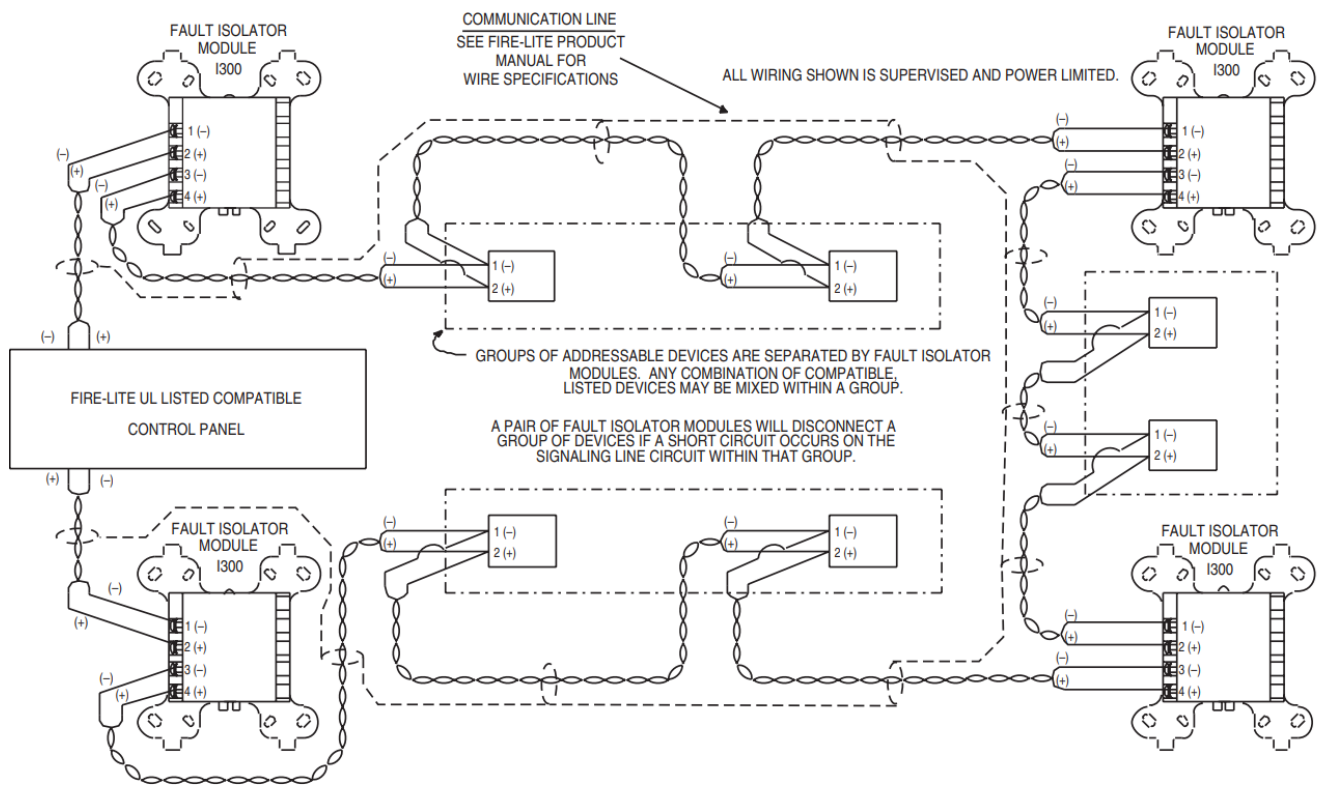


C0679-00

F300-06-00

©2008 Fire•Lite Alarms, Inc. One Fire-Lite Place, Northford, CT 06472, [203-484-7161](tel:203-484-7161)

FIRE•LITE® Alarms by Honeywell

Documents / Resources

	<p>FIRE LITE I300 Fault Isolator Module [pdf] Installation Guide</p> <p>I300 Fault Isolator Module, I300, Fault Isolator Module, Isolator Module, Module</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.