



Firecore FT1500BS Laser Level Tripod Instruction Manual

[Home](#) » [Firecore](#) » Firecore FT1500BS Laser Level Tripod Instruction Manual 

 
FIRECORE

 
 
 
 
 
 
Contents

- [1 FT1500BS Laser Level Tripod](#)
- [2 Introduces of the Tripod](#)
- [3 Warnings:](#)
- [4 Documents / Resources](#)

FT1500BS Laser Level Tripod

1

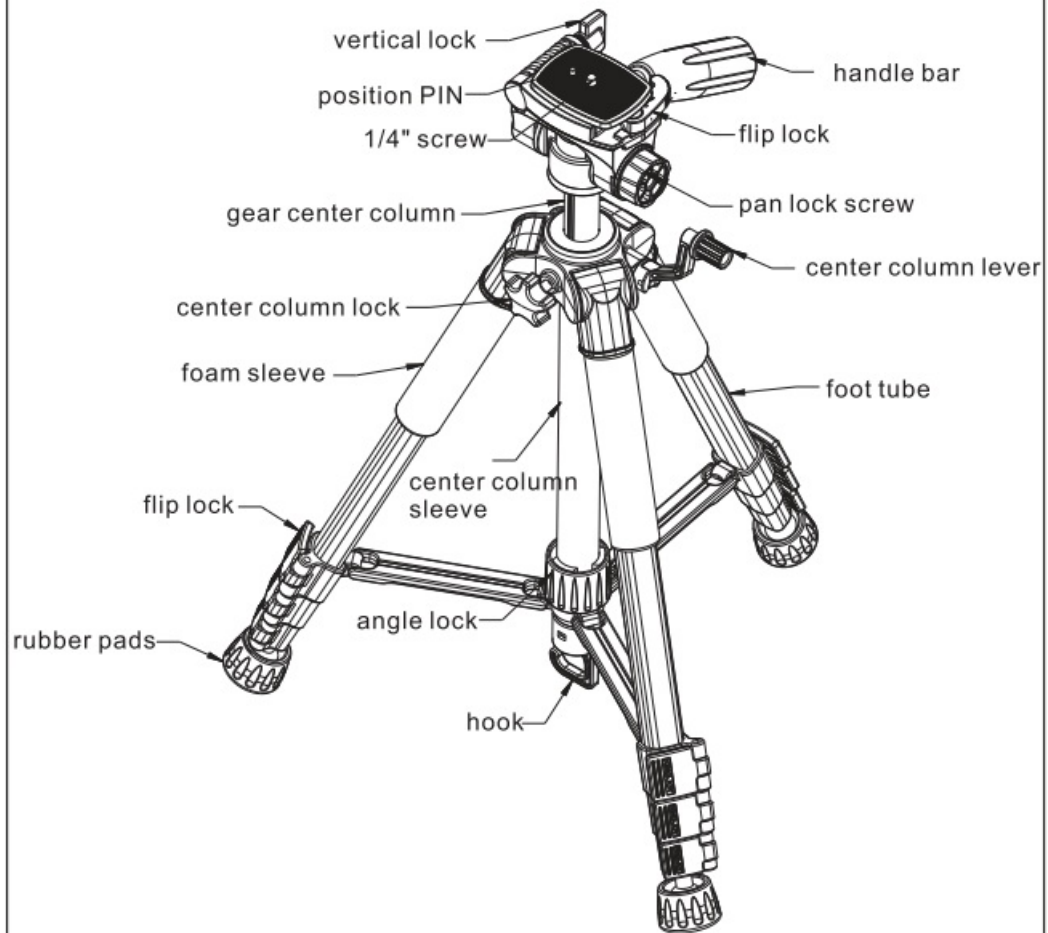

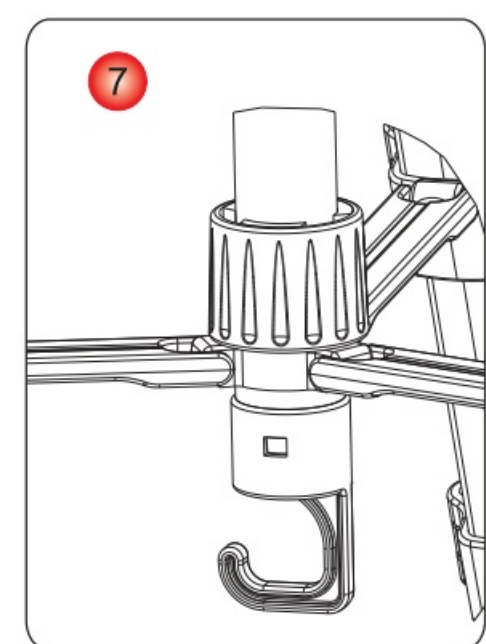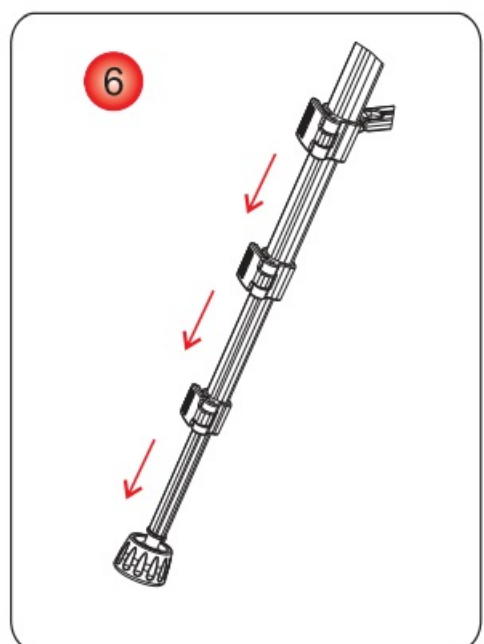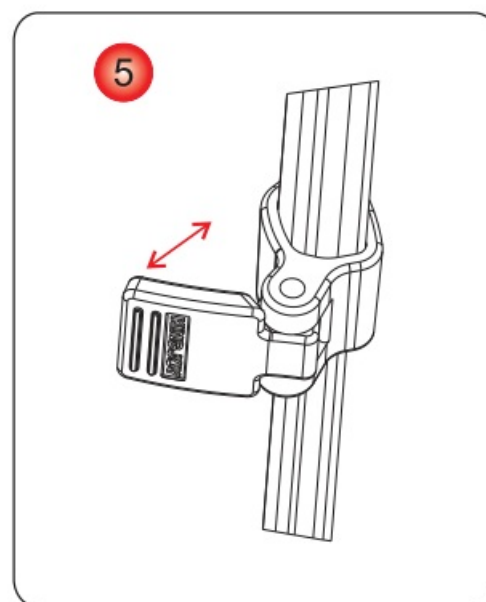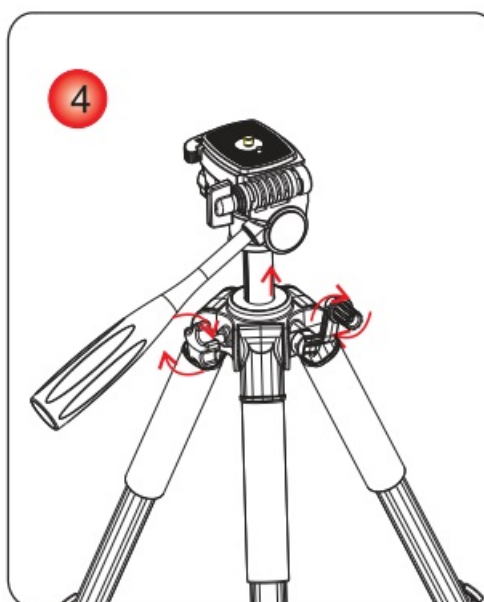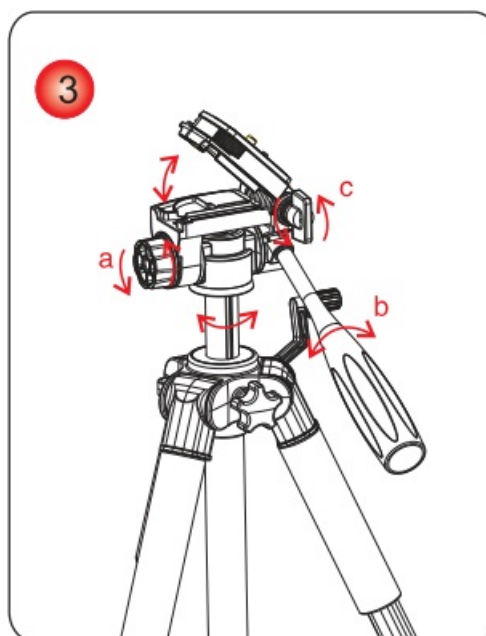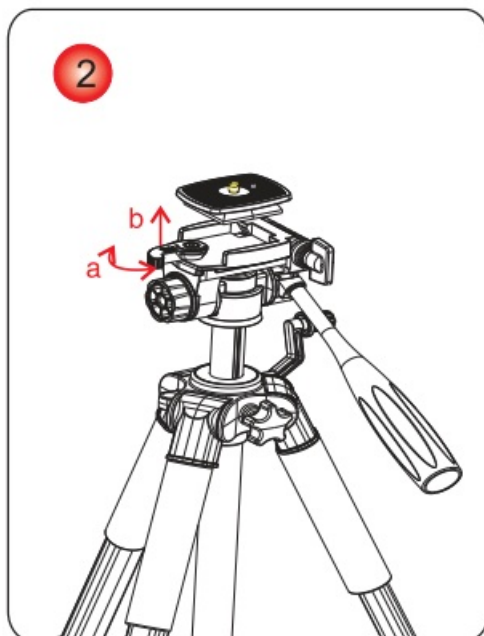

Introduces of the Tripod

1. The Use of the Quick Release plate(FIGURE2)

To remove the quick release plate, squeeze and pull the Plate locking lever out. The Quick Release Plate will disengage allowing it to be removed.

2. The vertical panning, Horizontal rotation and 90 degree shot (FIGURE3)

a: Rotating the panning adjustment knob as the arrow shows, to loosen for smooth consistent panning, rotating oppositely to tight it.

b: Rotating the tilt adjustment knob as the arrow shows, to loosen for smooth consistent tilting, rotating oppositely to tight the tilt knob

c: rotating the rolling lock knob as the arrow shows, to adjust the angle of the loading plate ,flip up to 90 degree.Rotating oppositely to tight it.

3. Raising and Lowering the Center Column (FIGURE 4)

To raise or lower the center column, turn the center locking knob counter-clockwise and set the column to the desired position. While holding the column in position, turn the column locking knob clockwise to secure the column in place. Don't over tighten the center column lock as this could damage the threads.








4. Extend and fold the leg (FIGURE 5,6)

Each Leg section can be adjusted to the desired length by opening the Flip Lock Lever so the Leg is free to slide in or out. Once the desired length is achieved, snap the Flip Lock Lever closed so that the Leg Section is securely locked. Repeat this step for each Leg and each Section until the Tripod is set to the desired height.

5. Weight Hook (FIGURE 7)


When additional weight is necessary to add to the tripod for stability during windy conditions, the retractable weight hook can be used to hold a sandbag, camera bag or any similar item. Take care not to overload the tripod with weight as this could have a reverse effect on increasing the tripods stability.

Warnings:

	Do not exceed the tripod's maximum load capacity.
	Ensure the ball head is locked.
	Do not operate this tripod when the temperature is below -20° C or above 70° C. It is not commended to operate in saltwater.
	Do not put this tripod in sunlight or lean it against the glass of car for a long time.
	Do not leave this tripod unattended in public place; please be careful when use it in dangerous place. Remove the camera from the ball head setup or transport.
	It is not necessary to equip lubricant. Please use standard lubricant or grease when necessary.
	For your safety, keep it out of power supply.

Reserve this instruction sheet for future reference.

Documents / Resources

	<p>Firecore FT1500BS Laser Level Tripod [pdf] Instruction Manual FT1500BS, FT1500BS Laser Level Tripod, Laser Level Tripod, Level Tripod, Tripod</p>
---	--

Manuals+.