




FIRSTECH REL300-1WFX Keyless Entry System User Guide

[Home](#) » [FIRSTECH](#) » FIRSTECH REL300-1WFX Keyless Entry System User Guide 



QUICK START CARD
8102REUCL000100
FT-1 B Guide REVI

1 WAY 1 BUTTON REMOTES



	<p>Tap this button for</p> <p>Tap this button tw</p> <p>Hold this button fo nd/or siren will ch</p>
--	---

Valet Mode: If your remote start is not working, you may be in Valet Mode. Your parking lights will also not flash. Your doors will still lock and unlock. To exit Valet Mode, turn the vehicle's ignition On and then top this button 5 times, waiting a second between each top. Your vehicle will flash the parking lights twice and exit Valet Mode. You can also exit Valet Mode by turning the ignition On and then topping the foot broke I O times or reprogramming your remote(s).

Contents

- [1 ALARM LED CODES](#)
- [2 START ERROR CODES](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

ALARM LED CODES

If you have an alarm and optional LED(s) installed, it will flash once a second if armed. If your alarm is triggered then the LED(s) will flash more than once until it is disarmed. See the table below for what each LED code represents.

ALARM TRIGGER EVENT	LED FLASHES
Door, Hood, Trunk, or Ignition On triggered	2, Pause, Then Repeat
Full triggered shock sensor	3, Pause, Then Repeat
Optional sensor 1 triggered	4, Pause, Then Repeat
Panic Mode	5, Pause, Then Repeat

To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your system has exited remote programming mode and you must retry.

Register online at www.compustar.com within 10 days of purchase to activate your new remote's warranty.

START ERROR CODES

PARKING LIGHT FLASHES	REMOTE START ERROR
3 then 1	1: Motor running
3 then 2	2: Key in ignition on position
3 then 3	3: Door open (manual transmission only)
3 then 4	4: Trunk open
3 then 5	5: Foot brake on
3 then 6	6: Hood open
3 then 7	7: Reservation off (manual transmission only)
3 then 8	8: lock or voltage sensing failure
3 then 9	9: FT.DAS sensor shutdown
3 then 10	10: System is in Vole! Mode

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate this device.


IC

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

8102REUCL000100
FT-1 B Guide REVI

Documents / Resources

	<p>FIRSTTECH REL300-1WFX Keyless Entry System [pdf] User Guide REL300-1WFX, REL3001WFX, VA5REL300-1WFX, VA5REL3001WFX, REL300-1WFX Keyless Entry System, Keyless Entry System</p>
---	--