

FirstMate BLM1v1m-Man Manual Control User Guide

[Home](#) » [Firstmate](#) » FirstMate BLM1v1m-Man Manual Control User Guide 

Contents

- [1 FirstMate BLM1v1m-Man Manual Control](#)
- [2 Instructions](#)
 - [2.1 Raising The Lift](#)
 - [2.2 Lowering The Lift](#)
- [3 Additional Notes](#)
- [4 TroubleShooting](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Firstmate®

FirstMate BLM1v1m-Man Manual Control



Instructions

The lift hoses running from the lift tanks should be hooked up to the elbow fittings as shown in Diagram 1. Exhaust hoses can be added to the straight fittings to direct water away from the boat.

Raising The Lift

To raise your lift simply turn the handles to the Up position as shown in Diagram 2 and the motor will automatically turn on.

CAUTION

****If the motor shuts off during operation turn the handles back to the hold position to keep water from backing up into the motor.****

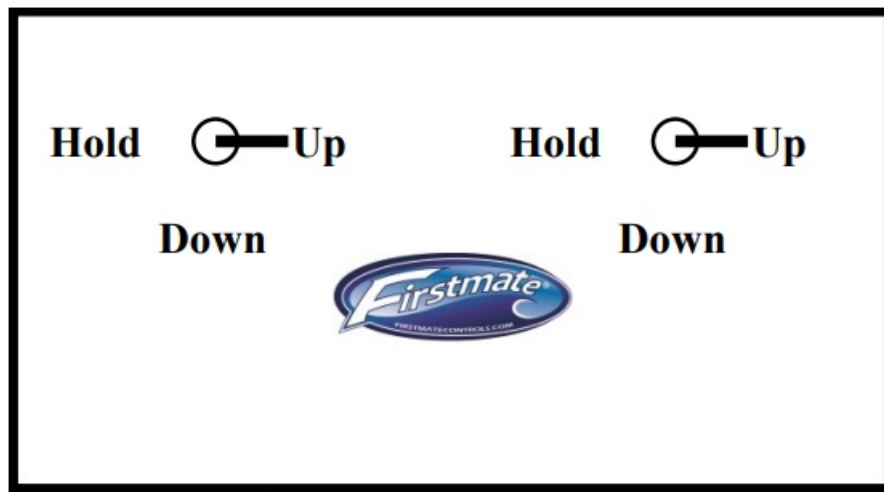


Diagram 2

Lowering The Lift

To lower your lift simply turn the handles to the Down Position as shown in Diagram 3. You will hear air coming out of the back of the unit.

If you don't hear the air and the lift won't go down see the Troubleshooting section.

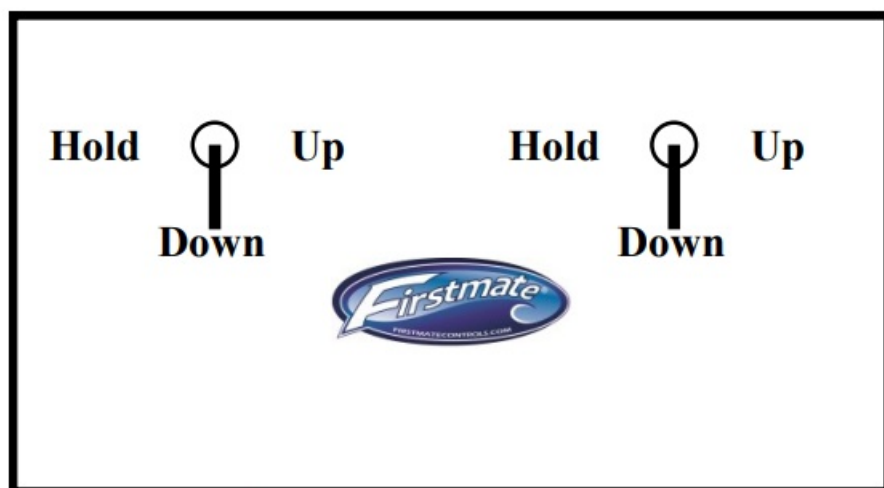



Diagram 3

Additional Notes

<u>Dos</u>	<u>Don'ts</u>
Do Test the line cord GFCI regularly	Don't operate the lift without a functioning GFCI
Do always tie the watercraft to the dock when left unattended	Don't leave an unattended watercraft unsecured
	Don't remove the controls cover case.
	Never use an extension cord to power control unit

Troubleshooting


Control motor lost power during operation

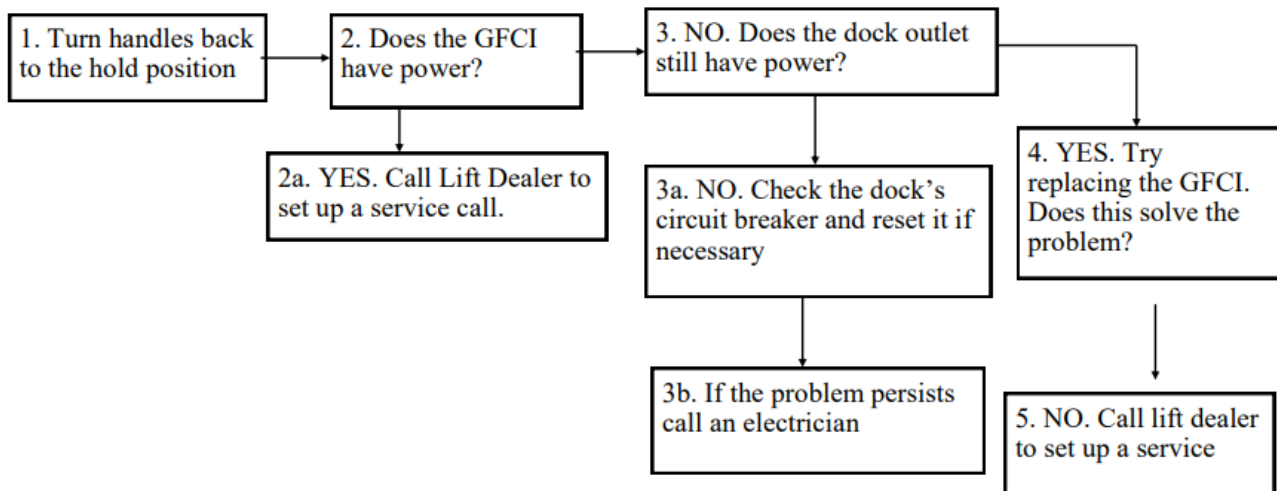

Control motor has no power


Same as “Control motor lost power during operation” except start at step 2

Lift will not go down

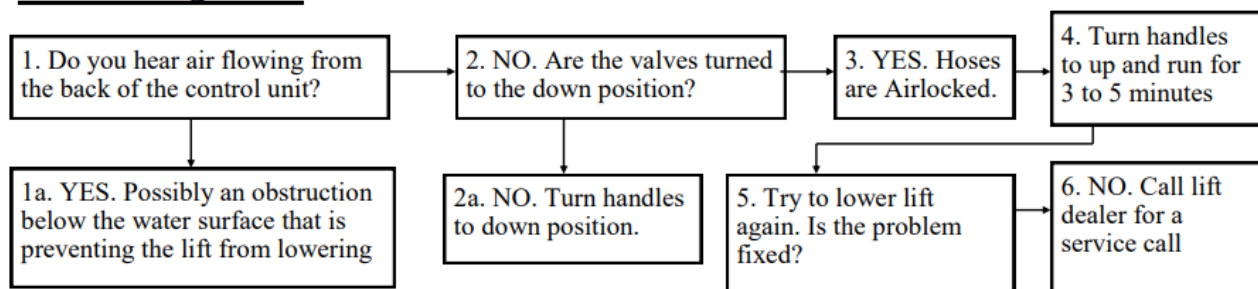

Firstmate, Inc | 410 Century Business Drive, Labadie, MO 63055
866-570-9707 | firstmatecontrols.com

Documents / Resources

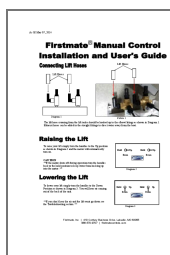

[FirstMate BLM1v1m-Man Manual Control](#) [pdf] User Guide
BLM1v1m-Man, Manual Control, Control, BLM1v1m-Man

References

- [Boat Lift Remote Control | Firstmate Controls Remote Boat Lift Control](#)