

FISHER and PAYKEL BGRV3-3048H Range Backguard for Combustible Situation User Guide

Home » FISHER and PAYKEL » FISHER and PAYKEL BGRV3-3048H Range Backguard for Combustible Situation User Guide ™

Contents

- 1 FISHER and PAYKEL BGRV3-3048H Range Backguard for Combustible Situation
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 DIMENSIONS**
- 5 Documents / Resources
- **6 Related Posts**

FISHER & PAYKEL

FISHER and PAYKEL BGRV3-3048H Range Backguard for Combustible Situation



Product Information

• Model: BGRV3-3048H

• Product Type: 48 Range Backguard

• Intended Use: For installation where a non-combustible surface is required

• Features: Stainless steel backguard with utensil rail and 2 plate racks

• Compatibility: Compatible with 48 V3 Professional Dual Fuel, Induction & Gas Ranges

• Dimensions:

Height: 26 1/2 inchesWidth: 47 7/8 inchesDepth: 1 5/16 inches

• SKU: 81960

The product dimensions and specifications mentioned above are accurate at the time of publication. However, please note that Fisher & Paykel may make changes to the dimensions and specifications without prior notice as part of their continuous improvement policy. To ensure you have the correct information for the currently available model, please contact Fisher & Paykel's Customer Care Centre.

Product Usage Instructions

The BGRV3-3048H Range Backguard is designed to be used with 48 V3 Professional Dual Fuel, Induction & Gas Ranges. Follow the steps below for proper installation:

- 1. Ensure that the installation area has a non-combustible surface.
- 2. Carefully unpack the backguard and remove any protective packaging.
- 3. Position the backguard against the wall behind the range.
- 4. Using appropriate screws and tools, securely fasten the backguard to the wall. Make sure it is level and properly aligned.
- 5. If included, attach the utensil rail and plate racks to the designated slots on the backyard.
- 6. Double-check all connections and ensure everything is tightened properly.
- 7. Refer to the range's user manual for further instructions on connecting the range to the backyard.
- 8. Once the installation is complete, clean the backyard using mild detergent and a soft cloth. Avoid using abrasive cleaners that may damage the stainless steel surface.

For any questions or concerns regarding the installation or usage of the BGRV3-3048H Range Backguard, contact Fisher & Paykel's Customer Support at T 1.888.936.7872 or visit their website at www.fisherpaykel.com.

Stainless steel backguard with utensil rail and 2 plate racks for use with freestanding ranges. This backguard is suitable for installation where a non-combustible surface is required. Compatible with 48" V3 Professional Dual Fuel, Induction & Gas Ranges.

DIMENSIONS

- Height 26 1/2
- Width 47 7/8
- Depth 1 5/16

SKU 81960

The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. ? Fisher & Paykel Appliances Ltd 2020.

A PEACE OF MIND SALE

- 24 Hours 7 Days a Week Customer Support
- T 1.888.936.7872 W www.fisherpaykel.com.

Documents / Resources



FISHER and PAYKEL BGRV3-3048H Range Backguard for Combustible Situation [pdf] Us er Guide

BGRV3-3048H, BGRV3-3048H Range Backguard for Combustible Situation, Range Backguard for Combustible Situation, Backguard for Combustible Situation, Combustible Situation

Manuals+,