

FISHER-PRICE BFK69 LAUGH & LEARN SMART PHONE



# Fisher-Price BFK69 Laugh & Learn Smart Phone Instruction Manual

[Home](#) » [fisher-price](#) » Fisher-Price BFK69 Laugh & Learn Smart Phone Instruction Manual 

## Contents



 
- [1 Fisher-Price BFK69 Laugh & Learn Smart Phone](#)
- [2 INSTRUCTIONS](#)
- [3 Battery Safety Information](#)
- [4 FCC STATEMENT](#)
- [5 CONSUMER ASSISTANCE](#)
- [6 FREQUENTLY ASKED QUESTIONS](#)
- [7 References](#)
- [8 Related Posts](#)



**Fisher-Price BFK69 Laugh & Learn Smart Phone**




## INSTRUCTIONS

-  Keep these instructions for future reference as they contain important information.
-  Battery installation is required. Only adults should install batteries. Required tool: Phillips screwdriver (not included).
-  Requires two AAA batteries (included) for operation. The batteries included are for demonstration purposes only. For longer life, use alkaline batteries.
- Press a button to hear numbers, fun sounds, phrases, and songs.



- Locate the battery compartment door. Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the batteries and properly dispose.

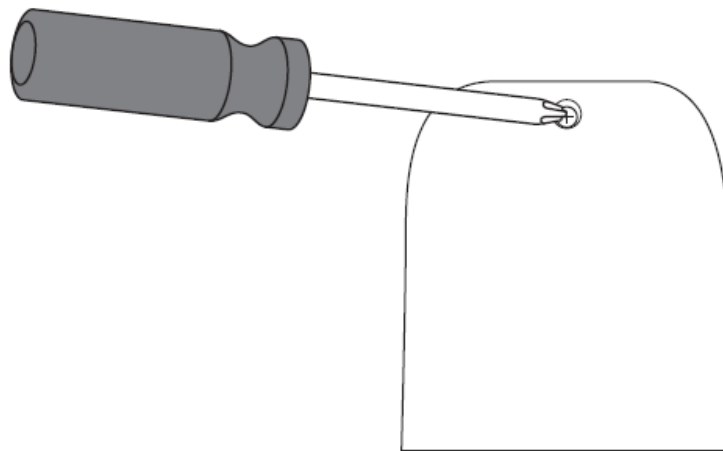

- Insert two, new AAA (LR03) alkaline batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- When sounds/lights from this toy become faint or stop, it's time for an adult to change the batteries.
- Wipe the toy with a clean, damp cloth. Do not immerse. This toy has no consumer-serviceable parts. Do not take it apart.
- If this toy begins to operate erratically, you may need to reset the electronics. Remove the batteries and reinstall them.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of nonuse. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.

- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



■ Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

CAN ICES-3 (B)/NMB-3 (B)

**Operation is subject to the following two conditions:**

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

**FCC STATEMENT**

**(UNITED STATES ONLY)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**CONSUMER ASSISTANCE**

- 1-[800-432-5437](tel:800-432-5437) (US & Canada)
- 1300 135 312 (Australia)

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

- **Hearing-impaired consumers:** 1-[800-382-7470](tel:800-382-7470).
- **Outside the United States:**
  - **Canada:** Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).
  - **Great Britain:** Mattel UK Ltd, Vanwall Business Park,
  - **Maidenhead SL6 4UB. Helpline:** 01628 500303. [www.service.mattel.com/uk](http://www.service.mattel.com/uk) Mattel Europa B.V., Godel 1, 1186 MJ Amstelveen, Nederland.
  - **Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
  - **New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.
  - **SOUTH AFRICA:** Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

[fisher-price.com](http://fisher-price.com)

## FREQUENTLY ASKED QUESTIONS

What are the product dimensions of the Fisher-Price BFK69 Laugh & Learn Smart Phone?

The Fisher-Price BFK69 Laugh & Learn Smart Phone measures 1.02 x 2.76 x 4.96 inches.

What is the weight of the Fisher-Price BFK69 Laugh & Learn Smart Phone?

The Fisher-Price BFK69 Laugh & Learn Smart Phone weighs 5.6 ounces.

What age range is recommended for the Fisher-Price BFK69 Laugh & Learn Smart Phone?

The Fisher-Price BFK69 Laugh & Learn Smart Phone is recommended for children aged 6 months to 3 years.

What type of batteries does the Fisher-Price BFK69 Laugh & Learn Smart Phone require?

The Fisher-Price BFK69 Laugh & Learn Smart Phone requires 2 AAA batteries.

What should I do if the Fisher-Price BFK69 Laugh & Learn Smart Phone does not turn on?

Ensure the 2 AAA batteries are properly installed and not depleted. If the Fisher-Price BFK69 Laugh & Learn Smart Phone still does not turn on, try replacing the batteries with new ones.

How can I fix the issue if the lights on the Fisher-Price BFK69 Laugh & Learn Smart Phone are not working?

Verify that the batteries are correctly installed and have sufficient charge. If the lights still do not work, try replacing the batteries with new ones.

What steps should I take if the sound on the Fisher-Price BFK69 Laugh & Learn Smart Phone is too low or distorted?

Check the battery level and replace the batteries if necessary. Low battery power can cause sound issues in the Fisher-Price BFK69 Laugh & Learn Smart Phone.

How can I reset the Fisher-Price BFK69 Laugh & Learn Smart Phone if it freezes or becomes unresponsive?

Remove the 2 AAA batteries for a few minutes, then reinsert them. This can reset the Fisher-Price BFK69 Laugh & Learn Smart Phone and resolve any temporary issues.

What should I do if the buttons on the Fisher-Price BFK69 Laugh & Learn Smart Phone are not responding?

Ensure the buttons are clean and free from debris. Gently clean the buttons with a dry cloth and check that the batteries are not depleted.

Why is my Fisher-Price BFK69 Laugh & Learn Smart Phone intermittently turning off?

Check the battery compartment to ensure the batteries are securely in place. Loose batteries can cause the Fisher-Price BFK69 Laugh & Learn Smart Phone to turn off unexpectedly. Replace the batteries if the issue continues.

What can I do if the Fisher-Price BFK69 Laugh & Learn Smart Phone is not playing sounds?

Make sure the volume is turned up. If the volume is set correctly and the sounds are still not playing, check and replace the batteries if needed.

How do I address the issue if the songs on the Fisher-Price BFK69 Laugh & Learn Smart Phone are not playing?

Ensure the volume is turned up. If the volume is set correctly and the songs are still not playing, check and replace the batteries if necessary.

What should I do if the Fisher-Price BFK69 Laugh & Learn Smart Phone does not respond to touch inputs?

Ensure the touch-sensitive areas are clean and free from debris. If the problem persists, try resetting the device by removing and reinserting the batteries.

How can I resolve issues with the Fisher-Price BFK69 Laugh & Learn Smart Phone not switching between modes?

Turn off the Fisher-Price BFK69 Laugh & Learn Smart Phone, remove the batteries, and wait a few minutes before reinserting them. This can help reset the mode settings and resolve the issue.

**DOWNLOAD THE PDF LINK:** [Fisher-Price BFK69 Laugh & Learn Smart Phone Instruction Manual](#)

**REFERENCE:** [Fisher-Price BFK69 Laugh & Learn Smart Phone Instruction Manual -Device.Report-Device.Report](#)

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.