

fisher-price

FN120
CLICK
&
LEARN
LAPTOP



Fisher-Price FN120 Click & Learn Laptop User Manual

[Home](#) » [fisher-price](#) » Fisher-Price FN120 Click & Learn Laptop User Manual 

Contents

- 1 Fisher-Price FN120 Click & Learn Laptop
- 2 INTRODUCTION
- 3 SPECIFICATIONS
- 4 WHAT'S IN THE BOX
- 5 PRODUCT OVERVIEW
- 6 FEATURES
- 7 SETUP GUIDE
- 8 CARE & MAINTENANCE
- 9 TROUBLESHOOTING
- 10 PROS & CONS
- 11 WARRANTY
- 12 FREQUENTLY ASKED QUESTIONS
- 13 VIDEO – PRODUCT OVERVIEW
- 14 References
- 15 Related Posts



Fisher-Price FN120 Click & Learn Laptop



INTRODUCTION

Start your child off on the path of learning with the “Fisher-Price FN120 Click & Learn Laptop.” This fun interactive toy is a great deal at \$21.16 and is great for kids ages 6 to 36 months. The Click & Learn Laptop was made by Fisher-Price, a well-known brand of teaching toys for kids. It’s a fun way to learn letters, numbers, and basic computer skills early on. This tiny 16-ounce laptop is light and small, so it’s easy to take with you. Your child will be entertained for hours by the bright buttons, fun sounds, and easy-to-use interface. It helps with brain growth and motor skills. This toy, which was made by Fisher-Price as part of their plan to combine learning and play, runs on 3 AAA batteries and is sure to be a hit with both kids and adults.

SPECIFICATIONS

Brand Name	Fisher-Price
Age Range Description	6 – 36 months
Price	\$21.16
Model Number	FN120
Product Name	Click & Learn Laptop
Supported Battery Types	Alkaline
Number of Batteries	3 AAA batteries required
Item Dimensions L x W	1.57 L x 7.87 W Inches
Item Weight	16 ounces

WHAT'S IN THE BOX

- Click & Learn Laptop
- battery
- Manual



PRODUCT OVERVIEW



FEATURES

- **Interactive Learning:** The Click & Learn Laptop is a toy computer that babies and children can use to play with their hands.
- **Educational Content:** Packed full of tasks that teach the alphabet, colors, shapes, and numbers, setting the stage for early learning.
- **Variety of Activities:** It has a music slider, ABC and 123 buttons, a shapes and colors flipper, a roller bar, an emoji slider, and a quote button, among other things.
- **More Than Forty Songs and Sounds:** It has more than forty fun songs, sounds, and words to keep kids busy while they learn.
- **"Chat" Feature:** Kids can act like they're talking to their friend Puppy, who appears in the chat window.
- **Colorful Lights:** The light-up parts keep kids interested by dancing to the music and giving them something to look at.
- **Fine Motor Skills Development:** As kids play with the different buttons and games, it helps them improve their dexterity, fine motor skills, and hand-eye coordination.
- **Pretend Play:** Made for role play, this feature lets kids pretend to use a computer, which boosts their creativity and imagination.
- **Small Size:** At 1.57 inches by 7.87 inches, it's small enough for little hands to hold and move.
- **Age Appropriateness:** It's good for babies and children from 6 to 36 months old because it fits their

developmental needs.

- **Construction That Lasts:** Made to survive rough handling by young children, so it will last for a long time.
- **Battery-Powered:** Three AAA alkaline batteries are needed, which are simple to swap out when they run out.
- **Portable Design:** It's only 16 ounces heavy and easy to carry, so it's great for traveling and playing while you're on the go.
- **Encourages Exploration:** The laptop is made to spark kids' interest in learning by letting them play around with its different features.
- **Parent-Friendly Features:** It's easy for parents to play with their kids during playtime, which makes bonds stronger through shared activities.

SETUP GUIDE

- **Unboxing:** Carefully take the Click & Learn Laptop out of its box, making sure that all of its parts are still together.
- **Installing Batteries:** Open the battery box and put in three AAA batteries, making sure they are in the right way around (+/-).
- **Power On/Off:** Find the power button and flip it to turn the toy on and off as needed. When not in use, this will save the battery life.
- **Test Sound Functionality:** Press each button to make sure that the songs, sounds, and words work right.
- **Adjusting the Noise:** If the laptop has a volume control, make sure it is set to a level that is good for both kids and adults before they use it.
- **Interactive Exploration:** To keep kids interested, tell them to press buttons and slide parts while they play with the toy.
- **Safety Check:** Before letting kids play with the laptop, make sure all of its parts are in place and that it doesn't have any sharp edges.
- **Age Appropriateness:** Make sure the toy is age-appropriate for kids between 6 and 36 months, based on their growth stages.
- **Set Up Play Area:** Set up your play area so that it is clean and safe so that there aren't too many distractions or risks.
- **Supervised Use:** To make sure the laptop is handled safely, always watch young children while they use it.
- **Group Activities:** Play with the toy with other kids in a group to get them to talk to each other and share.
- **Encourage Exploration:** Encourage exploration by letting kids play around with the different sounds and features without any limits.
- **Gradually Introduce Features:** To help kids learn how to use the toy well, introduce each feature one at a time.
- **Teach About Care:** To teach kids responsibility from a young age, teach them how to take care of their toys.
- **Routine Functionality Check:** Make sure that all features are working properly on a regular basis.



CARE & MAINTENANCE

- **Clean It Regularly:** Use a damp cloth to wipe the laptop clean of dust and other marks. Do not let the toy get too wet.
- **Avoid Harsh Chemicals:** When you clean your toy, don't use bleach or other harsh chemicals. They can damage the surface and materials of the toy.
- **Upkeep for the Batteries:** Check the batteries often and change them when the sounds get weak or stop working.
- **Check for Damage:** Check the toy every so often for damage or broken parts. Fix any small problems right away.
- **How to Store It:** To keep the laptop in good shape, keep it in a cool, dry place when not in use.
- **Limit Water Exposure:** To protect the sensitive parts, don't let the toy come in contact with liquids.
- **Teach Children to Be Gentle:** Tell your kids to be gentle when they use the laptop so they don't damage the buttons or other parts.
- **Use a Soft Brush:** To get rid of tough dirt, gently scrub the surface with a soft brush without hurting it.
- **Stay Away from High Temperatures:** To keep the toy from twisting or breaking, don't leave it in hot places like a car.
- **Watch Young Children:** Always keep an eye on children when they're using the laptop to make sure they're playing safely and properly.
- **Fix Small Damage:** If any parts start to come free, use safe, non-toxic glue to fix them.
- **Rotate Use:** To keep the Click & Learn Laptop from getting worn out, play with it with other toys every so often.
- **Educate on Care:** To build a sense of duty in kids, teach them how to take care of their toys.
- **Take Care When Getting Rid of Batteries:** When you change batteries, make sure you properly get rid of the old ones and keep the new ones out of reach of children until you're ready to install them.

- **Check-Ups:** Make sure to check the engaging buttons often to make sure they work and aren't broken or stuck.

TROUBLESHOOTING

Issue	Troubleshooting Steps
No sound from the laptop	Ensure batteries are properly installed and check their power level.
Buttons are not responsive	Clean around the buttons to remove any stuck debris.
The laptop doesn't power on	Check the battery compartment for proper installation or replace batteries.
Sound is distorted	Replace old batteries with fresh ones for better audio quality.
Volume is too low	Check the battery strength; replace if necessary.
Buttons are too hard for a child	Show the child how to press the buttons gently but firmly.
Music cuts off unexpectedly	Ensure batteries are fully charged or replaced if needed.
No lights or sounds	Ensure the battery cover is securely fastened.
Device resets frequently	Replace weak batteries to ensure consistent power.
Buttons activate the wrong functions	Reset the laptop by turning it off and on again.
The laptop stops mid-song	Check battery power and replace batteries if necessary.
Battery compartment difficult to open	Use a screwdriver to gently loosen the screws if necessary.
Buttons stick when pressed	Clean the edges of the buttons with a damp cloth.
Sounds activate without pressing	Ensure no objects are resting on the buttons when not in use.
The screen is difficult to view	The screen is static, designed only as a visual aid, and not interactive.

PROS & CONS

Pros:

1. Affordable and packed with educational content.
2. Lightweight, making it easy for toddlers to carry around.
3. Helps develop early learning skills, such as letters and numbers.
4. Durable and sturdy, built to withstand rough handling.
5. Bright colors and interactive sounds engage children.

Cons:

1. Requires 3 AAA batteries, which need regular replacement.
2. The audio volume is fixed and may not suit all environments.
3. Not suitable for children above 3 years, limiting long-term use.
4. Limited content might become repetitive over time.
5. The screen is static, offering no actual display interactivity.

WARRANTY

The “Fisher-Price FN120 Click & Learn Laptop” comes with a **one-year limited warranty**, covering any defects in materials or workmanship. This warranty offers peace of mind to parents, ensuring that any issues related to product durability or functionality can be resolved by the manufacture

FREQUENTLY ASKED QUESTIONS

What is the Fisher-Price FN120 Click & Learn Laptop?

The Fisher-Price FN120 Click & Learn Laptop is an interactive toy designed for young children, providing educational content and fun activities to enhance early learning.

What is the price of the Fisher-Price FN120 Click & Learn Laptop?

The Fisher-Price FN120 Click & Learn Laptop is priced at \$21.16, offering a valuable educational resource for parents.

What is the recommended age range for the Fisher-Price FN120 Click & Learn Laptop?

The recommended age range for the Fisher-Price FN120 is 6 to 36 months, making it suitable for infants and toddlers.

What model number is associated with the Fisher-Price Click & Learn Laptop?

The model number for this product is FN120, which helps identify it within the Fisher-Price lineup.

What type of batteries does the Fisher-Price FN120 Click & Learn Laptop require?

The Fisher-Price FN120 requires 3 AAA alkaline batteries to operate its interactive features.

What are the dimensions of the Fisher-Price FN120 Click & Learn Laptop?

The dimensions of the Fisher-Price FN120 are 1.57 inches in depth and 7.87 inches in width, making it a compact and portable toy.

How much does the Fisher-Price FN120 Click & Learn Laptop weigh?

The Fisher-Price FN120 weighs 16 ounces, providing a lightweight option for young children to handle.

What educational objectives does the Fisher-Price FN120 Click & Learn Laptop focus on?

The educational objectives include enhancing cognitive skills, language development, and early literacy through interactive play.

What interactive features does the Fisher-Price FN120 Click & Learn Laptop have?

The Fisher-Price FN120 features buttons that activate sounds and songs, encouraging children to explore and engage with the toy.

Can the Fisher-Price FN120 Click & Learn Laptop help with language development?

Fisher-Price FN120 supports language development by introducing children to letters, words, and sounds through fun activities.

What materials are used in the Fisher-Price FN120 Click & Learn Laptop?

The laptop is made from durable plastic, ensuring safety and longevity for young users.

What types of sounds can children expect from the Fisher-Price FN120 Click & Learn Laptop?

Children can expect various sounds, including melodies, phrases, and learning prompts that enhance their play experience.

Why isn't my Fisher-Price FN120 Click & Learn Laptop turning on?

Ensure the batteries in your Fisher-Price FN120 Click & Learn Laptop are properly installed and have sufficient charge. If it still doesn't turn on, try replacing the batteries with fresh ones.

 
What should I do if the buttons on my Fisher-Price FN120 Click & Learn Laptop are unresponsive?

If the buttons on your Fisher-Price FN120 Click & Learn Laptop aren't responding, check for weak or improperly installed batteries. Clean around the buttons to remove any dirt or debris that may be obstructing them.

Why does my Fisher-Price FN120 Click & Learn Laptop stop making sounds during play?

If your Fisher-Price FN120 Click & Learn Laptop stops making sounds, it's likely due to low battery power. Replace the batteries to ensure continuous sound during play.

VIDEO – PRODUCT OVERVIEW

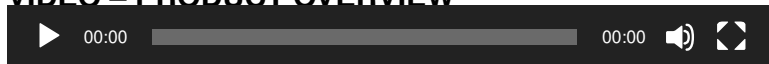

<https://manuals.plus/wp-content/uploads/2024/10/Fisher-Price-FN120-Click-Learn-Laptop-User-Manual.mp4>

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.