

Fismool
Fismool FS302 Portable
Bluetooth Speaker



Fismool FS302 Portable Bluetooth Speaker User Manual

[Home](#) » [FiSMOOL](#) » Fismool FS302 Portable Bluetooth Speaker User Manual 

Contents

- [1 Fismool FS302 Portable Bluetooth Speaker](#)
- [2 Product Introduction](#)
- [3 Product Specifications](#)
- [4 Product List](#)
- [5 Product Description](#)
- [6 Product Operation](#)
- [7 Salt Chunks Box Assembly/Disassembly Instructions](#)
- [8 Salt Chunks Usage Instructions](#)
- [9 FCC Warning](#)
- [10 Warranty conditions](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

Fismool

Fismool FS302 Portable Bluetooth Speaker



Product Introduction

- Thank you for choosing the FS302 Bluetooth Speaker (Abbreviated as 302),
- This user manual will help you operate it, please read carefully before use.
- The 302 is a portable Bluetooth speaker that connects to Bluetooth devices like phones, pads and laptops for music playback and hands-free calls.
- Paired devices must support Bluetooth A2DP.

 
Product Specifications






- Model: FS302
- Input Current: DC5.0V/2.0A
- Material: ABS+PC
- Speaker power: 5W
- Battery Capacity: 1500mAh
- Product Weight: 570g
- Product Size: 95*95*120mm (Includes salt chunks box)

Product List

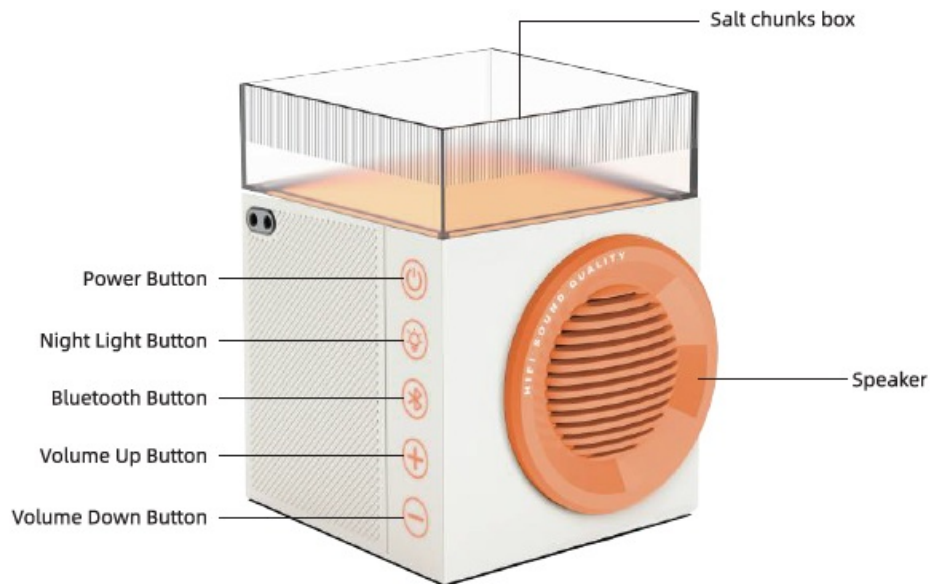Bluetooth Speaker *1 , Salt Chunks Box* 1 , Salt Chunks *1
User Manual *1, Lanyard *1, USB/Type-C Cable *1

Product Description




 Power Button	Power On: Press to turn on; Warm light will remain on. Power Off: Press to turn off; All functions will be turned off.
 Night Light Button	Press to turn on the warm light, press again to dim it, and press once more to turn it off. Press and hold to turn on the white light, press again to dim it, and press once more to turn it off.
 Bluetooth Button	In power-on mode, press the Bluetooth button, the speaker will announce "Bluetooth is turned on" and enter pairing mode. Open your phone's Bluetooth settings to find and connect to "FS302." Once connected, the speaker will announce "Bluetooth Paired," allowing you to play music. When Bluetooth is turned off, it will announce "Bluetooth is disconnected."
 Volume Up Button	Press to increase the volume.
 Volume Down Button	Press to decrease the volume.

Product Operation

How to Connect Bluetooth and Use Music Playback

 1. Turn on Bluetooth on your phone and search for Bluetooth devices.
2. In the list of discovered devices, click on "FS302." When you hear a successful pairing.
3. Once connected, you can choose your favorite music for playback. "Bluetooth Paired," it indicates

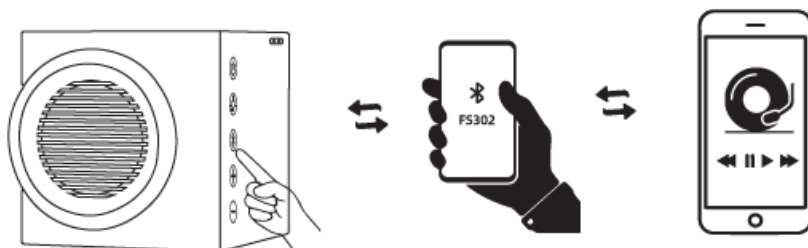


Salt Chunks Box Assembly/Disassembly Instructions

- Installation: Take the salt chunks box out of the packaging and align it with the top of the speaker, then place it


down.

 - Disassembly: Just lift the salt chunks box off the top of the speaker.

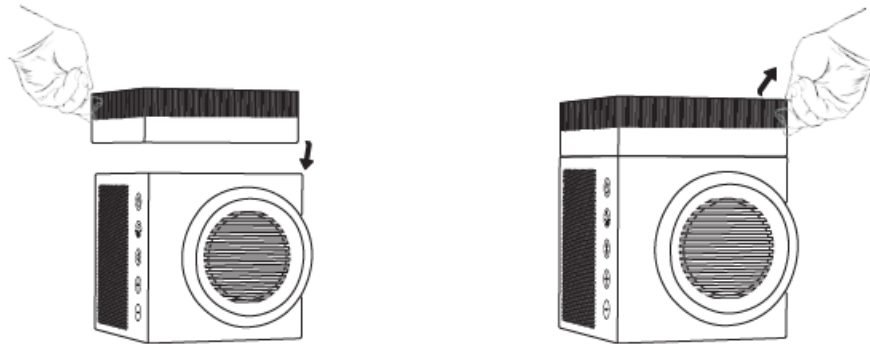

Salt Chunks Usage Instructions

 
1. Take the salt chunks out of the white box and place them one by one into the box.
2. Add a few drops of concentrated essential oil to the salt chunks. (Rinse the salt chunks once a month and let them dry before reusing.)

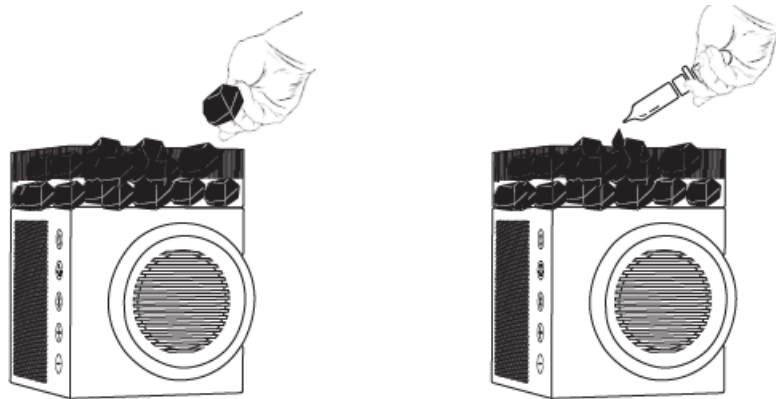


Lanyard Installation Instructions

Pass the lanyard through the two holes on the side.

 Thread the longer end through the loop of the shorter end, then gently pull to tighten the lanyard.

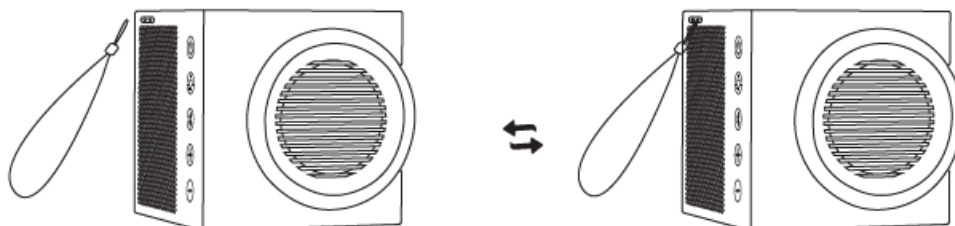

Power Indicator/Charging Instructions

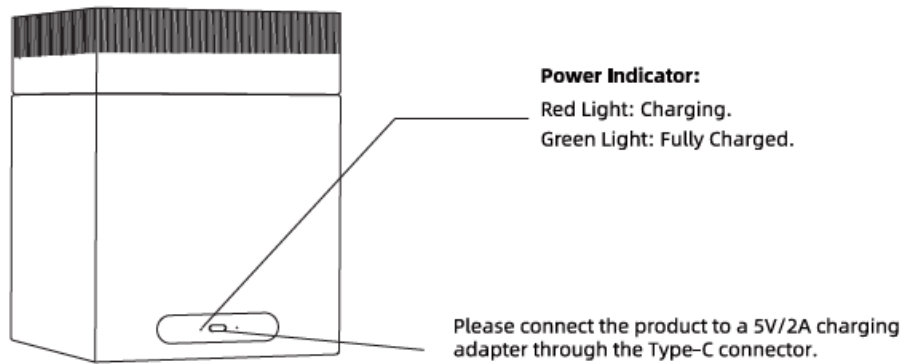 

Safety Precautions (Please read carefully and follow strictly)

1. Please don't subject the unit to severe impacts.
2. Please avoid contact with chemicals such as benzene or solvents.
3. Please keep away from strong magnetic fields and electric fields.
4. Please avoid direct sunlight or heat sources.
5. Please don't disassemble, repair, or modify the device yourself.
6. Please avoid listening at high volumes to prevent hearing damage.
7. Please dispose of packaging, batteries, and old electronic products responsibly and separately.
8. When the battery is low, the system will shut down automatically.
9. Please charge it promptly. If not used for an extended period, charge it at least once a month to protect the battery and extend its lifespan.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

- Please keep this card properly. The company will take this card as the warranty certificate.
- Thank you for purchasing this product. The warranty period of this product is 12 months from the date of purchase.
- Please keep it properly and fill in detailed relevant information for warranty use.
- Product model:
- Dealer name:
- User name:
- Address:
- Date of purchase:
- Contact number.

Explain the reason:

- Return goods
- Exchange goods
- Guarantee

Warranty conditions

When warranty service is required, please show this card and fill in the relevant contents in detail.
The company provides users with a 12-month warranty period from the date of purchase

Warranty scope

The quality problem under normal use is not the damage caused by external damage, the company assumes the responsibility for repair. In principle, the users of the product during the warranty period do not need to pay fees, but due to human damage, the cost of testing or spare parts shall be charged as appropriate, Products beyond the warranty period will be charged.


(Fabric is not covered under warranty)

Warranty is not available under the following circumstances

Man-made damage: for example, due to damage caused improper use and incorrect use, abnormal wear and tear of appearance, falling damage, circuit destruction, extrusion deformation, entry of foreign matters, moisture, alteration or tearing of sealing labels on products, and any other visible man-made damage, and other conditions, such as the user's own reasons (unauthorized disassembly and modification, unafraid use, improper operation, water ingress, etc.)

Damage caused by force majeure, such as earthquake, flood, fire, typhoon or war.

Documents / Resources

	Fismool FS302 Portable Bluetooth Speaker [pdf] User Manual FS3000, 2BB2B-FS3000, 2BB2BFS3000, FS302 Portable Bluetooth Speaker, FS302, Portable Bluetooth Speaker, Bluetooth Speaker, Speaker
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.